

Heated Seat Module — Rear




Removal

NOTE: For parts identification and location, refer to *Seat — Exploded View, Rear, Crew Cab* in this section.

1. **NOTE:** The seat backrest latch is only accessible when the seat cushion is raised.

Release and lower the 60 percent seat backrest.

- From behind the backrest, pull up on the latch release and pull the backrest forward.
- Release the cushion latch and lower the cushion and backrest.

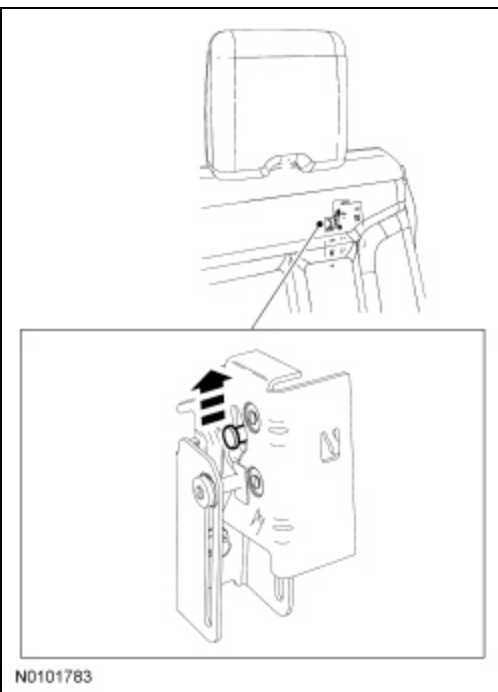

2. Disconnect the 2 electrical connectors.
3. Remove the screw and un-hook the heated seat module.

Installation

1. Install the heated seat module and screw.
 - Tighten to 14 Nm (124 lb-in).
2. Connect the 2 electrical connectors.
3. Raise and latch the backrest.
 - Slide the striker pin up/down and align to the backrest latch.
 - Make sure the backrest is fully latched.
4. Carry out the auto-configuration sequence to program the heated seat module for use with a dual momentary switch.
 - Start the vehicle and push the low button on either heated seat switch.
 - Operate the heated seats, monitor the indicators and verify the system is operating correctly in high and low.