


Heated Seat Switch — Rear



NOTE: RH shown, LH similar.

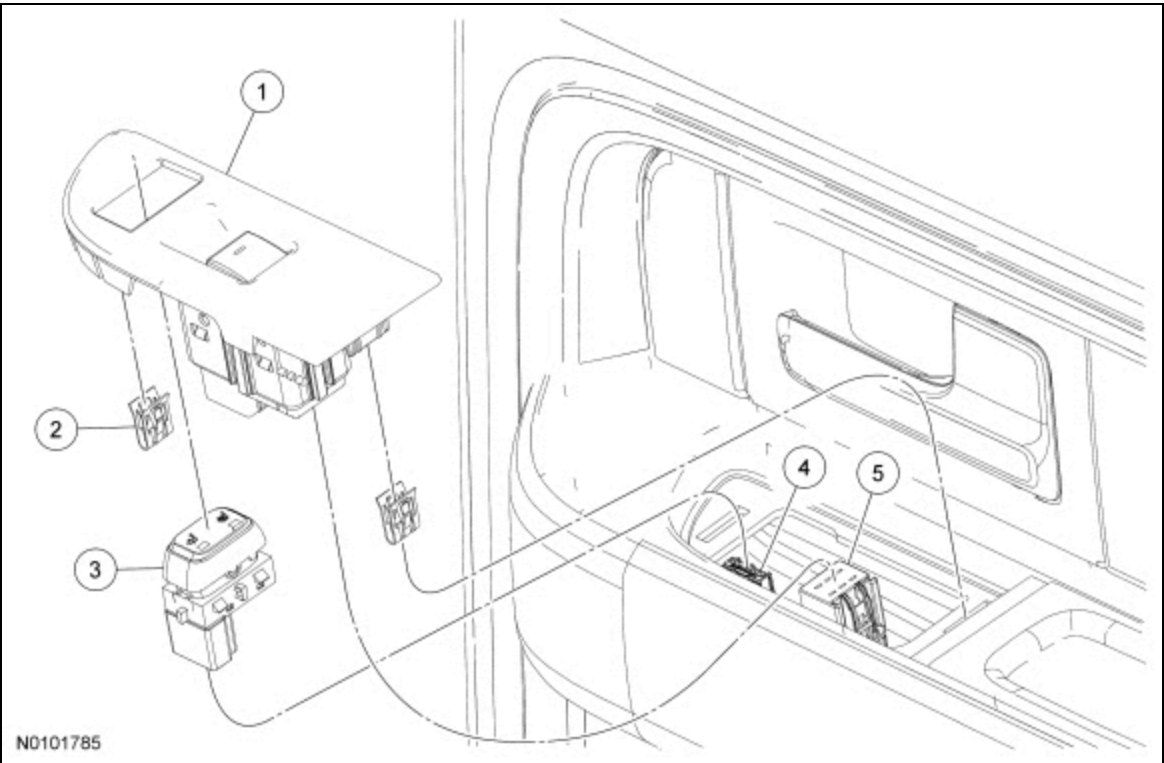

Item	Part Number	Description
1	1452814528 RH/ 14527 LH RH/ 14527 LH	Window control switch bezel
2	W705289W705289	Retainer (2 required)
3	14D69414D694 RH/ 14D695 LH RH/ 14D695 LH	Heated seat switch
4	—	Heated seat switch electrical connector (part of 14630 RH/ 14631 LH)
5	—	Window control switch electrical connector (part of 14630 RH/ 14631 LH)

Removal and Installation

1. Using a suitable trim tool, release the 2 retainers and window control switch bezel.
2. Disconnect the heated seat switch and window control switch electrical connectors.
3. Release the locking tabs and remove the heated seat switch.
4. To install, reverse the removal procedure.