


Lumbar Assembly — Manual




Removal and Installation

NOTE: For parts identification and location, refer to Seat — Exploded View, Front in this section.

1. Remove the seat. For additional information, refer to Seat — Front in this section.
2. For SuperCab, remove the manual recline handle, if equipped.
 - Insert an appropriate tool behind the cushion side shield, release the retainer and remove the handle.

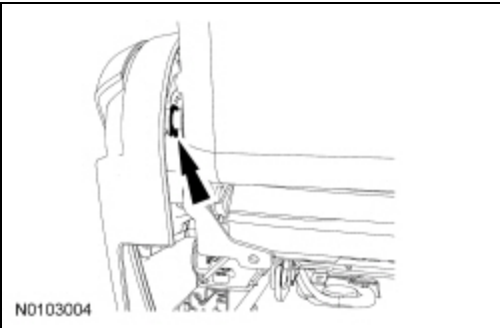

3. If equipped, remove the adjustable lumbar knob.
 - Adjust the lumbar until fully relaxed.
 - Release the retainer and remove the knob.
4. Remove the side shield insert.
 - Release the lower retainers and lift to release the upper retainers.
 - If equipped, disconnect the seat control switch electrical connector.
5. Remove the side shield.
 - Remove the front and rear side shield screws.
 - Pull the cushion side shield outward to release the retainers.
 - Reinstall all retainers back to the side shield.
6. Release the cushion cover outboard J-clip and access the lumbar adjuster.
7. Detach the cable from the lumbar adjuster, release the pin-type retainer and route out the cable from the cushion frame.
 - Note cable routing for correct installation.

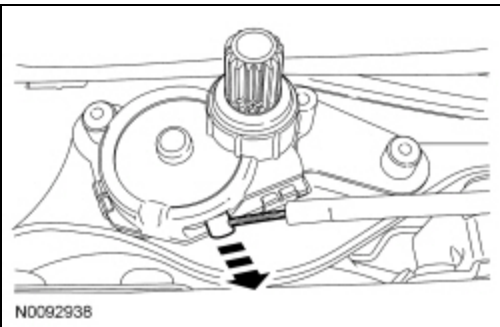

8. Remove and discard the 2 rivets from the lumbar adjuster.

9. Release the backrest cover J-clip and unzip the 2 zippers.
10. Remove the lumbar assembly.
 - Detach the cable from the backrest frame.
 - Note cable routing for correct installation.
 - Pinch the lumbar retainers together to release from the backrest frame.
 - For installation, make sure the arrow is pointed up.
11. To install, reverse the removal procedure.