

Seat Armrest — Rear, Crew Cab




Removal and Installation

NOTE: For parts identification and location, refer to *Seat — Exploded View, Rear, Crew Cab* in this section.

1. **NOTE:** The seat backrest latch is only accessible when the seat cushion is raised.


Release the backrest latch on the 40 percent seat and lower the backrest.

- From behind the backrest, pull up on the latch release and pull the backrest forward.
- Release the cushion latch and lower the cushion and backrest.

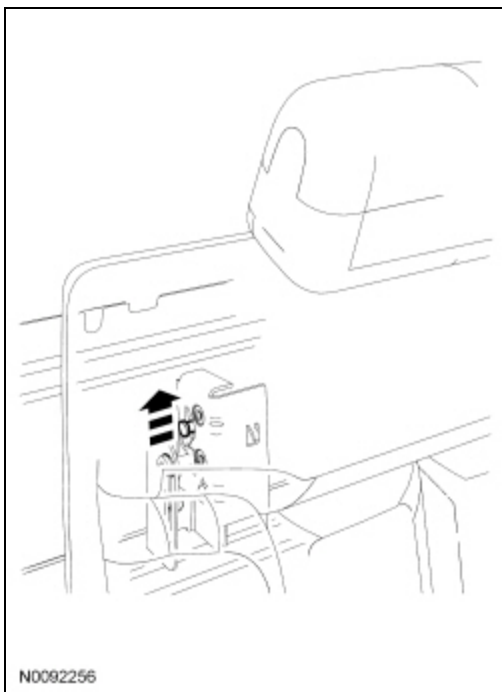

2. Remove armrest bolt through the access hole on the inboard edge of the 60 percent seat backrest.

- To install, tighten to 25 Nm (18 lb-ft).

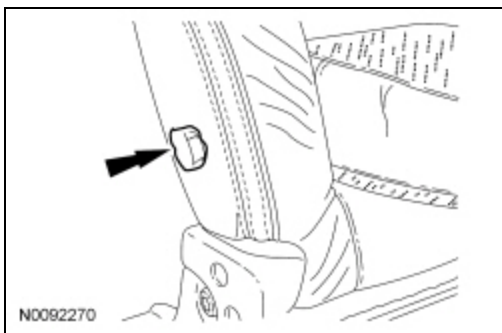

3. Push the armrest to the inboard side of the seat to disengage the pivot and remove the armrest.

4. To install, reverse the removal procedure.