


Seat Backrest Cover — Rear, SuperCab



Removal and Installation


NOTE: For parts identification and location, refer to *Seat — Exploded View, Rear, SuperCab* in this section.

1. Remove the rear seat backrest. For additional information, refer to *Seat — Rear, SuperCab* in this section.
2. Push the release buttons and remove the 3 head restraints.
3. Remove and discard the 6 head restraint guide sleeves. For additional information, refer to *Head Restraint Guide Sleeve* in this section.
 - To install, install 6 new head restraint guide sleeves.
4. Release all the backrest cover J-clips and retainer strips.

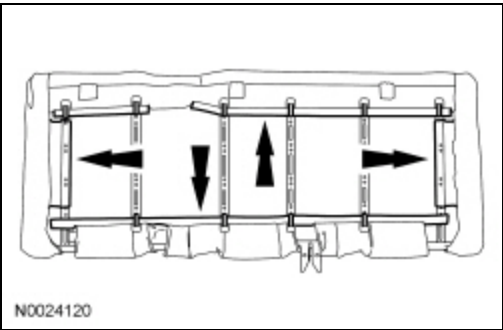


5. **NOTICE:** Use care when separating the backrest cover from the hook-and-loop strip, or the hook-and-loop strip can be torn from the foam pad.

Invert the backrest cover and separate the hook-and-loop strips.

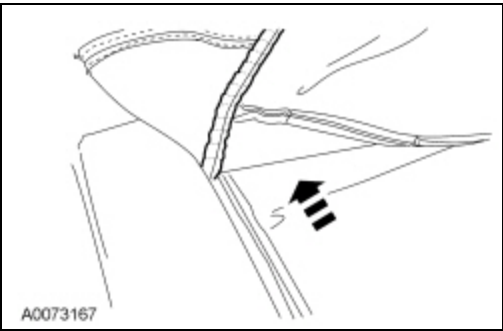

6. Remove the hog rings and backrest cover.
 - If required, remove the hog rings from the backrest frame and separate from the foam pad.

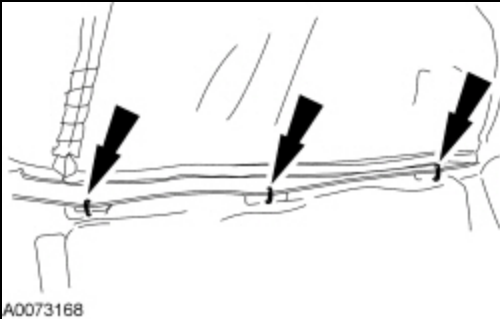

7. To install, reverse the removal procedure.