

Seat Backrest Latch — Rear, Crew Cab



Removal and Installation


NOTE: *RH shown, LH similar.*

NOTE: *For parts identification and location, refer to Seat — Exploded View, Rear, Crew Cab in this section.*

1. **NOTE:** *The seat backrest latch is only accessible when the seat cushion is raised.*

Release the backrest latch.

- From behind the backrest, pull up on the latch release and pull the backrest forward.
- Release the cushion latch and lower the cushion and backrest.

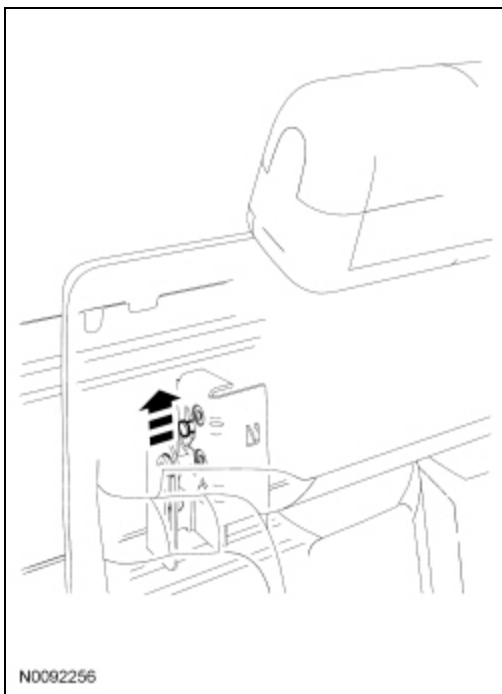

2. Remove the 2 bolts and backrest latch.
 - To install, tighten to 10 Nm (89 lb-in).
3. To install, reverse the removal procedure.