


Seat Latch — Rear, Crew Cab



Removal and Installation

NOTE: For parts identification and location, refer to *Seat — Exploded View, Rear, Crew Cab* in this section.

1. Remove the seat cushion cover. For additional information, refer to *Seat Cushion Cover — Rear, Crew Cab* in this section.
2. Remove the 2 screws and latch release handle.
 - Release the cable retainer.
 - Note cable routing for correct installation.
3. For 60 percent seat, detach the assist spring strut from the outboard riser.

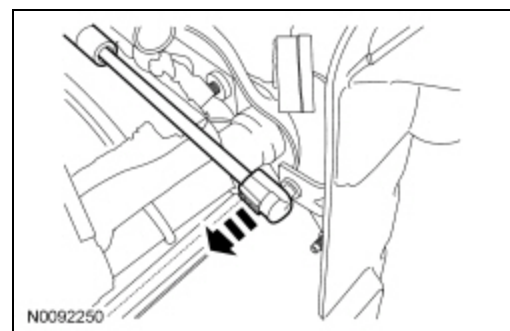

4. Remove the front and rear latch bolts.
 - To install, tighten to 32 Nm (24 lb-ft).
5. Remove the cushion pivot bolt, outboard riser and cushion latch.
 - To install, tighten to 32 Nm (24 lb-ft).
6. To install, reverse the removal procedure.