


Seat — Rear, Crew Cab, 40 Percent

 [Ford Ecat Electronic Parts Catalog](#)

40 Percent Seat

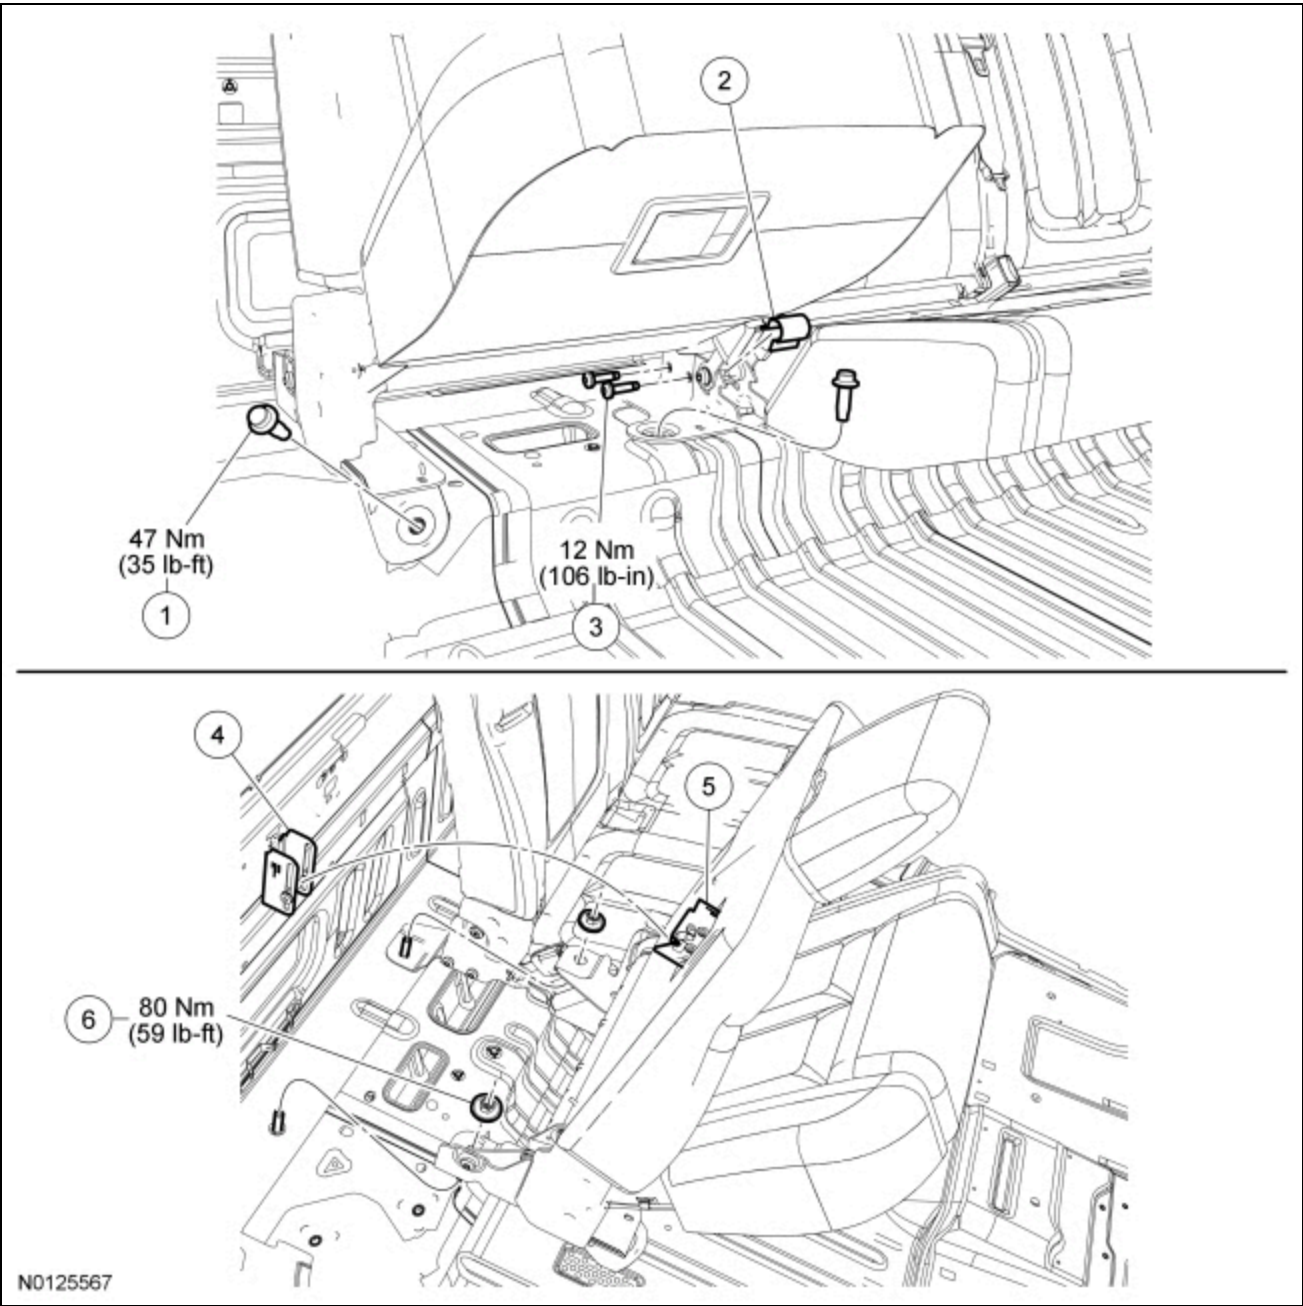


Item	Part Number	Description
1	W710721 W710721	Front seat bolt (2 required)
2	—	Safety belt buckle bolt cover
3	N806910 N806910	Seat connecting bolt (2 required)
4	62452 62452	Striker
5	61383 61383	Backrest latch
6	W708731 W708731	Rear seat nut (2 required)

Removal

1. Raise the seat cushion and remove the 2 front seat bolts.
2. Remove the 2 seat connecting bolts.
3. Remove the safety belt buckle bolt cover.
4. **NOTE:** *The seat backrest latch is only accessible when the seat cushion is raised.*

Release the backrest latch.

- From behind the backrest, pull up on the latch release and pull the backrest forward.
- Release the cushion latch and lower the cushion and backrest.

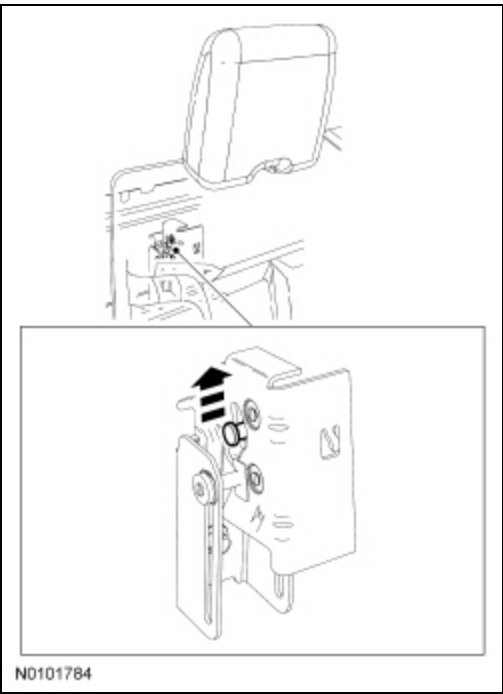

5. If equipped with heated seats, disconnect the electrical connector.
6. Remove the 2 rear seat nuts and seat.

Installation

1. **NOTE:** *Before installation, make sure the safety belt webbing is not twisted and the safety belts and buckles are accessible to the occupants.*

Position the seat in the vehicle and raise the backrest and cushion but do not latch the backrest at this time.

2. Install the 2 seat connecting bolts.
 - Tighten to 12 Nm (106 lb-in).
3. Install the outboard front seat bolt.
 - Tighten to 47 Nm (35 lb-ft).
4. Install the inboard front seat bolt.
 - Tighten to 47 Nm (35 lb-ft).
5. Lower the cushion and backrest and install the 2 rear seat nuts.
 - Tighten to 80 Nm (59 lb-ft).
6. If equipped with heated seats, connect the electrical connector.

7. Raise and latch the backrest.

- Slide the striker pin up/down and align to the backrest latch.
- Make sure the backrest is fully latched.

8. Install the safety belt buckle bolt cover.