


Window Control Switch — Front




NOTE: LH shown, RH similar.

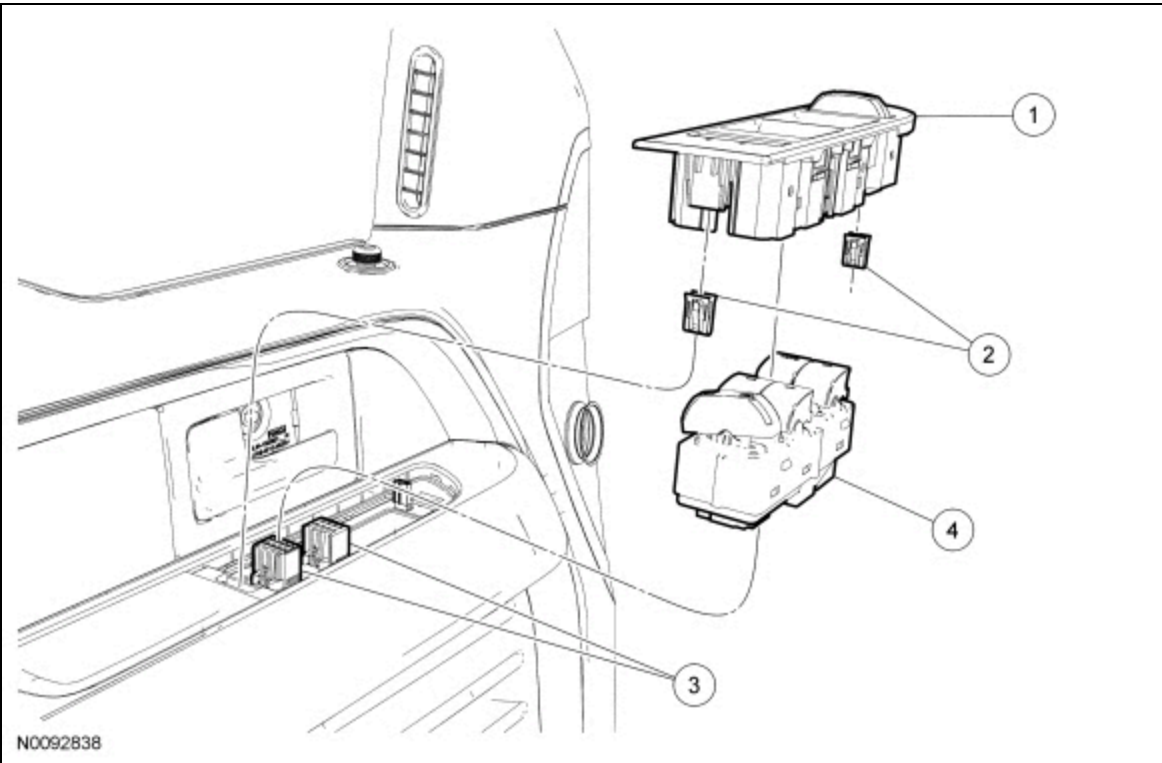

Item	Part Number	Description
1	1452814528 RH/ 14527 LH RH/ 14527 LH	Window control switch bezel (Regular cab)
1	1452414524 RH/ 14525 LH RH/ 14525 LH	Window control switch bezel (SuperCab and SuperCrew)
2	—	Window control switch bezel clips (part of window control switch bezel) (2 required)
3	14A00514A005	Window control switch electrical connectors
4	1452914529	Window control switch

Removal and Installation

1. Using a suitable trim tool, release the 2 clips on the outer edge of the window control switch bezel and pull the window control switch assembly straight upward.

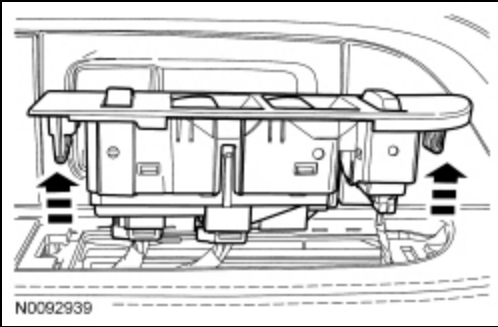

2. Disconnect the window control switch electrical connectors.
3. Release the tabs and remove the window control switch from the bezel.
4. To install, reverse the removal procedure.