



Window Glass — Rear, Manual Sliding Panel



1. Remove the rear window glass assembly from the vehicle and place on a stable work surface. For additional information, refer to Window Glass — Rear in this section.
2. Position the sliding glass panel to the full CLOSED position.
3. Remove the upper rail filler.
 - Pull down the driver side of the upper filler while carefully sliding it out of the track towards the driver side of the rear glass assembly.

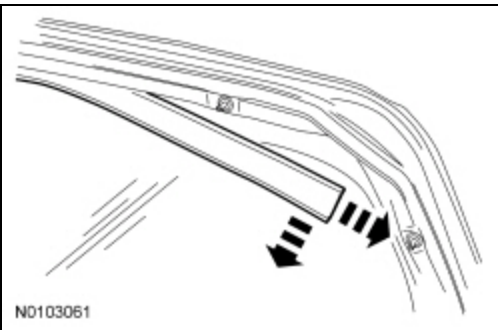

4. Position the sliding glass panel to the full OPEN position.
5. Remove the lower rail filler.
 - Pull up the passenger side of the lower filler while carefully sliding it out of the track towards the passenger side of the rear glass assembly.

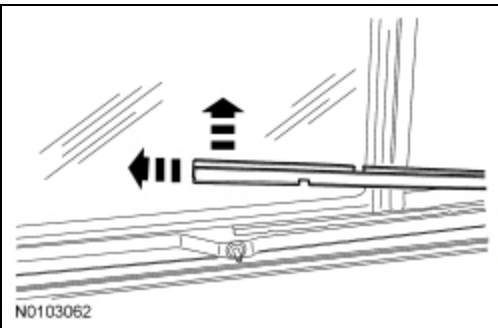

6. Push the sliding glass upward and tilt the bottom inward to disengage the sliding glass from the track. Remove the sliding glass panel.
7. To install, reverse the removal procedure.