

Window Regulator Motor




Removal and Installation

NOTE: *The front window motor must be de-initialized, then initialized whenever the LH front or RH front window motor is removed from the window regulator drum housing, a new window regulator is installed, a new window glass is installed, a new top run is installed or for any operation in which grease or lubricants are applied to the window regulator or glass run.*

1. Remove the window regulator and motor assembly. For additional information, refer to Window Regulator and Motor — Front Door, Window Regulator and Motor — Rear Door, SuperCab or Window Regulator and Motor — Rear Door, SuperCrew in this section.
2. **NOTE:** *Front door window regulator shown, all others similar.*

Remove the 3 door window-to-regulator bolts.

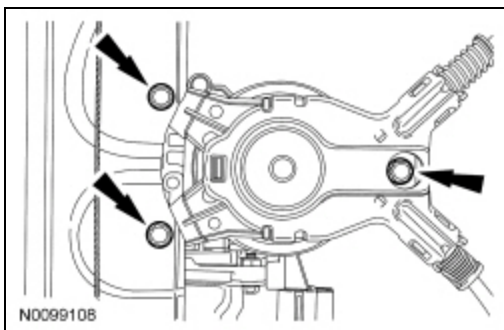

3. To install, reverse the removal procedure.
 - Initialized the front window motor. For additional information, refer to Window Motor Initialization in this section.