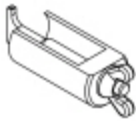


Power Point

 [Ford Ecat Electronic Parts Catalog](#)


Special Tool(s)

 E188627	Remover, Power Point 501-194 or equivalent
---	---


Removal

NOTE: *Power point cover may differ depending on location.*

1. Open the power point cover.

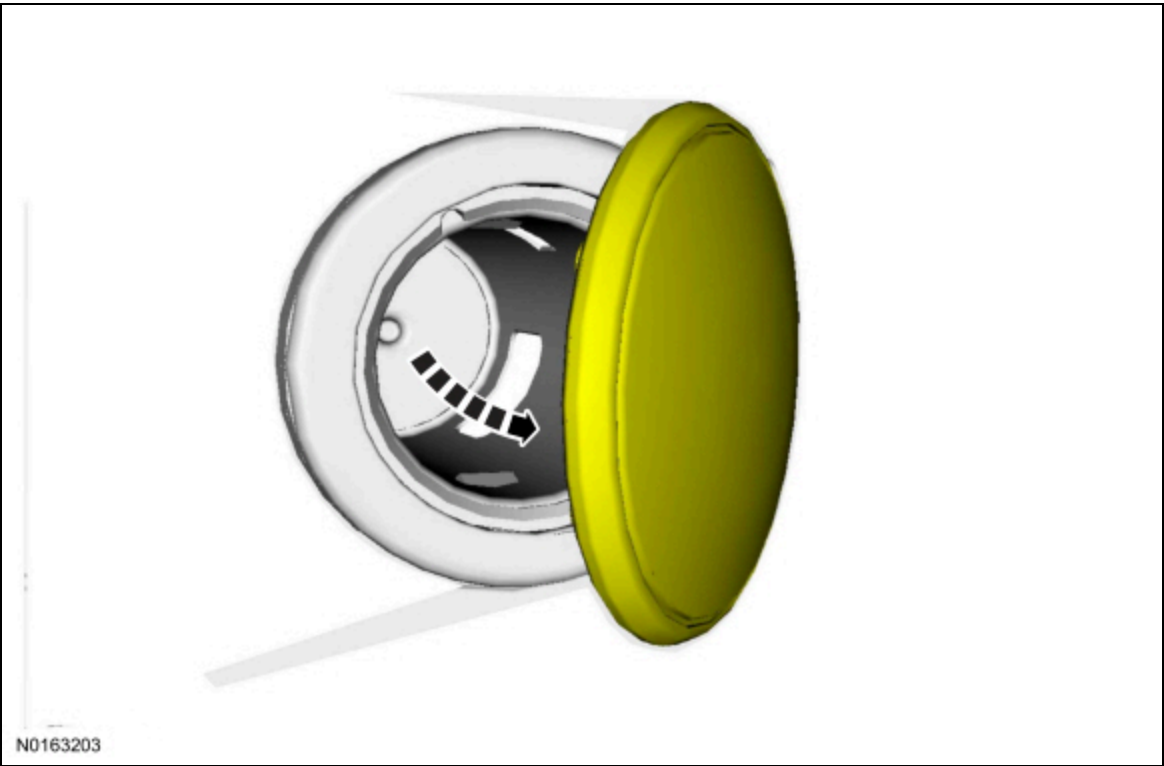


2. Position the Power Point Socket Remover so that it engages in the adjacent slot.

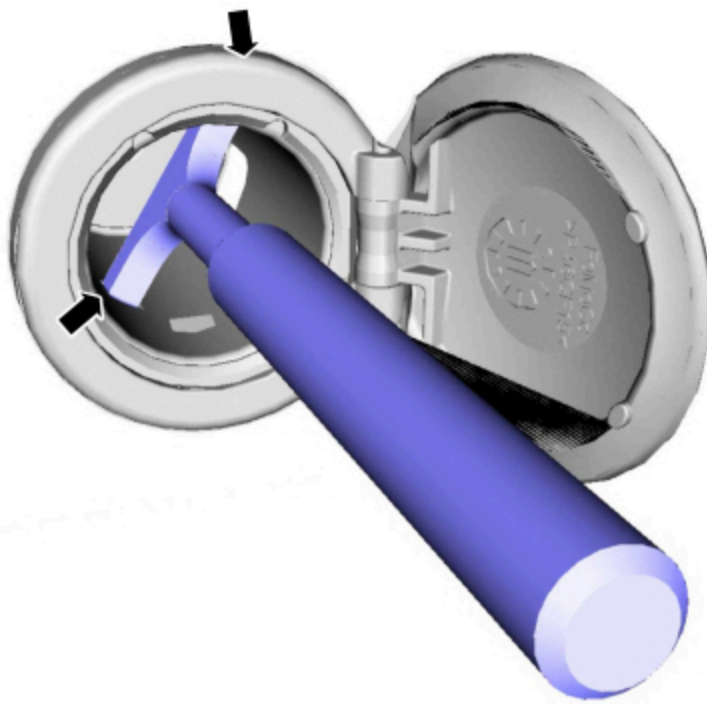


N0163204

- 3.
1. Install the receiver cup.
 2. Install and tighten the wing nut.

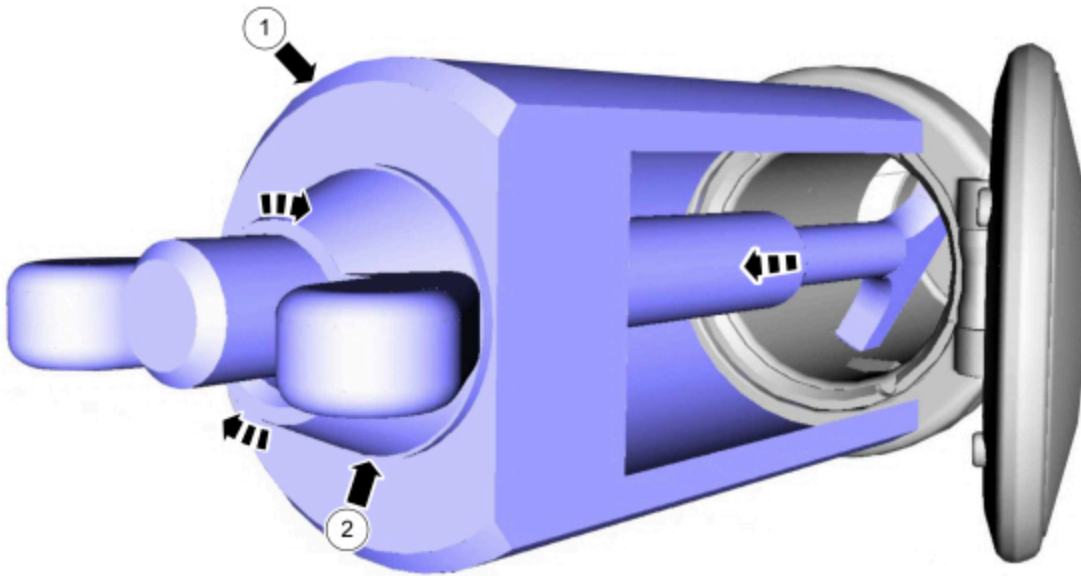


N0163205

4. Tighten the wing nut to pull the power point socket out of the retainer.

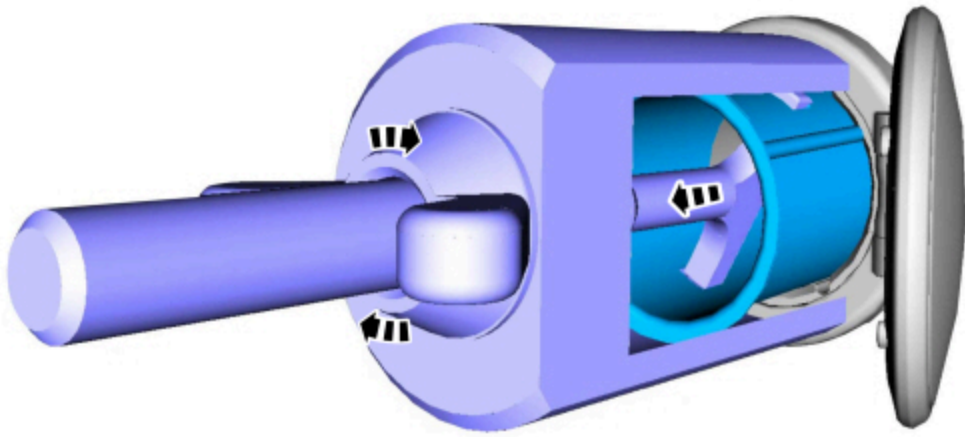

N0163206

5. Disconnect the electrical connector.

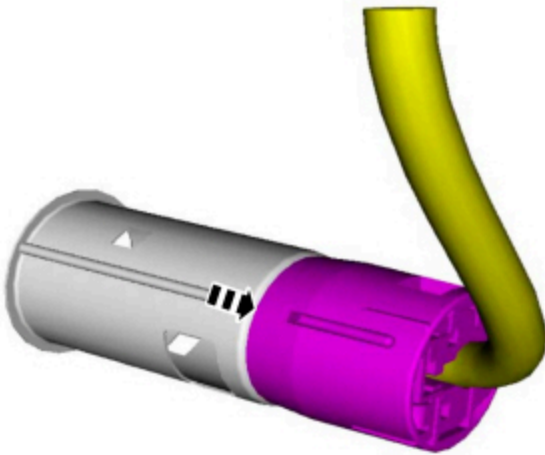

N0163207

Installation

1. Connect the electrical connector and push the new power point socket into the retainer.