

Handles, Locks, Latches and Entry Systems



Hood Latch

The hood latch system consists of the following components:

- Hood latch
- Primary hood latch release handle and cable
- Secondary hood latch release handle and cable

Front Door

The front door entry system consists of the following components:

- Door ajar switch (part of the front door latch)
- Door lock cylinder
- Exterior front door handle
- Front door latch
- Front door lock actuator (part of the front door latch)
- Interior door handle actuating cable
- Interior door handle

Rear Door, SuperCab

The SuperCab rear door latch system consists of the following components:

- Interior door handle
- Lower rear door latch and cable
- Upper rear door latch and cable

Rear Door, Crew Cab

The Crew Cab rear door latch system consists of the following components:

- Door ajar switch (part of the rear door latch)
- Exterior rear door handle
- Interior door handle
- Interior door handle actuating cable
- Rear door latch
- Rear door lock actuator (part of the rear door latch)

Tailgate

The tailgate latch system consists of the following components:

- Tailgate latches
- Tailgate latch actuating rods
- Tailgate latch release handle
- Tailgate latch remote control

Spare Tire

To prevent theft of the spare tire, the vehicle is equipped with a spare tire lock cylinder.

Power Locks

The power lock/unlock feature requests all of the vehicle doors locked or unlocked upon a customer request from either door lock control switch in the vehicle. The power door locking system functions independently of ignition status or vehicle speed.

Autolock

The autolock feature locks all the doors when the following conditions are met:

- all the doors are closed
- the ignition switch is in the RUN position
- the vehicle is shifted into any gear, putting the vehicle in motion
- the vehicle attains a speed greater than 20 km/h (12 mph)

The autolock feature repeats when:

- any door is opened then closed while the ignition is still in the RUN position
- the vehicle speed is 15 km/h (9 mph) or slower
- and the vehicle then attains a speed greater than 20 km/h (12 mph)

Refer to Autolock and Auto-Unlock Programming in this section for programming information.

Auto-Unlock

NOTE: *The doors do not auto-unlock if the vehicle has been locked using a door lock control switch, Remote Keyless Entry (RKE) transmitter, or keyless entry keypad before the driver door is opened.*

The auto-unlock feature unlocks all the doors when the following conditions are met:

- the ignition switch is in the RUN position
- all the doors are closed
- the vehicle has been in motion at a speed greater than 20 km/h (12 mph)
- the vehicle then comes to a stop
- the ignition is switched to the OFF or ACC position
- the driver door is opened within 10 minutes of the ignition being switched to the OFF, LOCK or ACC position

Refer to Autolock and Auto-Unlock Programming in this section for programming information.

Smart Unlock

The smart unlock feature prevents the doors from locking with the key in the ignition lock cylinder. When the Body Control Module (BCM) receives a lock command from a door lock control switch only with the key in the ignition lock cylinder and one of the front doors open, the BCM commands the doors to unlock.

The vehicle can still be locked with the ignition key in the ignition cylinder by locking the doors with the push button rods, the door lock cylinder or a lock command from a Remote Keyless Entry (RKE) transmitter.

Remote Keyless Entry (RKE)


The RKE system uses an Integrated Keyhead Transmitter (IKT) . The IKT incorporates both the Passive Anti-Theft System (PATS) functions and the RKE transmitter functions in a single device.

The RKE transmitter is programmed automatically during PATS programming. During PATS programming, the BCM obtains the Transmitter Identification Code (TIC) from the IKT .


The BCM accepts programming of up to 4 IKTs . In addition to the IKTs , 4 conventional keyfobs can also be programmed to the vehicle if requested by the customer. For information on programming the IKTs , refer to the key programming

procedures in Section 419-01B. Refer to Remote Keyless Entry (RKE) Transmitter Programming in this section for keyfob programming information.

IKT Without Remote Start

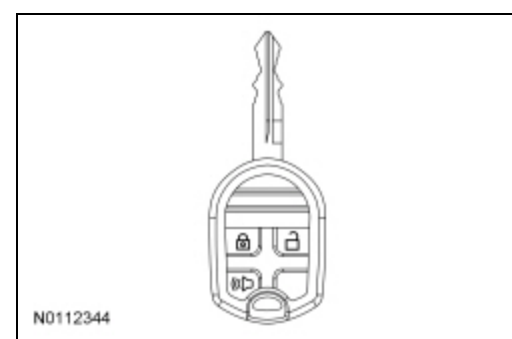

IKT With Remote Start

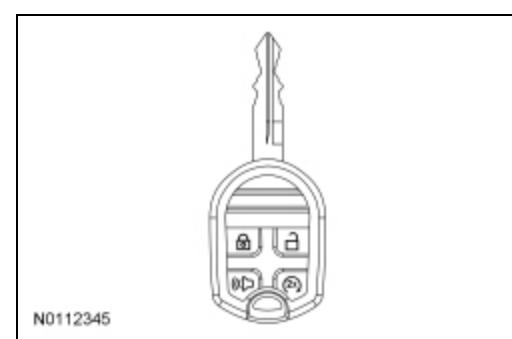

The RKE transmitter carries out the following functions:

- Unlocks the driver door
- Unlocks all doors
- Locks all doors
- Activates/deactivates the panic alarm
- Commands the interior lamps on (when unlocking) and off (when locking)
- Provides a long flash of the turn signals when UNLOCK is pressed
- Remotely start the engine (if equipped with the factory installed system)
- Sounds the horn once when LOCK is pressed twice within 3 seconds, and the doors are closed
- Sounds the horn twice when LOCK is pressed twice within 3 seconds, and any door is ajar

The RKE transmitter has a normal operating range of 10 m (33 ft).

Remote Keyless Entry (RKE) Lock/Unlock Control — Unlock

The RKE feature provides lock/unlock functions independently of key position, vehicle speed, or transmission position. The RKE feature provides a stepped (if enabled) process for unlocking the doors. Upon receipt of the first request for unlocking the doors, the RKE feature requests the BCM to unlock the driver door only and provides a long flash of the turn signals. If another unlock request is received within 3 seconds of the first, the RKE feature requests the BCM to unlock all the doors. This feature can be configured to global unlock, so that all the doors unlock on the first press of the UNLOCK button. Refer to Stepped Unlock Programming in this section for programming information.

Remote Keyless Entry (RKE) Lock/Unlock Control — Lock

The RKE feature requests that all the doors be locked when the LOCK button is pressed. On any press of the LOCK button with all doors closed, the BCM provides one flash of the turn signals. If any door is ajar, no flash occurs. As soon as the last door is closed, the BCM provides the flash of the turn signals. If 2 presses of the LOCK button are received within 3 seconds, the horn chirps once and the turn signals flash twice to indicate that all the doors are closed and locked. If any door is ajar when the second lock request is received within 3 seconds of the first, the RKE transmitter feature requests the BCM

to chirp the horn twice without flashing the turn signals to indicate all the doors are locked but one or more doors are ajar. When the key is in the RUN or START position, the turn signal flashes and horn chirp confirmations do not occur.

Panic Alarm

The panic alarm feature provides audible and visual alarms which are evident from the exterior of the vehicle. The panic alarm feature requests that the turn signals are flashed and the horn sounds until deactivation. The flashing of the outputs occurs simultaneously. Activation of the panic alarm is accomplished by pressing the panic button on an **RKE** transmitter whenever the key is in the OFF position. At all other times this feature is disabled. Deactivation of an active panic alarm is accomplished by any of the following actions:

- A second press of the **RKE** transmitter panic button
- The key is switched out of the OFF position
- A period of 2 minutes and 45 seconds has elapsed since the initial activation

Remote Keyless Entry (RKE) Transmitter Memory Seat

The **RKE** transmitter feature provides a memory position for the seat/adjustable pedals/mirrors/steering column feature. When the unlock button is pressed, the driver seat, the adjustable pedals, the mirrors, and the steering column move to the desired memory position (the seat, pedal, mirror, and steering column position correspond to the transmitter being used). This feature can be enabled/disabled. Refer to Remote Memory Activation and Remote Memory Deactivation in this section for programming information.

Remote Start

The factory installed remote start (if equipped), is controlled by an **IKT** and allows the engine to be started from outside the vehicle. Refer to Section 303-06 for information on the remote start feature.

Keyless Entry Keypad

The keyless entry keypad (if equipped), located in the exterior handle of the driver door, provides a method for the customer to access the vehicle without a key or **RKE** transmitter. The keyless entry keypad feature:

- Locks all doors
- Unlocks the driver door
- Unlocks all doors
- Programs/erases the customer keypad code
- Enables/disables auto-locking
- Enables/disables auto-unlocking
- Illuminates the keypad
- Illuminates the interior lamps

The keyless entry keypad feature operates independently of key position status, vehicle speed, or transmission position. When a keyless entry keypad button is pressed, the keyless entry keypad buttons illuminate to provide better visibility. If buttons 7/8 and 9/0 are pressed simultaneously or 5 seconds have elapsed since the last button press, the illumination is turned off.

Vehicles equipped with a keyless entry keypad are programmed with a factory set 5-digit entry code. This code is provided to the customer on a wallet card in the Owner's Literature package. In addition, this code is available through the use of a scan tool and is printed on the **BCM** label located on the back side of the module (installed position). When entering codes, each digit must be entered within 5 seconds of the previous button press. The **BCM** accepts the programming of 3 personal entry codes. Refer to Keyless Entry Keypad Code Programming in this section for programming information.

Unlocking the Doors with the Keyless Entry Keypad System

To unlock the driver door (with stepped unlock enabled), enter either the factory set code or the personal code (each digit must be pressed within 5 seconds of the prior digit). This also illuminates the interior lamps.

To unlock all doors with stepped unlock enabled, enter either the factory set code or the personal code (driver door unlocks) and press the 3/4 button within 5 seconds.

To unlock all doors with stepped unlock disabled, enter either the factory set code or the personal code. This also illuminates the interior lamps. Refer to Stepped Unlock Programming in this section for information on how to program the stepped unlocking.

Locking the Doors with the Keyless Entry Keypad System

It is not necessary to enter the factory set or personal code prior to locking all the doors. To lock all the doors, press the 7/8 and 9/0 buttons at the same time with the driver door closed.

Keyless Entry Keypad Memory Seat Feature

The keypad provides a memory position for the seat/adjustable pedals/mirrors/steering column feature. The feature is associated with the personal entry codes and positions the driver seat, the adjustable pedals, the mirrors, and the steering column to move to the desired memory position (the seat, pedal, mirror, and steering column position correspond to the personal code being used). Refer to Keyless Entry Keypad Code Programming in this section for programming information.

Anti-Scan Feature

To provide added security, the keyless entry keypad is disabled for 1 minute after pressing the button 35 times without a valid entry code being entered. The keypad flashes during this 1-minute mode with all functionality disabled except for buttons 7/8 and 9/0 still being allowed to lock the vehicle.

Anti-scan is turned off after any of the following events:

- One minute of keyless entry keypad inactivity has elapsed
- The RKE transmitter UNLOCK button is pressed
- The key is turned to the RUN position