


Door Lock Control Switch



NOTE: LH side shown, RH side similar.

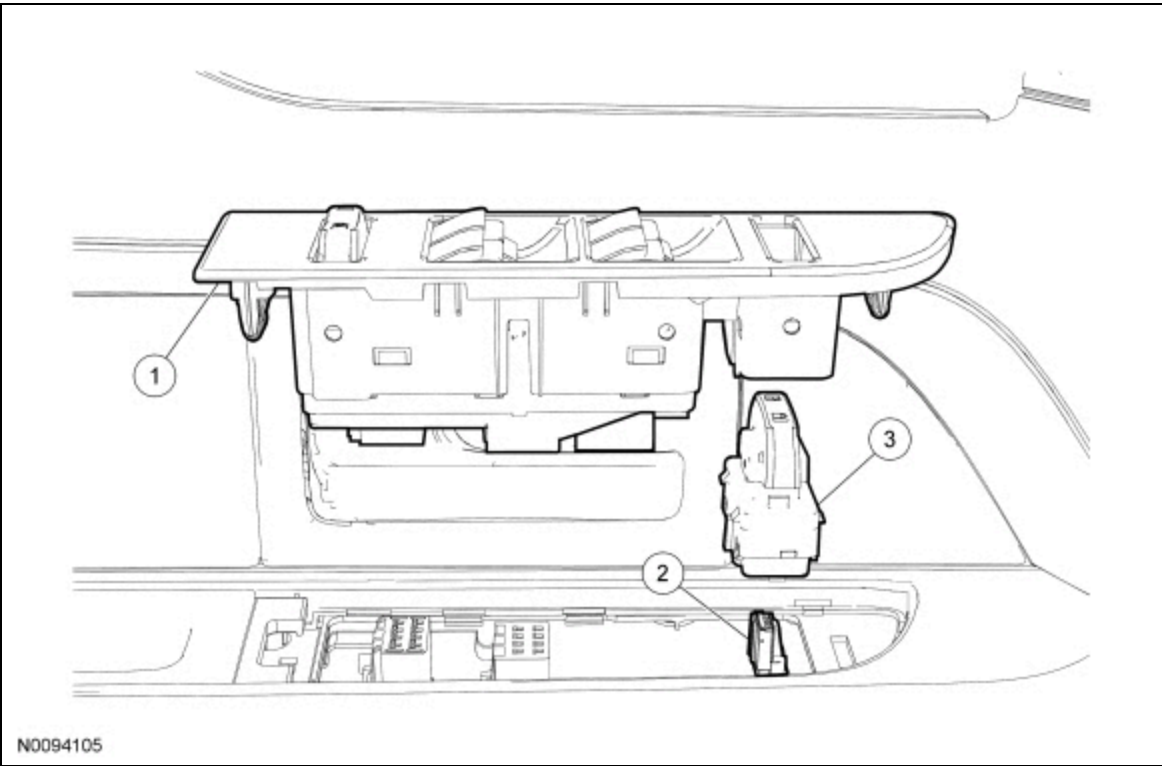

Item	Part Number	Description
1	14527 14527 / 14528/ 14528	Switch plate cover (LH/RH)
2	—	Door lock switch electrical connector
3	14028 14028	Door lock control switch

Removal and Installation

1. Lift up to remove the switch plate cover.
2. Disconnect the electrical connector.
3. Release the door lock control switch tabs and remove the door lock control switch.
4. To install, reverse the removal procedure.