


Door Lock Cylinder

 [Ford Ecat Electronic Parts Catalog](#)

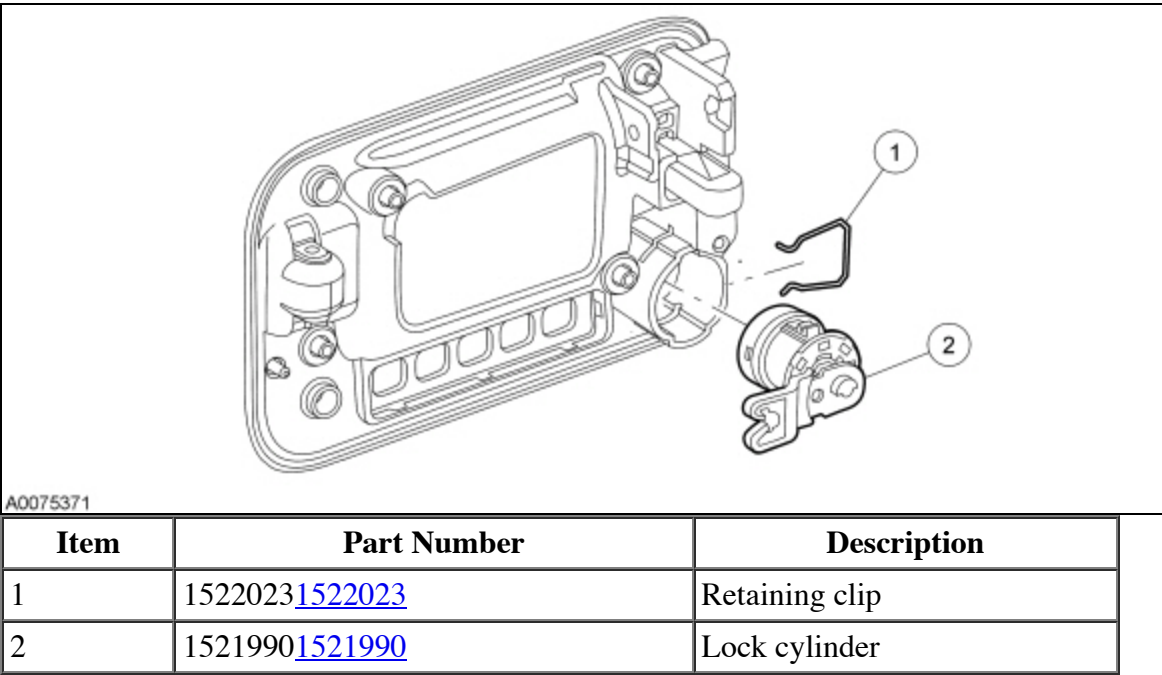

Removal and Installation

NOTE: Individual door lock cylinders are repaired by discarding the inoperative lock cylinder and building a new lock cylinder using the appropriate lock repair package. The lock repair package includes a detailed instruction sheet to build a new lock cylinder to the current key code of the vehicle.

1. Remove the exterior front door handle. For additional information, refer to Exterior Front Door Handle in this section.
2. Remove the retaining clip and the door lock cylinder.
3. To install, reverse the removal procedure.