


Exterior Door Handle — SuperCrew

 [Ford Ecat Electronic Parts Catalog](#)

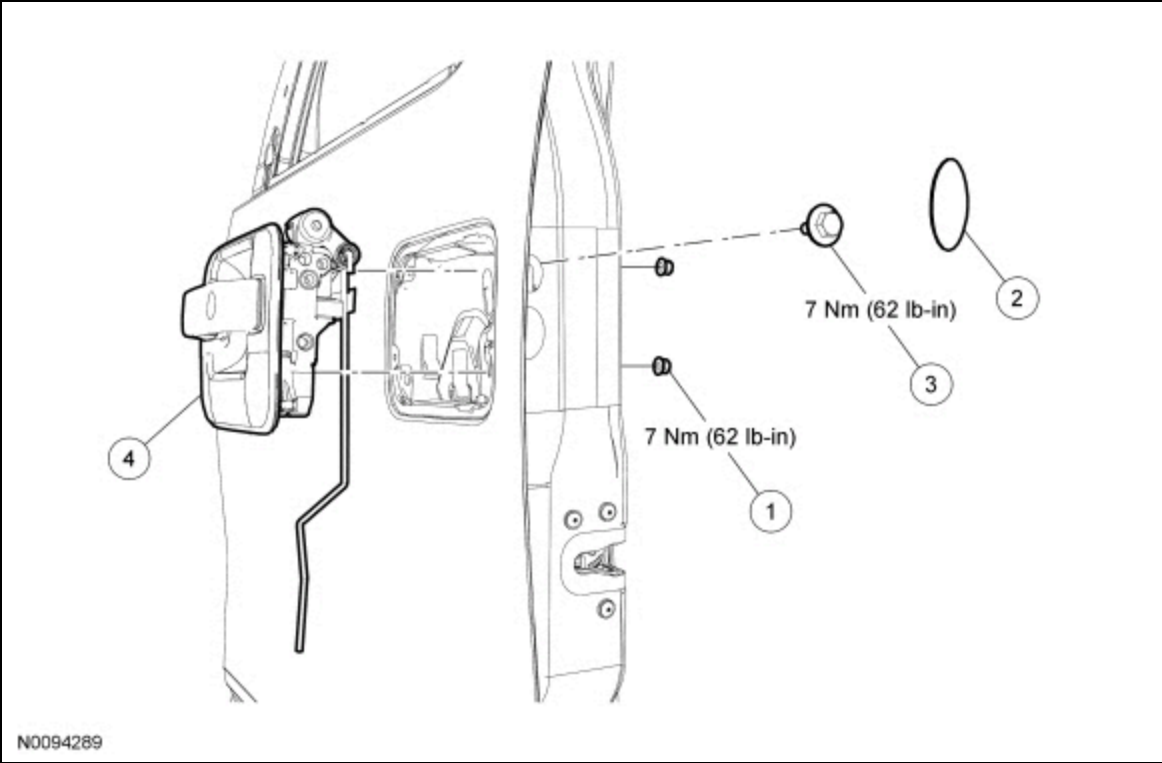


Item	Part Number	Description
1	N620480 N620480	Exterior door handle nuts (2 required)
2	W714163 W714163	Exterior rear door handle seal
3	W709562 W709562	Exterior rear door handle bolt
4	1626605 1626605 / 1626604/ 1626604	Exterior rear door handle (LH/RH)

Removal and Installation

NOTE: The door window glass must be completely raised.

1. Remove the rear door trim panel. For additional information, refer to Section 501-05.
2. Position the water shield aside.
3. Open the clip and disconnect the exterior rear door handle actuating rod.

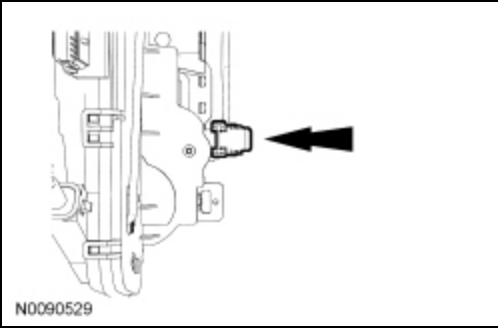

4. Remove the 2 exterior door handle nuts.
 - To install, tighten to 7 Nm (62 lb-in).
5. Remove the upper exterior rear door handle seal.
6. Remove the exterior door handle bolt.
 - To install, tighten to 7 Nm (62 lb-in).
7. Remove the exterior door handle.
8. To install, reverse the removal procedure.