


Exterior Front Door Handle

 [Ford Ecat Electronic Parts Catalog](#)

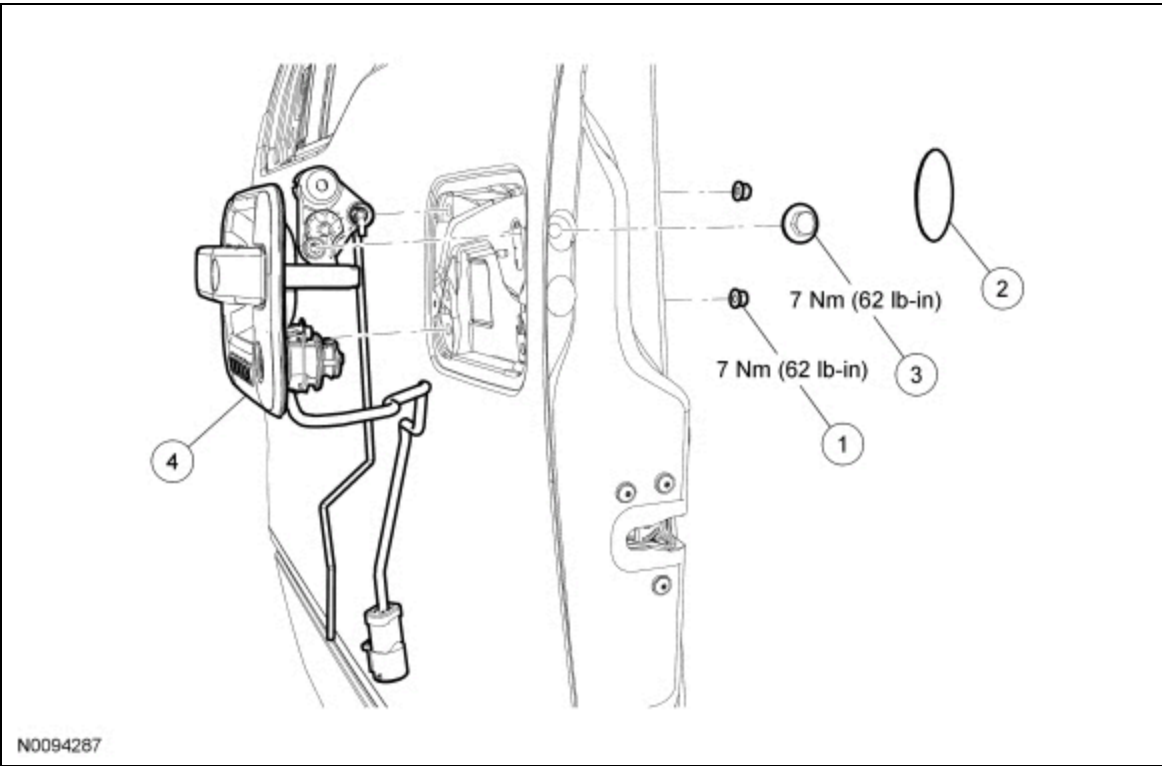


Item	Part Number	Description
1	N620480 N620480	Exterior door handle nuts (2 required)
2	W714163 W714163	Exterior door handle bolt seal
3	W709562 W709562	Exterior door handle bolt
4	1522405 1522405 / 1522404/ 1522404	Exterior door handle (LH/RH)

Removal and Installation

NOTE: The door window glass must be completely raised.

1. Remove the front door trim panel. For additional information, refer to Section 501-05.
2. Remove the side impact energy absorption panel.
3. Position the water shield aside.
4. If equipped, disconnect the actuating rod from the door lock cylinder.
5. Open the clip and disconnect the exterior front door handle actuating rod from the front door latch.

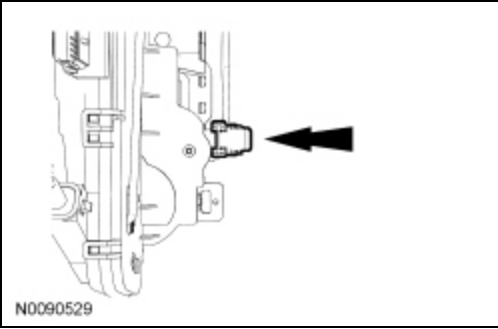

6. If equipped, disconnect the keyless entry keypad electrical connector and disconnect the harness channel from the door.
7. Remove the 2 exterior door handle nuts.
 - To install, tighten to 7 Nm (62 lb-in).
8. Remove the upper exterior front door handle bolt seal.
9. Remove the exterior front door handle bolt.
 - To install, tighten to 7 Nm (62 lb-in).
10. Remove the exterior front door handle.
11. To install, reverse the removal procedure.