


Front Door Latch

 [Ford Ecat Electronic Parts Catalog](#)

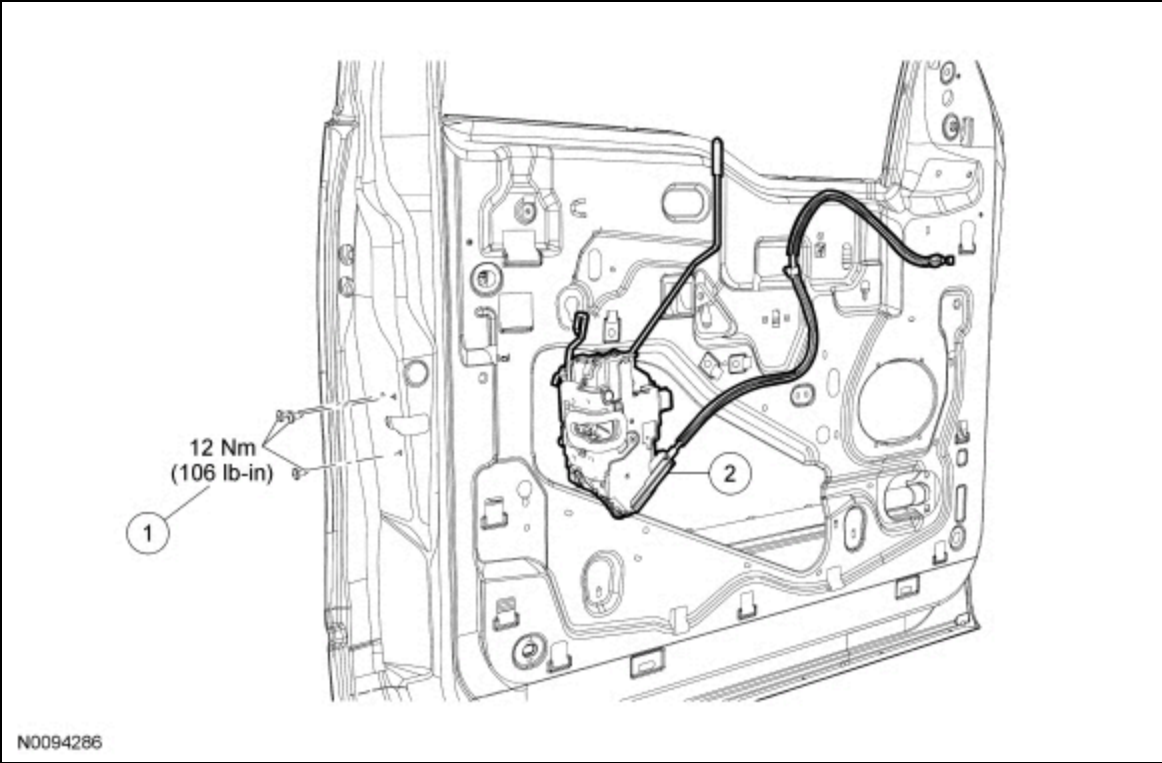


Item	Part Number	Description
1	W714092 W714092	Door latch bolts (3 required)
2	5421813 5421813 / 5421812/ 5421812	Door latch (LH/RH)

Removal and Installation

NOTE: The door window glass must be completely raised.

1. Remove the front door trim panel. For additional information, refer to Section 501-05.
2. Remove the side impact energy absorption panel.
3. Position the water shield aside.
4. Release the interior front door handle actuating cable from the locating clip.
5. Disconnect the front door latch electrical connector.
6. If equipped, disconnect the actuating rod from the door lock cylinder.
7. Open the clip and disconnect the exterior front door handle actuating rod from the front door latch.

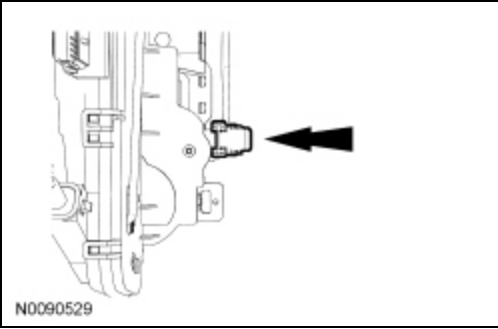

8. Remove the 3 door latch bolts.

- To install, tighten to 12 Nm (106 lb-in).

9. Remove the front door latch.

10. To install, reverse the removal procedure.