



Hood Latch Release Handle — Primary

 [Ford Ecat Electronic Parts Catalog](#)

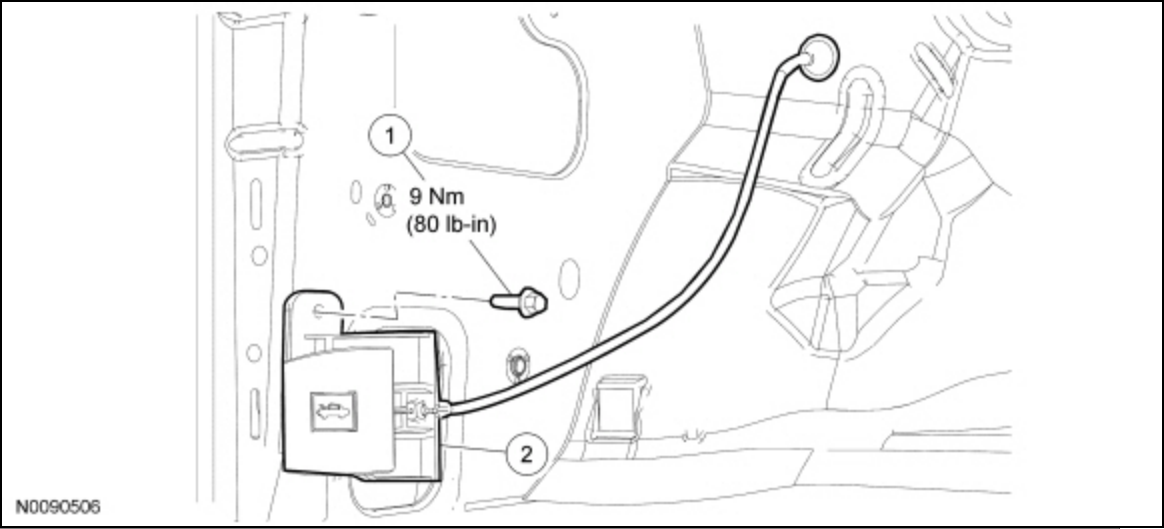

Item	Part Number	Description
1	N805375 N805375	Primary hood latch release handle bolt
2	16916 16916	Primary hood latch release handle and cable

Primary Hood Latch Release Cable Routing

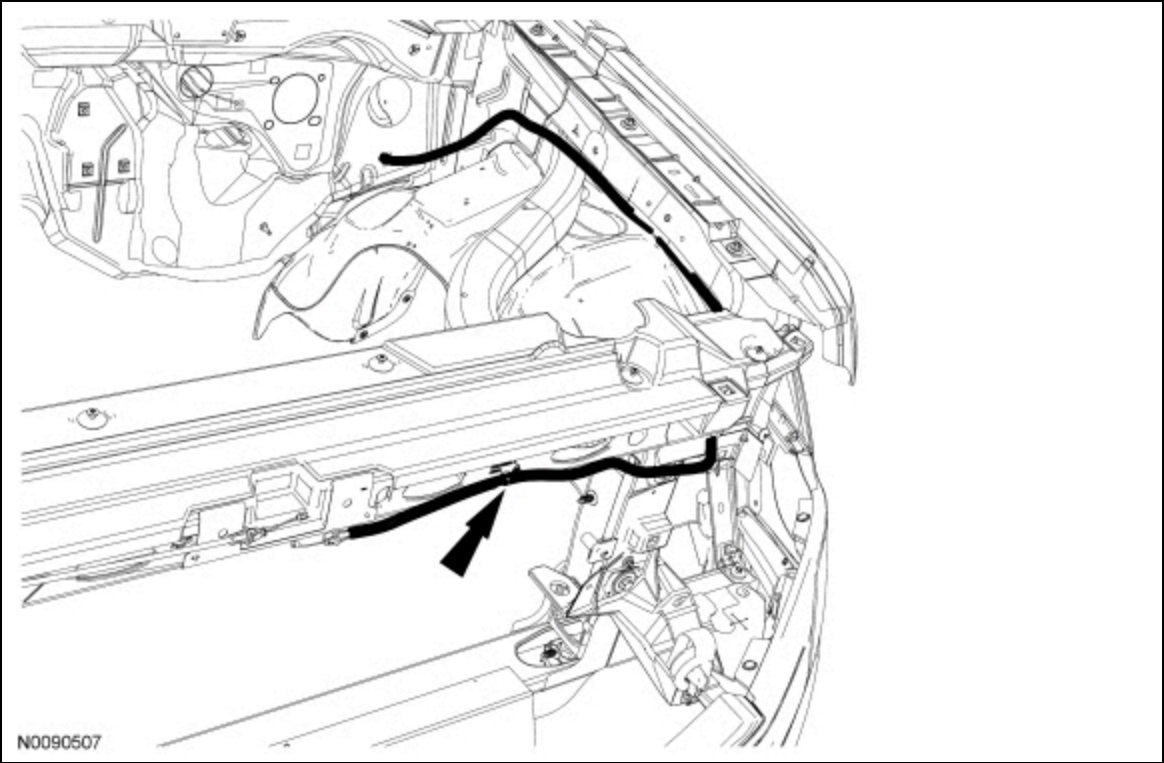

Removal and Installation

1. Remove the hood latch. For additional information, refer to Hood Latch in this section.
2. Remove the air cleaner element. For additional information, refer to Section 303-12.
3. Remove the degas bottle bolts and position the degas bottle assembly aside.
4. Remove the cowl side trim panel. For additional information, refer to Section 501-05.
5. Remove the primary hood latch release handle bolt.
 - To install, tighten to 9 Nm (80 lb-in).
6. Release the cable locators and remove the primary hood latch release cable.
7. To install, reverse the removal procedure.
 - When the hood latch is installed, the latch adjustment must be checked to make sure the latch is installed and aligned correctly.