


Hood Latch Release Handle — Secondary

 [Ford Ecat Electronic Parts Catalog](#)

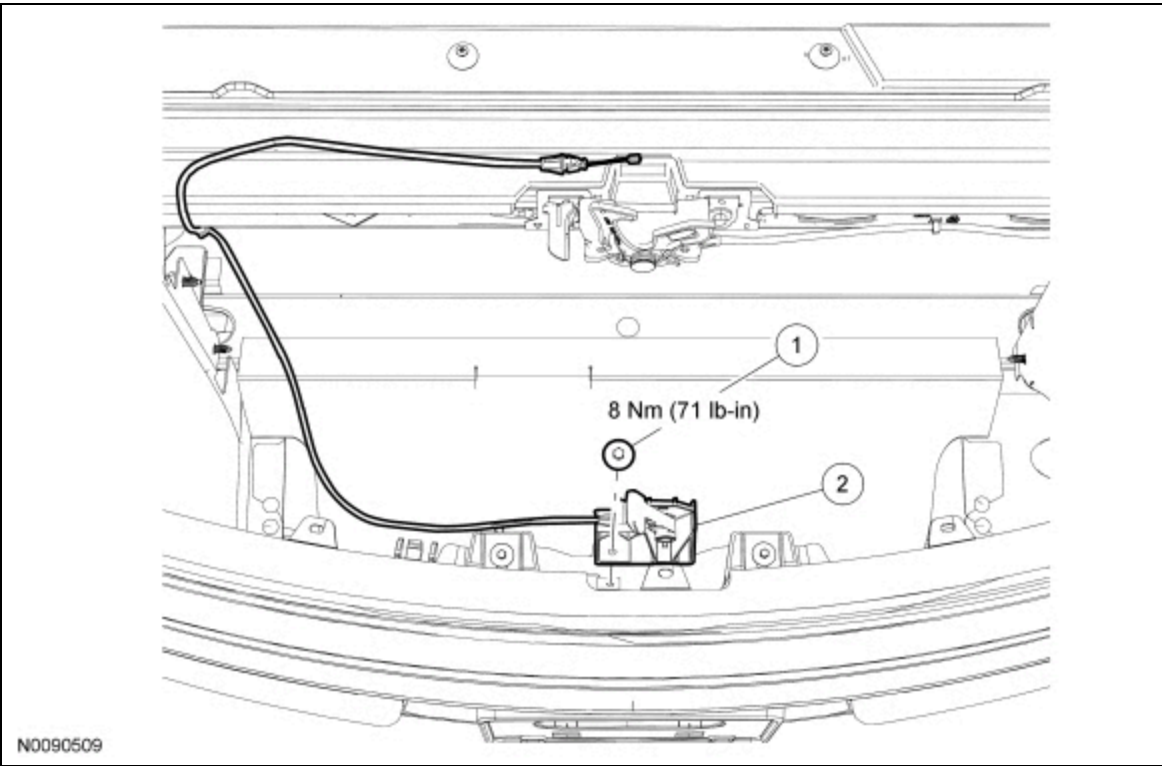

Item	Part Number	Description
1	W711848 W711848	Secondary hood latch release handle bolt
2	16916 16916	Secondary hood latch release handle and cable

Removal and Installation

1. Disconnect the secondary hood latch release cable from the hood latch.
2. Disconnect the secondary hood latch release cable from the guide clips.
3. Remove the secondary hood latch release handle bolt.
 - To install, tighten to 8 Nm (71 lb-in).
4. Remove the secondary hood latch release.
5. To install, reverse the removal procedure.