


Hood Latch

 [Ford Ecat Electronic Parts Catalog](#)

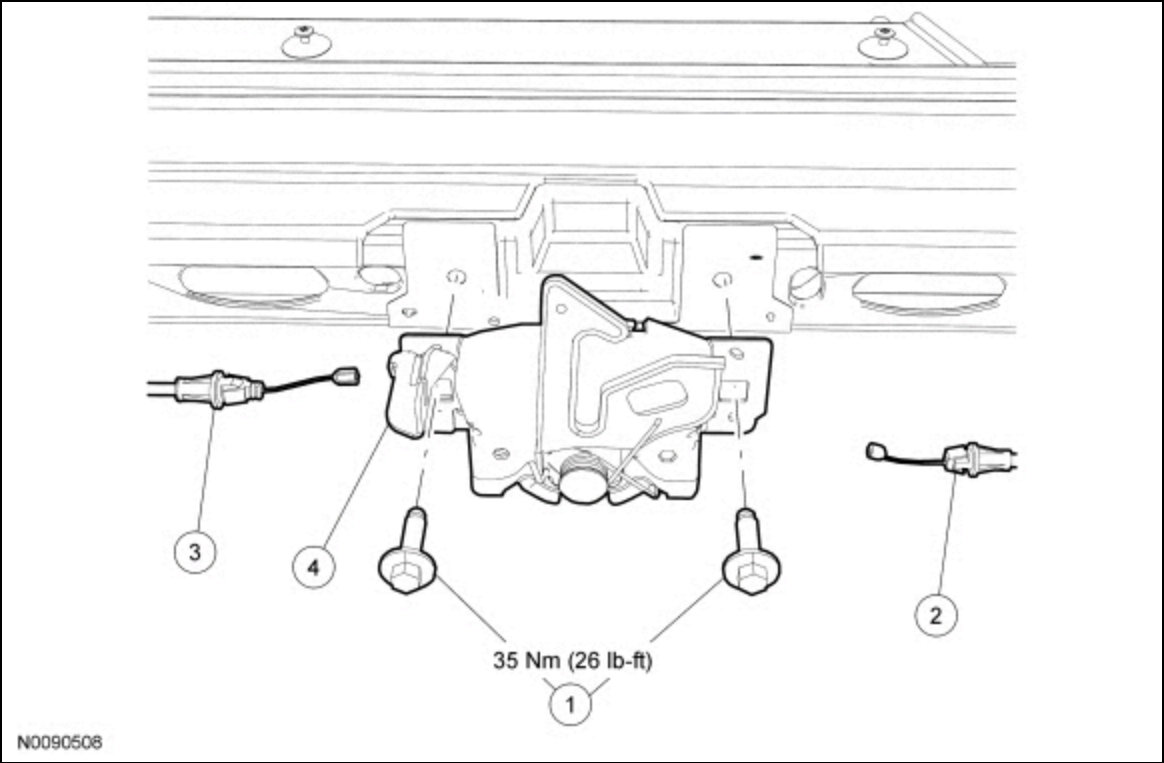

Item	Part Number	Description
1	W711848 W711848	Hood latch bolts (2 required)
2	16916 16916	Primary hood latch release cable
3	16916 16916	Secondary hood latch release cable
4	16700 16700	Hood latch

Removal and Installation

1. **NOTE:** Mark the location of the hood latch with a permanent-type marker.
- Remove the 2 hood latch bolts and position the hood latch aside.
 - To install, tighten to 35 Nm (26 lb-ft).
2. Disconnect the primary hood latch release cable.
3. Disconnect the secondary hood latch release cable.
4. Remove the hood latch.
5. To install, reverse the removal procedure.
 - When the hood latch is installed, the latch adjustment must be checked to make sure the latch is installed and aligned correctly.