


Wiper Mounting Arm and Pivot Shaft



Removal and Installation


1. Remove the cowl panel grille. For additional information, refer to Section 501-02
2. Remove the wiper mounting arm and pivot shaft.
 1. Disconnect the electrical connector.
 2. Remove the bolts.
 - To tighten, tighten to 8 Nm (71 lb-in).

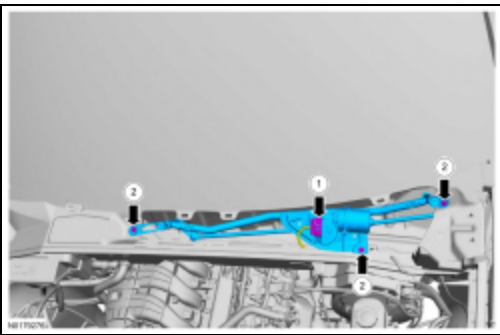

3. **NOTICE:** The wiper motor crank arm must be removed prior to removing the wiper motor from the pivot shaft bracket. Failure to follow this instruction will result in incorrect alignment of the wiper motor crank arm.

NOTE: This step only necessary when installing the same component.


Using a fine tipped marker, mark the wiper motor spline drive and underneath the crank arm for correct alignment during installation.

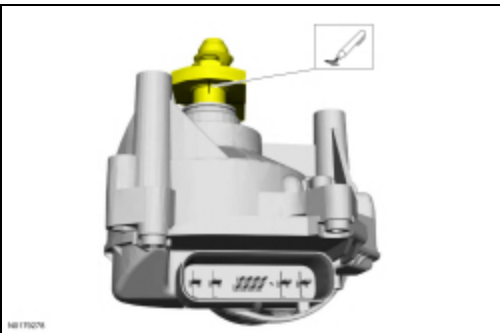


4. **NOTICE:** Be careful not to damage the wiper mounting arm seals during removal. Failure to follow this instruction may result in poor windshield wiper performance.

Remove the wiper motor crank arm.

1. Detach and position the wiper mounting arm aside.
2. Detach and position the wiper mounting arm aside.
3. Remove the wiper motor crank arm nut.
 - To tighten, tighten to 29 Nm (21 lb-ft).
4. Remove the wiper motor bolts.
 - To tighten, tighten to 15 Nm (133 lb-in).

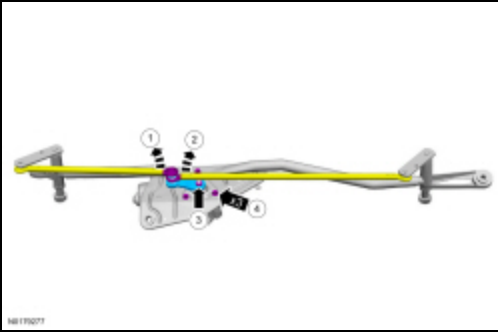

5. Remove the wiper mounting arm and pivot shaft.

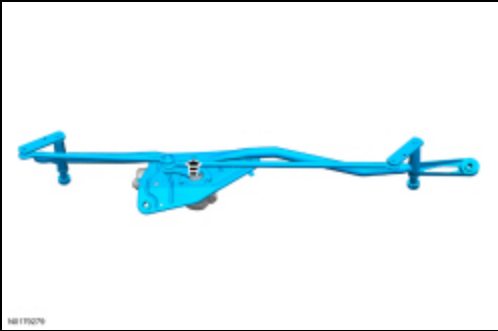

6. To install, reverse the removal procedure.

7. **NOTICE: Failure to follow this instruction will result in incorrect alignment of the wiper motor crank arm may cause damage to the wiper sysetm.**

Align the wiper motor spline drive and the crank in the previously marked position.

