


Roof Opening Panel Alignment



NOTE: The roof opening panel motor must be initialized when repairs are carried out on any part of the roof opening panel, including: whenever the roof opening panel motor has been removed from the roof opening panel assembly, a new roof opening panel motor has been installed or when a new roof opening panel assembly has been installed. For additional information, refer to Roof Opening Panel Motor Initialization in this section.

1. Position the roof opening panel in the CLOSED position.
2. Loosen the 4 roof opening panel glass screws.
3. **NOTE:** Make sure the roof opening panel is centered in the roof opening.

Adjust the roof opening panel glass height to specification.

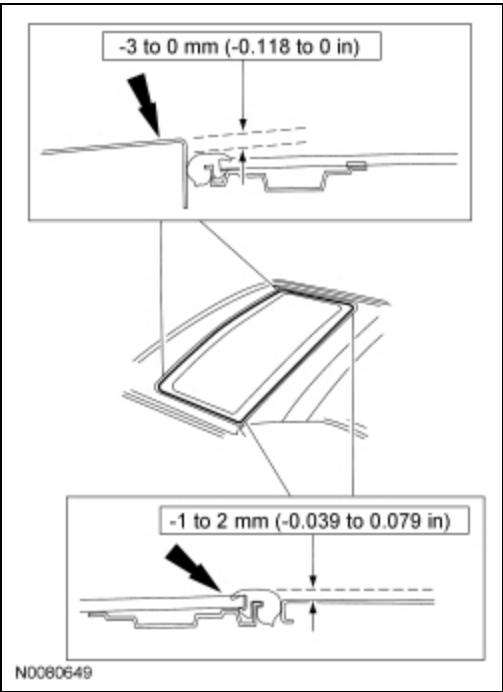

4. Maintain horizontal and vertical roof opening panel positions while adjusting and tighten the 4 roof opening panel glass screws to 4 Nm (35 lb-in).
5. Initialize the roof opening panel motor. For additional information, refer to Roof Opening Panel Motor Initialization in this section.