


Roof Opening Panel Control Switch




Removal and Installation


1. Remove the overhead console. For additional information, refer to Section 501-12.
2. Disconnect the 2 overhead console electrical connectors.
3. Remove the light assembly from the overhead console.
 1. Carefully pull the 2 rear tabs outward and rotate the light assembly slightly away from the overhead console.
 2. Carefully pull the 2 front tabs outward and remove the light assembly from the overhead console.

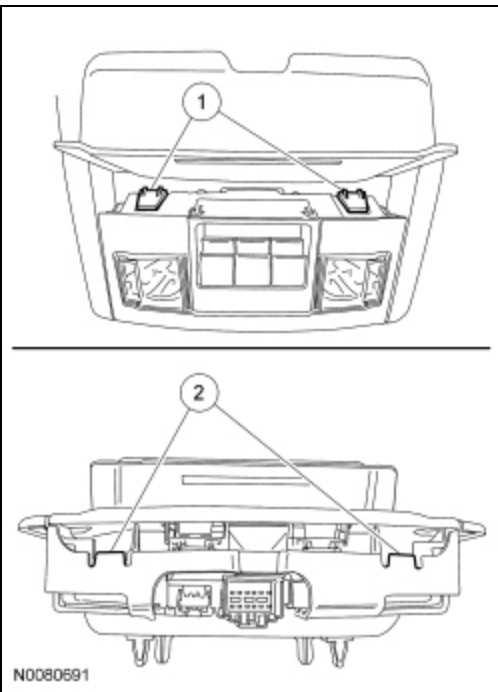

4. Disengage the 4 tabs and remove the switch from the light assembly.

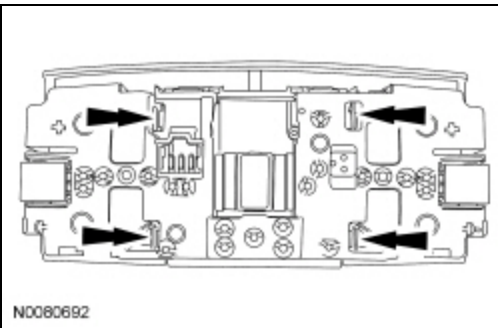

5. Disengage the 2 tabs and remove the switch bezel from the switch.

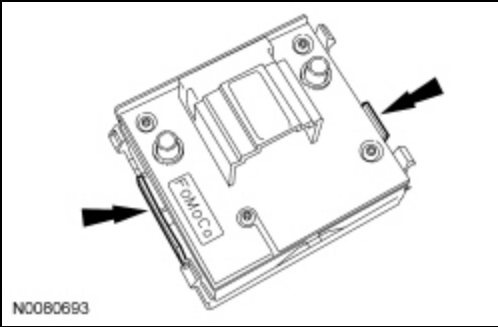

6. To install, reverse the removal procedure.