


Roof Opening Panel Rear Trough Guide




Removal and Installation

NOTE: The roof opening panel motor must be initialized when repairs are carried out on any part of the roof opening panel, including: whenever the roof opening panel motor has been removed from the roof opening panel assembly, a new roof opening panel motor has been installed or when a new roof opening panel frame has been installed. For additional information, refer to Roof Opening Panel Motor Initialization in this section.


1. Remove the trough assembly. For additional information, refer to Trough Assembly in this section.
2. Disconnect the trough guide rods from the lifter arm assemblies.

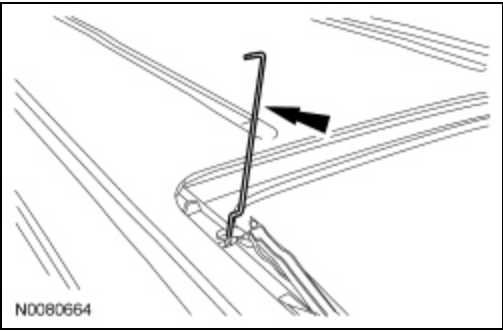

3. Slide the trough guide back to the slot (approximately 15 mm [0.6 in]) cut in the track.

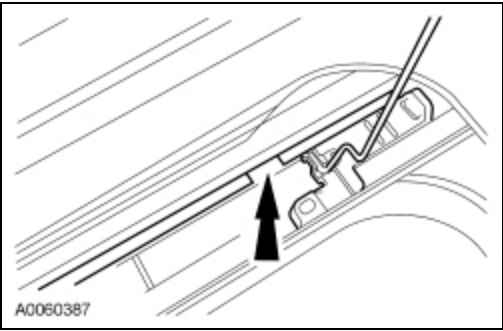

4. Position the roof opening panel to the VENT position.
5. Carefully twist the trough guide through the slot in the track to remove.

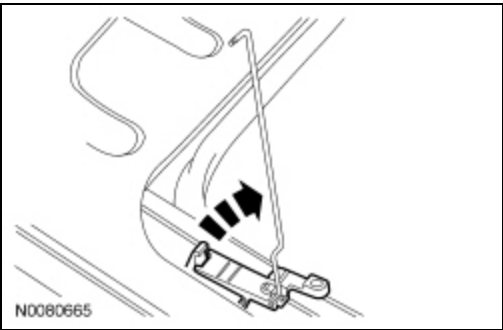

6. Inspect the trough guide assembly for damage. If damage is found, inspect the track for broken pieces and remove them.

7. To install, reverse the removal procedure.

- Align the roof opening panel. For additional information, refer to Roof Opening Panel Alignment in this section.
- Initialize the roof opening panel motor. For additional information, refer to Roof Opening Panel Motor Initialization in this section.