


Roof Opening Panel Shield




Removal and Installation

NOTE: The roof opening panel motor must be initialized when repairs are carried out on any part of the roof opening panel, including: whenever the roof opening panel motor has been removed from the roof opening panel assembly, a new roof opening panel motor has been installed or when a new roof opening panel frame has been installed. For additional information, refer to Roof Opening Panel Motor Initialization in this section.


- 1. Remove the trough assembly. For additional information, refer to Trough Assembly in this section.
- 2. Slide the roof opening panel shield halfway forward.

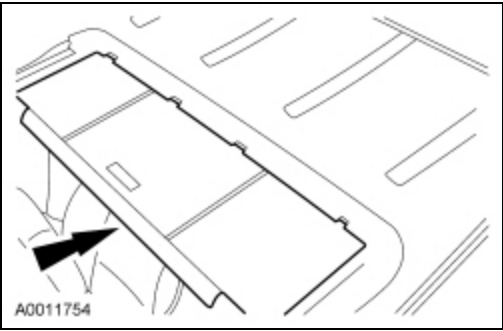

- 3. Disengage the front roof opening panel shield guide feet.
 - 1. Push the roof opening panel shield toward one side of the vehicle.
 - 2. Carefully flex the front portion of the roof opening panel shield upward to disengage the guide feet.

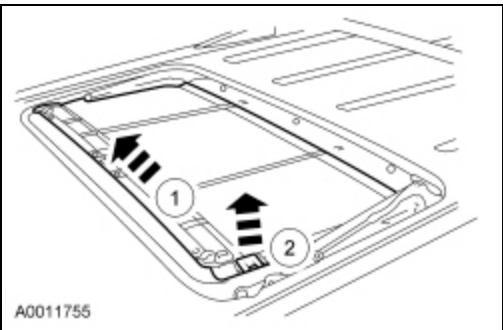

- 4. Slide the roof opening panel shield forward and release the rear guide feet.

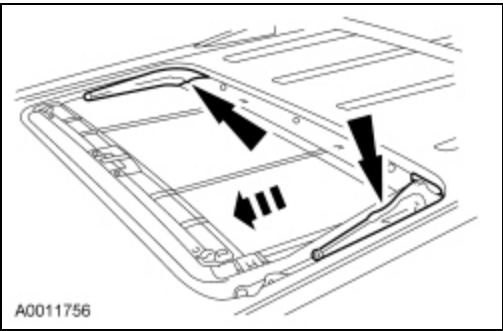

- 5. To install, reverse the removal procedure.

- Align the roof opening panel. For additional information, refer to Roof Opening Panel Alignment in this section.
- Initialize the roof opening panel motor. For additional information, refer to Roof Opening Panel Motor Initialization in this section.