


Trough Assembly




Removal and Installation

NOTE: The roof opening panel motor must be initialized when repairs are carried out on any part of the roof opening panel, including: whenever the roof opening panel motor has been removed from the roof opening panel assembly, a new roof opening panel motor has been installed or when a new roof opening panel frame has been installed. For additional information, refer to *Roof Opening Panel Motor Initialization* in this section.

1. Remove the roof opening panel glass. For additional information, refer to *Roof Opening Panel Glass* in this section.
2. Remove the 2 trough guide retaining screws.

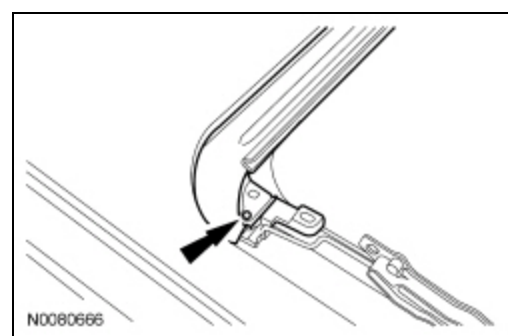

3. Remove the trough from the trough guide assembly.

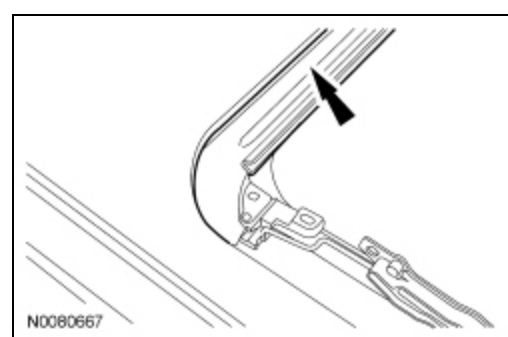

4. To install, reverse the removal procedure.
 - Align the roof opening panel. For additional information, refer to *Roof Opening Panel Alignment* in this section.
 - Initialize the roof opening panel motor. For additional information, refer to *Roof Opening Panel Motor Initialization* in this section.