


Bumper Cover — Front




F-150 Except F-150 SVT Raptor

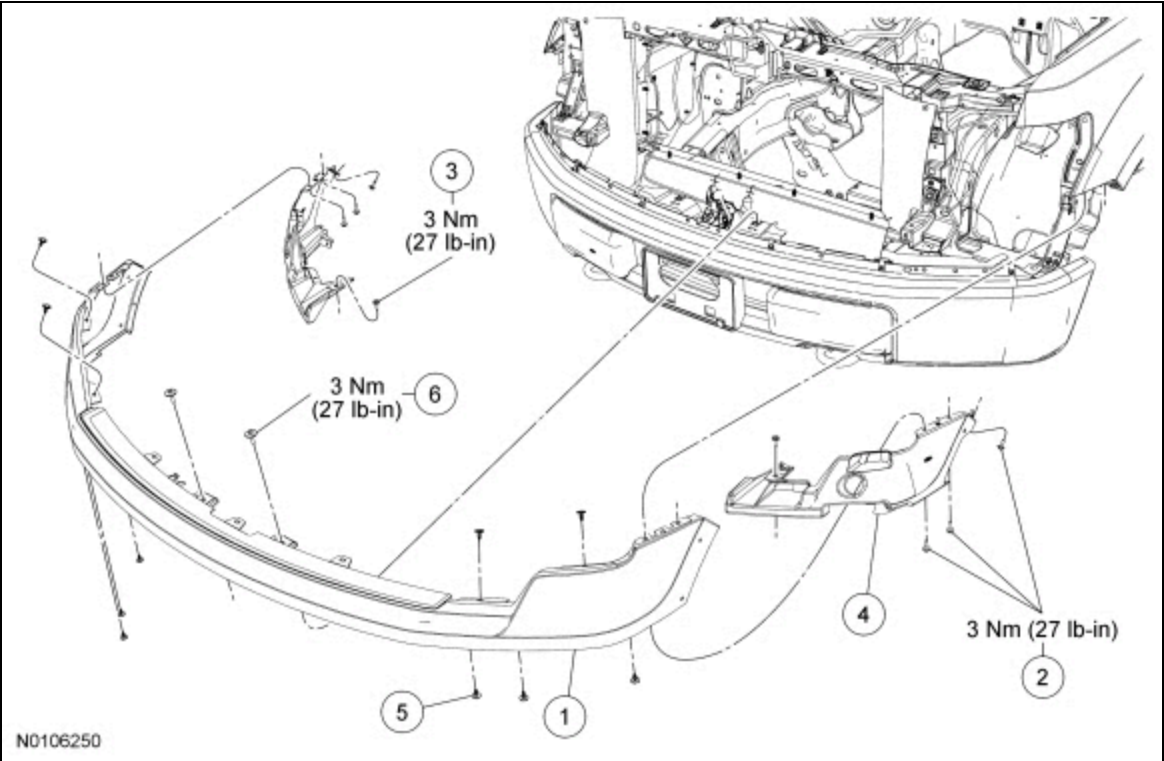

Item	Part Number	Description
1	17D957 17D957	Front bumper cover
2	W505424 W505424	Front bumper cover-to-fender bolts (6 required)
3	W505424 W505424	Front bumper cover-to-radiator support bolt (2 required)
4	17754 17754 RH/ 17755 LH RH/ 17755 LH	Front bumper cover bracket
5	W705589 W705589	Front bumper cover-to-bumper cover bracket pin-type retainer (10 required)
6	N811847 N811847	Bumper cover-to-bumper bracket bolt (2 required)

F-150 SVT Raptor

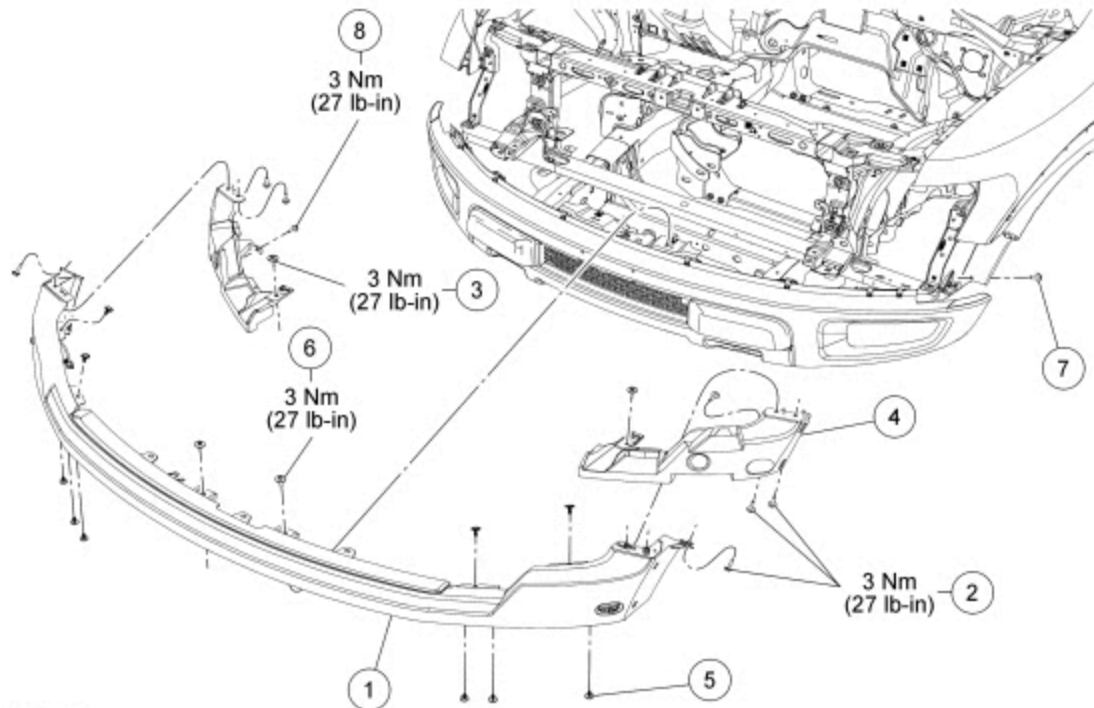

Item	Part Number	Description
1	17D957 17D957	Front bumper cover
2	W505424 W505424	Front bumper cover-to-fender bolts (6 required)
3	W505424 W505424	Front bumper cover-to-radiator support bolt (2 required)
4	17754 17754 RH/ 17755 LH RH/ 17755 LH	Front bumper cover bracket
5	W705589 W705589	Front bumper cover-to-bumper cover bracket pin-type retainer (10 required)
6	N811847 N811847	Front bumper cover-to-bumper bracket bolt (2 required)
7	W705392 W705392	Fender splash shield screw (2 required)
8	W505424 W505424	Lower fender reinforcement-to-bumper cover bracket bolt (2 required)

Removal and Installation

All vehicles

1. Remove the headlamps. For additional information, refer to Section 417-01.
2. Remove the 6 front bumper cover-to-front fender bolts.
 - To install, tighten to 3 Nm (27 lb-in).
3. **NOTE:** Any time the bumper cover-to-bumper bracket bolts are loosened or removed, new bolts must be installed.

 Remove and discard the 2 bumper cover-to-bumper bracket bolts.
 - To install, tighten to 3 Nm (27 lb-in).

Except F-150 SVT Raptor

4. Remove the 10 front bumper cover-to-bumper cover bracket pin-type retainers.

F-150 SVT Raptor

5. Remove the 8 front bumper cover-to-bumper cover bracket pin-type retainers.

Vehicles equipped with fender mouldings

6. Remove the fender mouldings. For additional information, refer to Section 501-08.

All vehicles

7. **NOTE:** *The rearward portion of the front bumper cover must be pulled upward and outward to release it from the bumper cover brackets.*

Remove the front bumper cover.

8. Inspect the bumper cover brackets for damage. If necessary, install new bumper cover brackets.
9. To install, reverse the removal procedure.
 - Install the 2 new bumper cover-to-bumper bolts and tighten to 3 Nm (27 lb-in).