


Bumper — Front


 [Ford Ecat Electronic Parts Catalog](#)

F-150 Except F-150 SVT Raptor

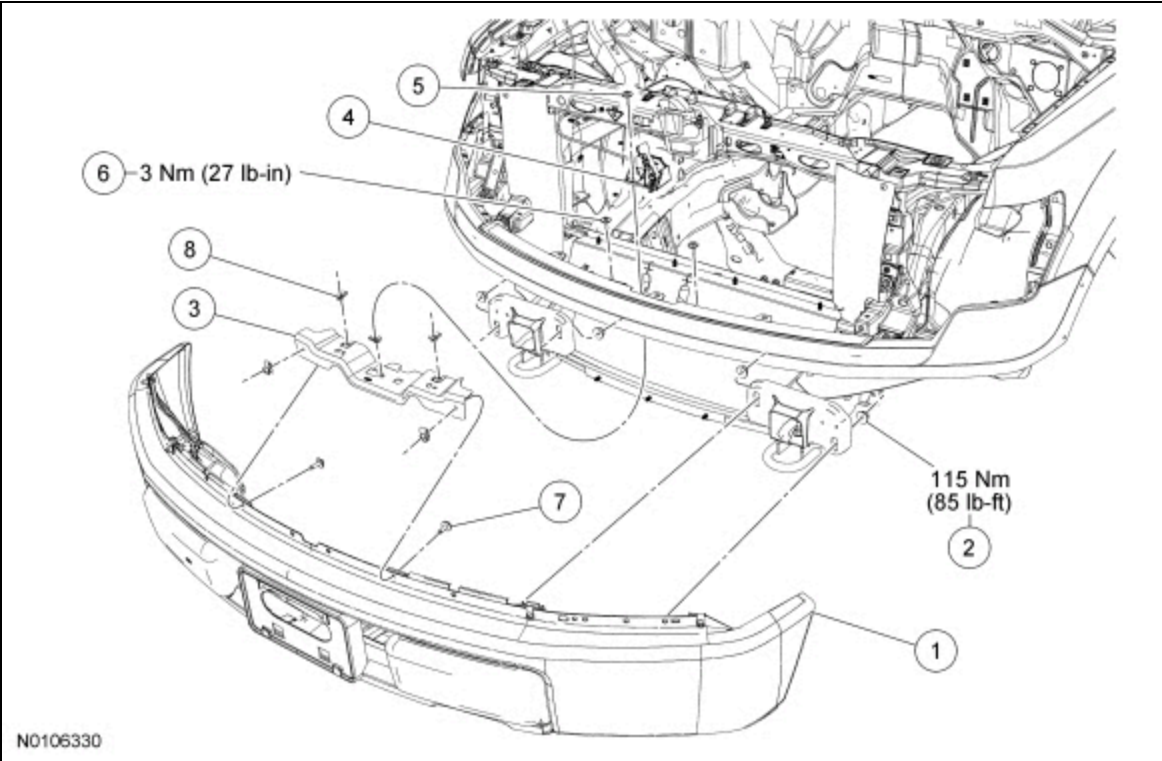

Item	Part Number	Description
1	17D957 17D957	Front bumper
2	N804525 N804525 -S-S	Front bumper nut (4 required)
3	17C947 17C947	Bumper cover-to-bumper bracket
4	16B975 16B975	Hood release
5	N811847 N811847	Hood release bolt
6	N811847 N811847	Bumper cover-to-bumper bracket bolt (2 required)
7	N811847 N811847	Bumper bracket-to-bumper bolt (2 required)
8	W520802 W520802	Bumper J-clip nut (5 required)

F-150 SVT Raptor

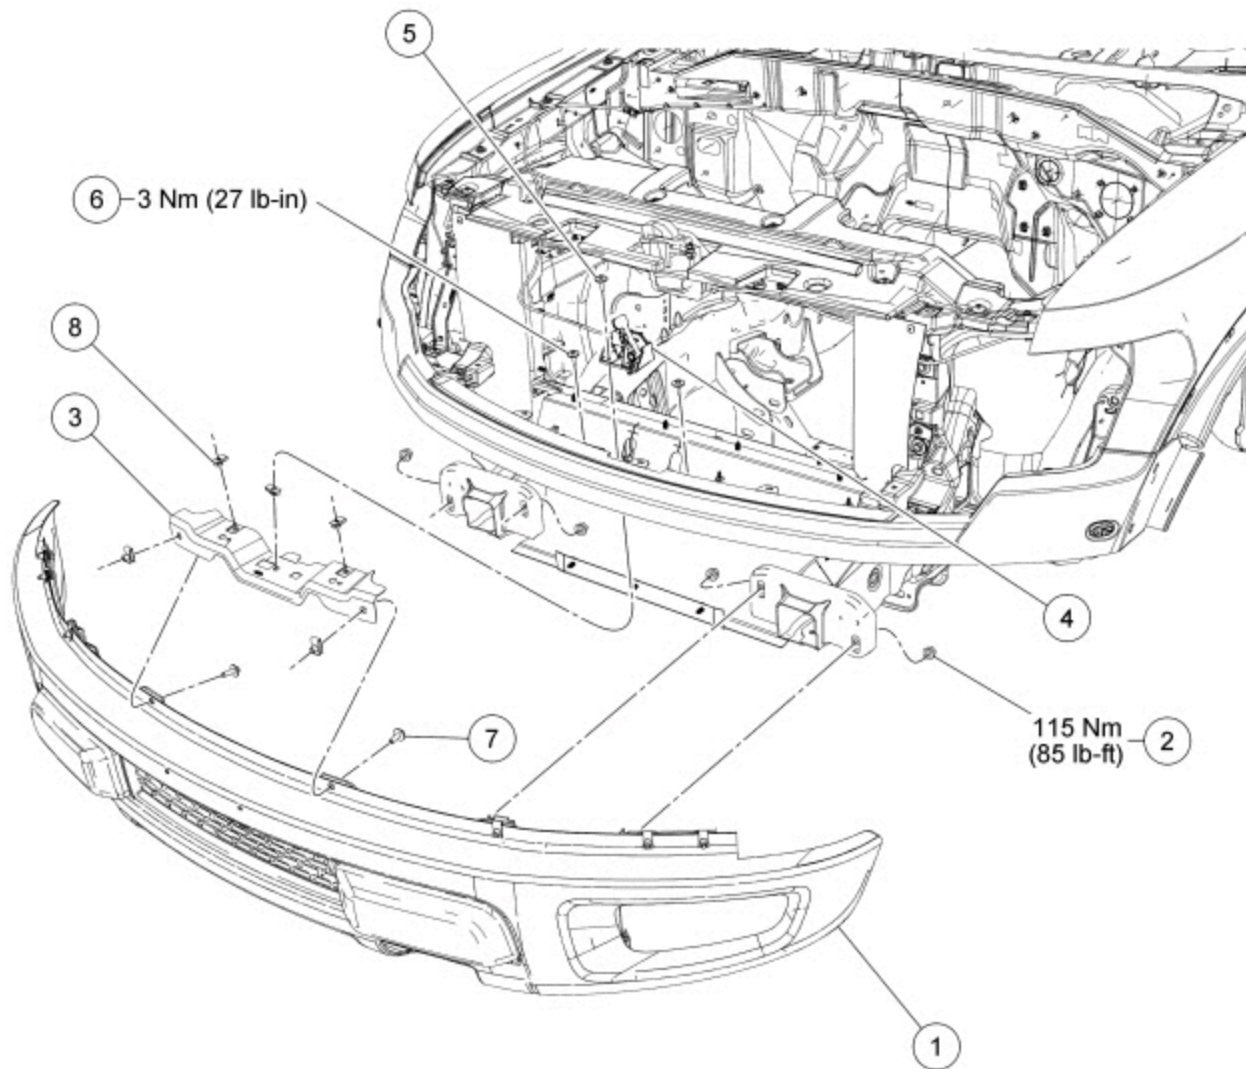

N0106331

Item	Part Number	Description
1	17F813 17F813	Front bumper
2	N804525 N804525 -S-S	Front bumper nut (4 required)
3	17C947 17C947	Bumper cover-to-bumper bracket
4	16B975 16B975	Hood release
5	N811847 N811847	Hood release bolt
6	N811847 N811847	Bumper cover-to-bumper bracket bolt (2 required)
7	N811847 N811847	Bumper bracket-to-bumper bolt (2 required)
8	W520802 W520802	Bumper J-clip nut (5 required)

Removal and Installation

1. Remove the hood release retaining bolt.
2. Position aside the hood release assembly.
 - Disconnect the hood release cable routing retainer.

3. Remove the 2 bumper cover-to-bumper bracket bolts.
 - To install, tighten to 3 Nm (27 lb-in).
4. If equipped, disconnect the fog lamp electrical connectors.
5. **NOTE:** *To assist with bumper alignment, mark the 4 bumper mounting nuts to the bumper bracket.*

Remove the 4 front bumper nuts.
 - To install, tighten to 115 Nm (85 lb-ft).
6. Remove the front bumper.
7. To install, reverse the removal procedure.