


Safety Belt Buckle — Front, Center

 [Ford Ecat Electronic Parts Catalog](#)

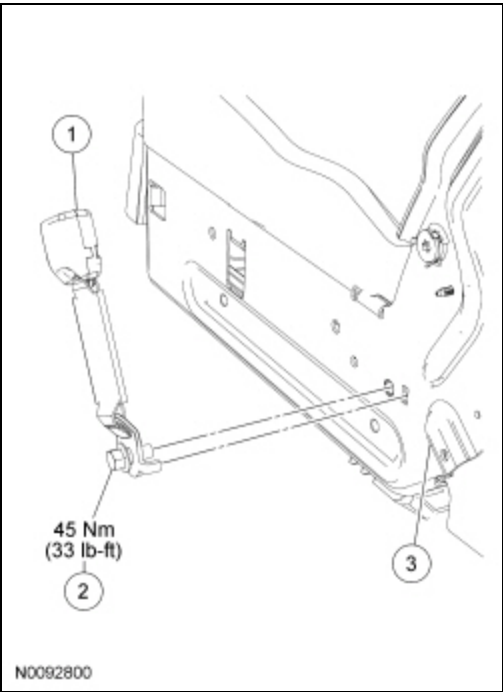

Item	Part Number	Description
1	611B70 611B70	Safety belt buckle
2	—	Safety belt buckle bolt (part of 611B70)
3	61708 61708	Front center seat base frame

WARNING: All seatbelt components must be inspected and corrected as part of any collision repair. Inspect all seatbelt components as prescribed by Seatbelt Procedure After a Collision found in Section 501-20A General Procedures of this manual. Failure to follow this instruction may result in incorrect operation of the seatbelt system and increase the risk of serious personal injury or death in a crash.

1. Remove the front center seat. For additional information, refer to the Removal and Installation portion of Section 501-10.
2. Remove the LH side shield. For additional information, refer to the Front Center Seat Exploded View procedure in the Removal and Installation portion of Section 501-10.
3. Remove the bolt and safety belt buckle.
 - To install, tighten to 45 Nm (33 lb-ft).
4. **NOTE:** Before installation, make sure the safety belt webbing is not twisted and the safety belts and buckles are accessible to the occupants.

To install, reverse the removal procedure.
5. Check the active restraint system for correct operation. For additional information, refer to the appropriate Functional Test procedure in Safety Belt System in this section.