


Safety Belt Buckle — Front



NOTE: Driver seat shown, passenger similar.

NOTE: Refer to the installation steps in Section 501-10 for tightening sequence and torque specification.

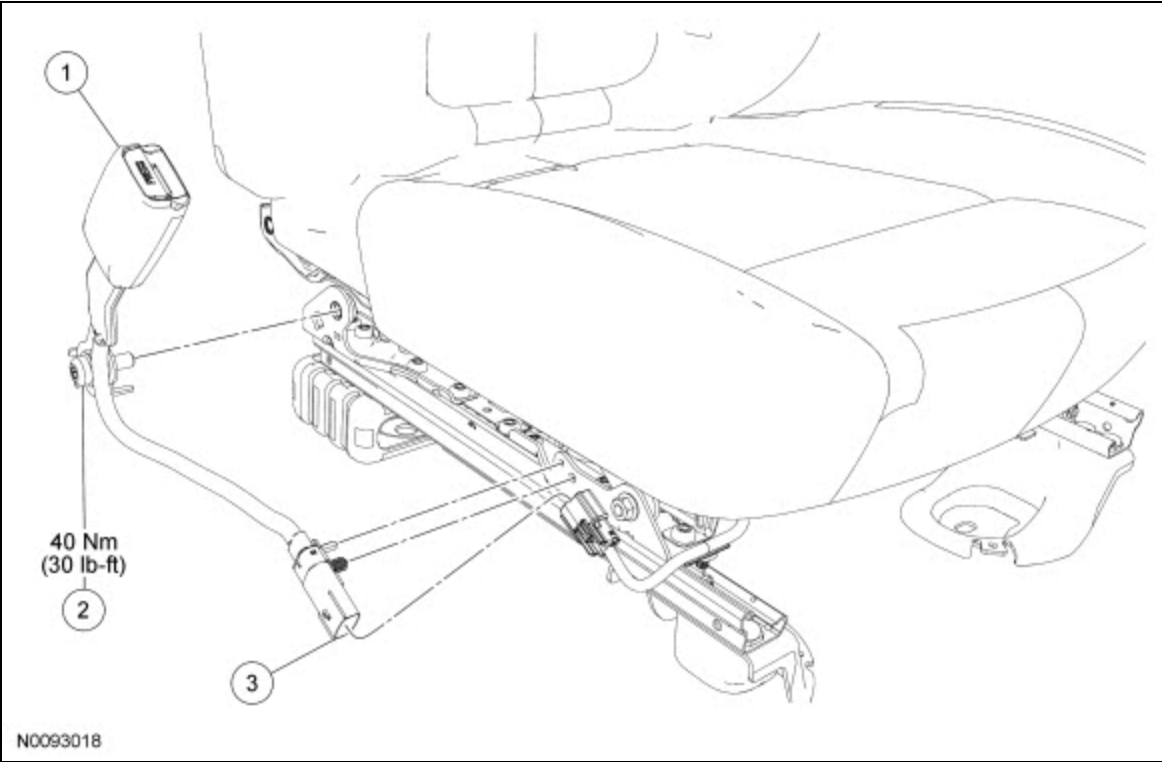

Item	Part Number	Description
1	61203 61203	Safety belt buckle
2	—	Safety belt buckle bolt (part of 61203)
3	—	Electrical connector

WARNING: All seatbelt components must be inspected and corrected as part of any collision repair. Inspect all seatbelt components as prescribed by Seatbelt Procedure After a Collision found in Section 501-20A General Procedures of this manual. Failure to follow this instruction may result in incorrect operation of the seatbelt system and increase the risk of serious personal injury or death in a crash.

WARNING: Never disassemble or tamper with seatbelt deployable components, including pretensioners, load limiters and inflators. Never back probe deployable device electrical connectors. Tampering or back probing may cause an accidental deployment and result in personal injury or death.

1. Remove the seat. For additional information, refer to Section 501-10.
2. Disconnect the electrical connector and detach the wiring harness pin-type retainer.
3. Remove the bolt and safety belt buckle.
 - If equipped, pull the safety belt buckle through the seat cushion trim located on the side of the seat.
 - To install, tighten to 40 Nm (30 lb-ft).

4. **NOTE:** *Before installation, make sure the safety belt webbing is not twisted and the safety belts and buckles are accessible to the occupants.*

To install, reverse the removal procedure.

5. Install the seat.

- For passenger seat, carry out the Occupant Classification System (OCS) System Reset. For additional information, refer to the General Procedures portion of Section 501-20B.

6. Check the active restraint system for correct operation. For additional information, refer to the appropriate Functional Test procedure in Safety Belt System in this section.