


Safety Belt Buckle — Rear

 [Ford Ecat Electronic Parts Catalog](#)


Crew Cab

NOTE: 40 percent seat riser shown, 60 percent similar.

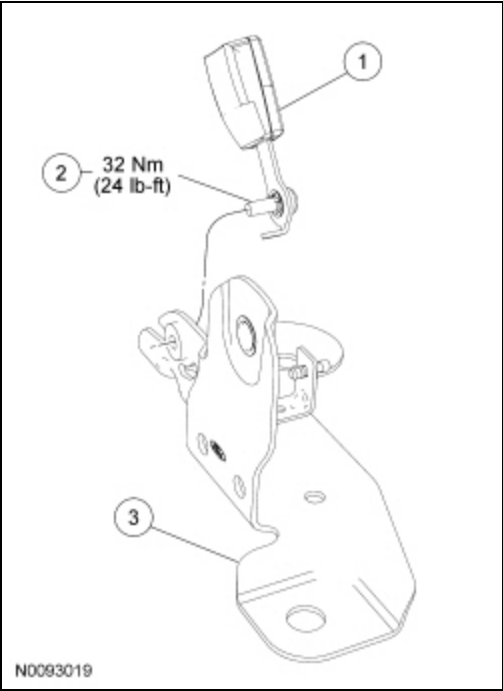

Item	Part Number	Description
1	60044 60044	Safety belt buckle
2	—	Bolt (part of 60044)
3	—	40 percent seat riser

SuperCab

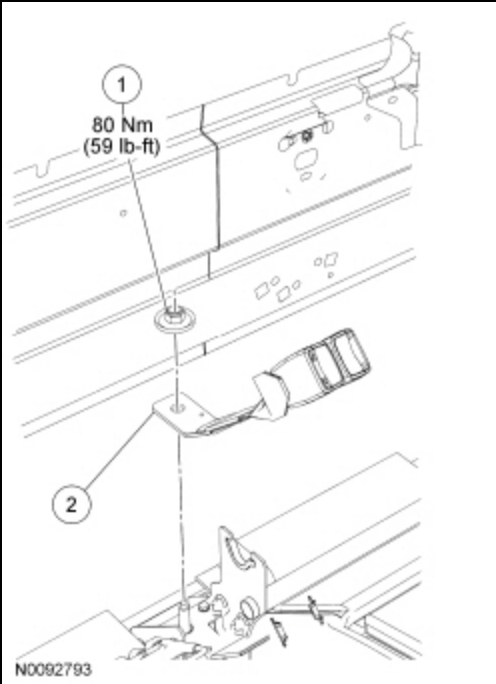

Item	Part Number	Description
1	W708731 W708731	Nut
2	60044 60044	RH safety belt buckle

Removal and Installation

WARNING: All seatbelt components must be inspected and corrected as part of any collision repair. Inspect all seatbelt components as prescribed by Seatbelt Procedure After a Collision found in Section 501-20A General Procedures of this manual. Failure to follow this instruction may result in incorrect operation of the seatbelt system and increase the risk of serious personal injury or death in a crash.

NOTE: The LH rear safety belt buckle is attached to the rear center safety belt retractor anchor. For removal and installation procedures, refer to Safety Belt Retractor — Rear, Center in this section.

Crew Cab

1. Fold the rear seat cushion up.
2. Remove the bolt and safety belt buckle.
 - To install, tighten to 32 Nm (24 lb-ft).

SuperCab

3. Remove the rear seat backrest. For additional information, refer to the appropriate steps in Seat — Rear, SuperCab in the Removal and Installation portion of Section 501-10.
4. Remove the nut and safety belt buckle assembly.
 - To install, tighten to 80 Nm (59 lb-ft).

All vehicles

5. **NOTE:** Before installation, make sure the safety belt webbing is not twisted and the safety belts and buckles are accessible to the occupants.

To install, reverse the removal procedure.
6. Check the active restraint system for correct operation. For additional information, refer to the appropriate Functional Test procedure in Safety Belt System in this section.