


Safety Belt Retractor and Pretensioner — Regular Cab and Crew Cab

 [Ford Ecat Electronic Parts Catalog](#)

NOTE: Crew Cab shown, regular cab similar.

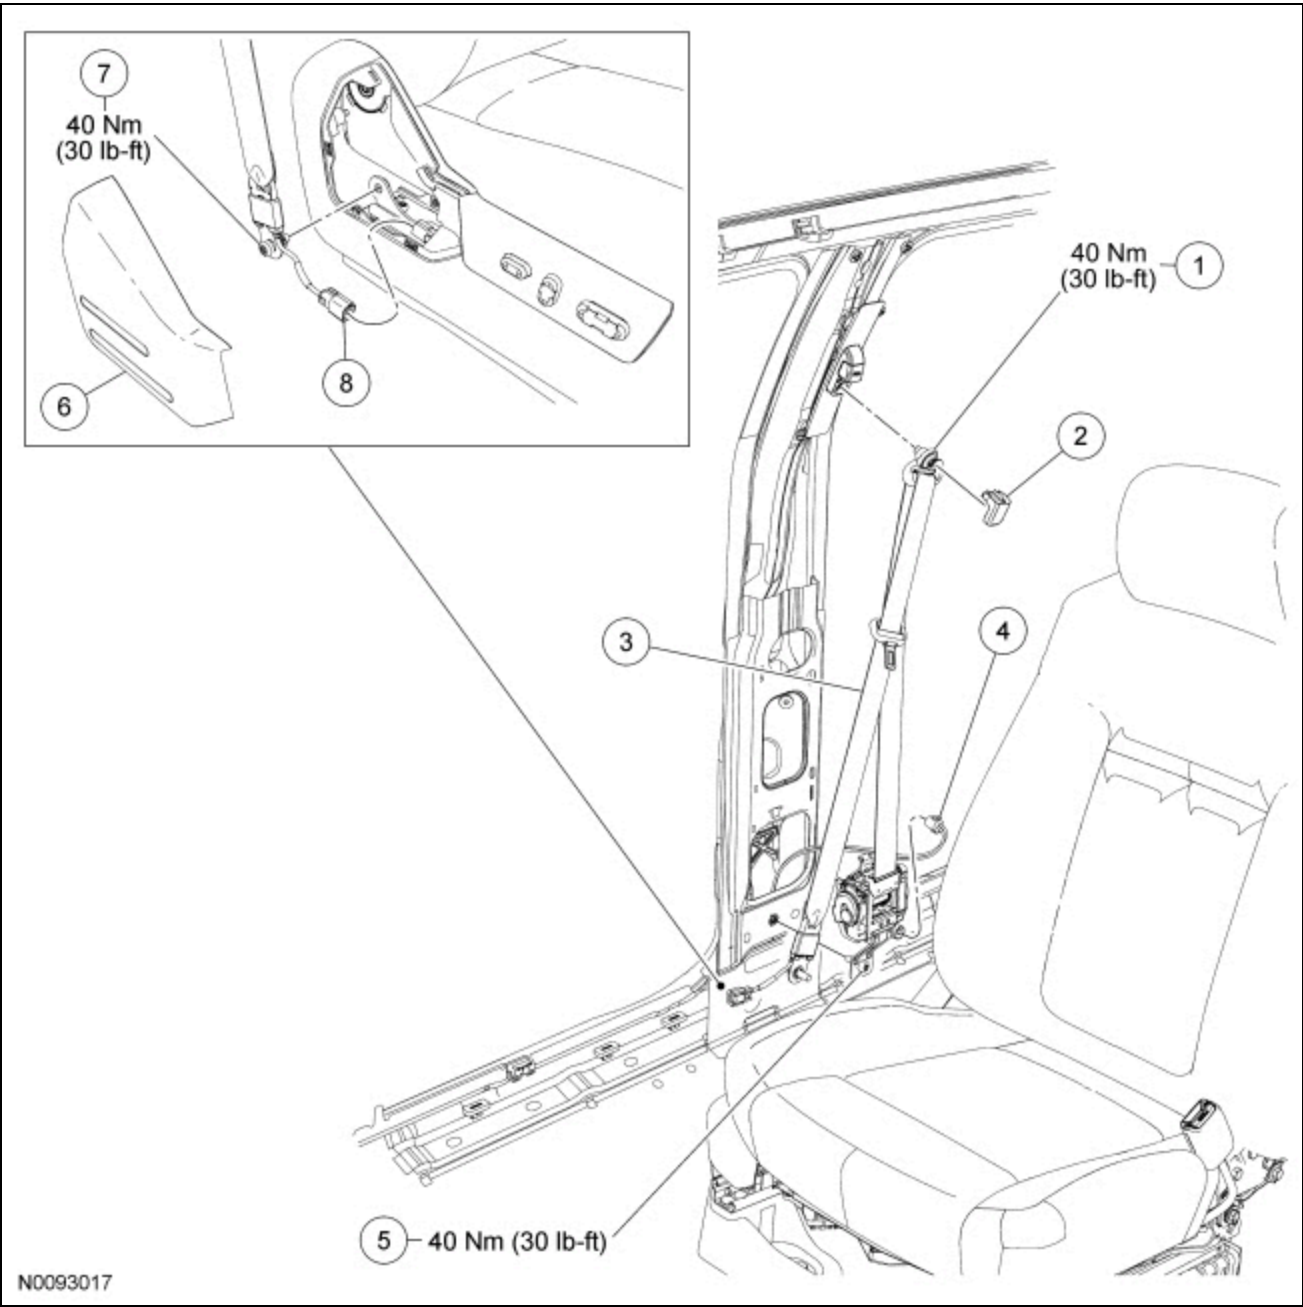

Item	Part Number	Description
1	—	D-ring bolt (part of 612D64)
2	60262 60262	D-ring cover
3	612D64 612D64	Safety belt retractor
4	—	Pretensioner electrical connector (part of 14A005)
5	—	Safety belt retractor bolt (part of 612D64)

6	61692 61692	Safety belt anchor cover
7	—	Safety belt anchor bolt (part of 612D64)
8	—	Belt Tension Sensor (BTS) electrical connector

WARNING: All seatbelt components must be inspected and corrected as part of any collision repair. Inspect all seatbelt components as prescribed by Seatbelt Procedure After a Collision found in Section 501-20A General Procedures of this manual. Failure to follow this instruction may result in incorrect operation of the seatbelt system and increase the risk of serious personal injury or death in a crash.

NOTE: The air bag warning indicator illuminates when the correct Restraints Control Module (RCM) fuse is removed and the ignition is ON.

NOTE: The Supplemental Restraint System (SRS) must be fully operational and free of faults before releasing the vehicle to the customer.

1. Depower the ~~SRS~~ . For additional information, refer to Supplemental Restraint System (SRS) Depowering and Repowering in the General Procedures portion of Section 501-20B.
2. Remove the B-pillar trim panel. For additional information, refer to Section 501-05.
3. Remove the bolt, rotate the retractor to detach the hook from the B-pillar sheet metal and remove the safety belt retractor.
 - To install, tighten to 40 Nm (30 lb-ft).
4. Disconnect the safety belt retractor and pretensioner electrical connector.
5. Remove the safety belt retractor.
6. **NOTE:** Before installation, make sure the safety belt webbing is not twisted and the safety belts and buckles are accessible to the occupants. To install, reverse the removal procedure.

To install, reverse the removal procedure.
7. Repower the ~~SRS~~ . For additional information, refer to Supplemental Restraint System (SRS) Depowering and Repowering in the General Procedures portion of Section 501-20B.
8. Check the active restraint system for correct operation. For additional information, refer to the appropriate Functional Test procedure in Safety Belt System in this section.