


Safety Belt Retractor — Front, Center

 [Ford Ecat Electronic Parts Catalog](#)

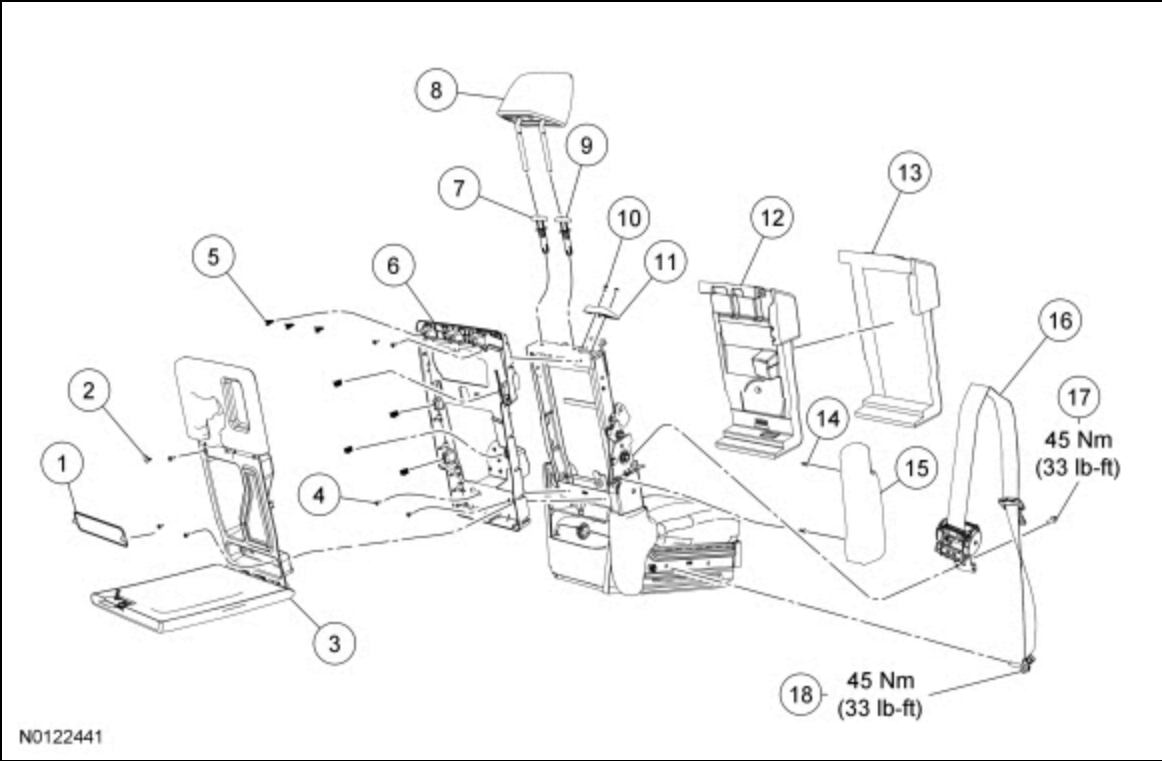

Item	Part Number	Description
1	045G34 045G34	Trim cover
2	W506841 W506841	Screw
3	644A22 644A22	Armrest/storage bin
4	W303547 W303547	Screw (4 required)
5	W711045 W711045	Clip (7 required)
6	—	Armrest/storage bin bracket
7	610A18 610A18	Head restraint guide sleeve (master)
8	611A08 611A08	Head restraint
9	610A18 610A18	Head restraint guide sleeve (slave)
10	W303547 W303547	Screw (2 required)
11	601B30 601B30	Safety belt bezel
12	64810 64810	Backrest foam pad
13	64416 64416	Backrest cover
14	W707211 W707211	Pin-type retainer (part of 672A33) (2 required)
15	672A28 672A28	Backrest latch cover
16	611B64 611B64	Safety belt retractor
17	W505275 W505275	Safety belt retractor bolt
18	—	Safety belt anchor bolt (part of 611B64)

Removal and Installation

WARNING: All seatbelt components must be inspected and corrected as part of any collision repair. Inspect all seatbelt components as prescribed by Seatbelt Procedure After a Collision found in Section 501-20A General Procedures of this manual. Failure to follow this instruction may result in incorrect operation of the seatbelt system and increase the risk of serious personal injury or death in a crash.

1. Remove the front center seat. For additional information, refer to Section 501-10.
2. Open the arm rest cover, remove the 3 screws and armrest storage bin.
3. Push the release buttons and remove the head restraint.
4. Remove and discard the 2 head restraint guide sleeves. For additional information, refer to section Section 501-10.
5. Remove the 2 screws and center seat belt retractor bezel.
6. Detach the backrest cover from the storage bin bracket.
7. Remove the safety belt anchor bolt.
 - To install, tighten to 45 Nm (33 lb-ft).
8. Remove the 4 screws to the armrest storage bin bracket and position aside.
9. Remove the bolt and safety belt retractor.
 - To install, tighten to 45 Nm (33 lb-ft).
10. **NOTE:** *Before installation, make sure the safety belt webbing is not twisted and the safety belts and buckles are accessible to the occupants.*

To install, reverse the removal procedure.

11. Check the active restraint system for correct operation. For additional information, refer to the appropriate Functional Test procedure in Safety Belt System in this section.