


Safety Belt Retractor — Rear, Center

 [Ford Ecat Electronic Parts Catalog](#)


SuperCab

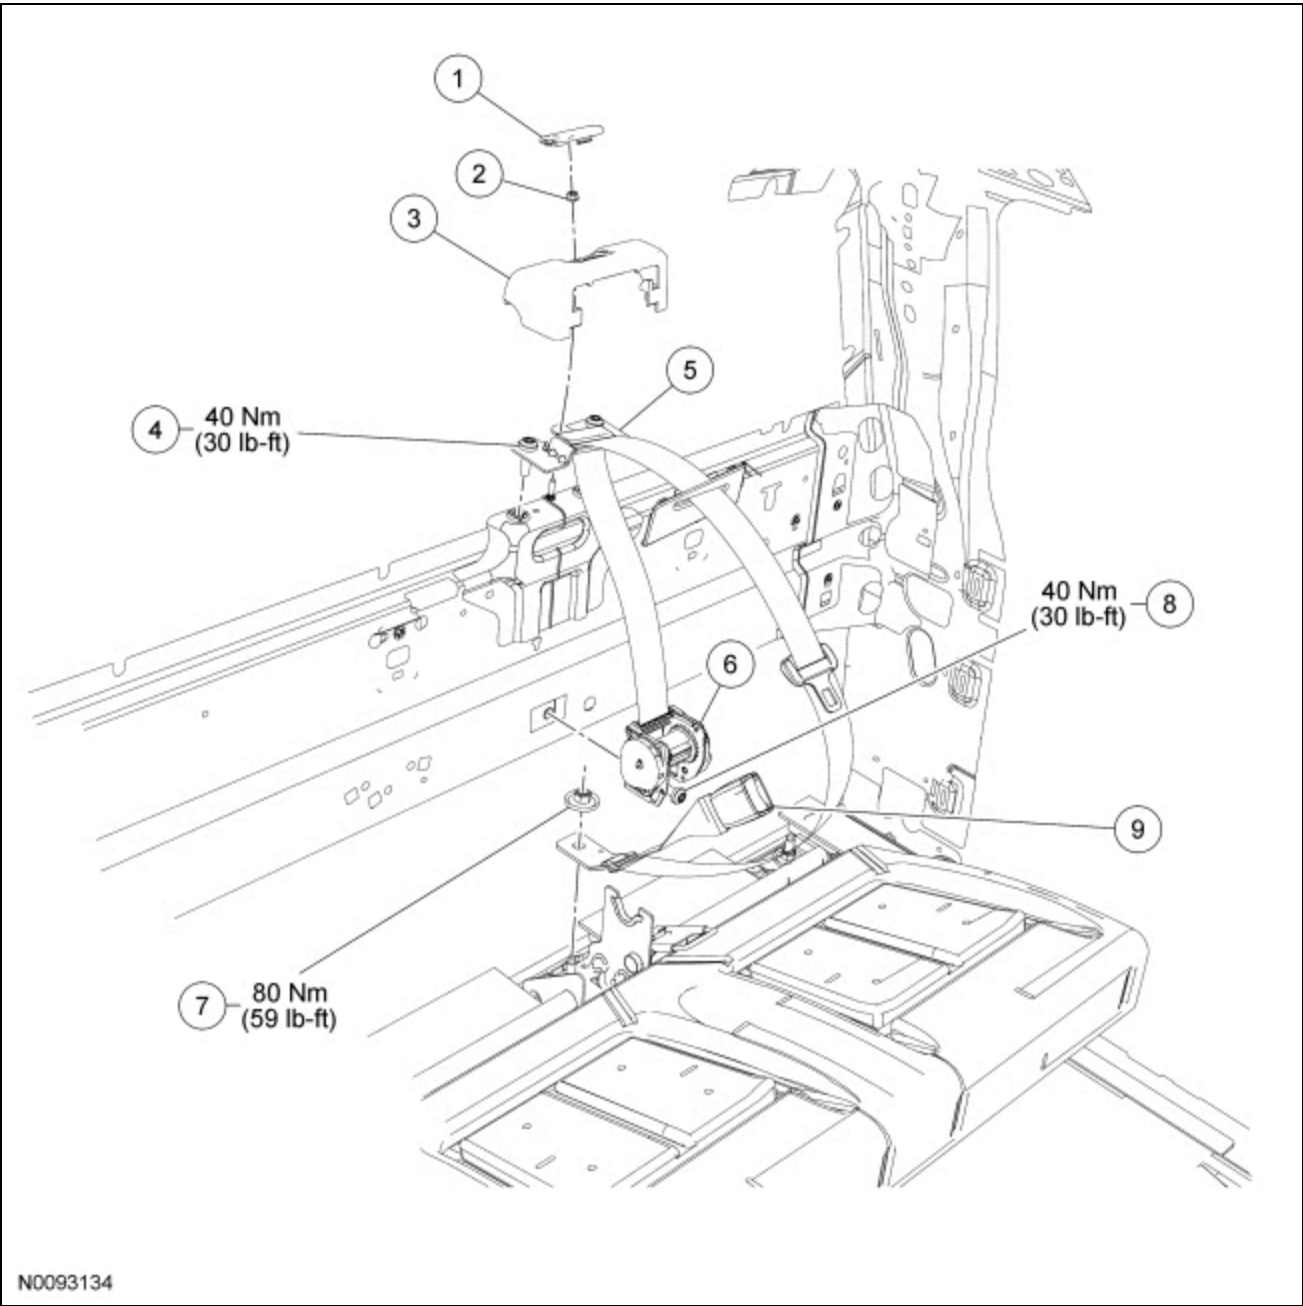

Item	Part Number	Description
1	601B32 601B32	Nut cover
2	W707142 W707142	Nut
3	60220 60220	Tower cover bezel
4	—	Turning loop bolt (part of 611B64) (2 required)
5	—	Turning loop (part of 611B64)
6	611B64 611B64	Safety belt retractor

7	W708731 W708731	Safety belt retractor anchor nut
8	—	Safety belt retractor bolt (part of 611B64)
9	—	Safety belt retractor anchor and buckle (part of 611B64)

Crew Cab

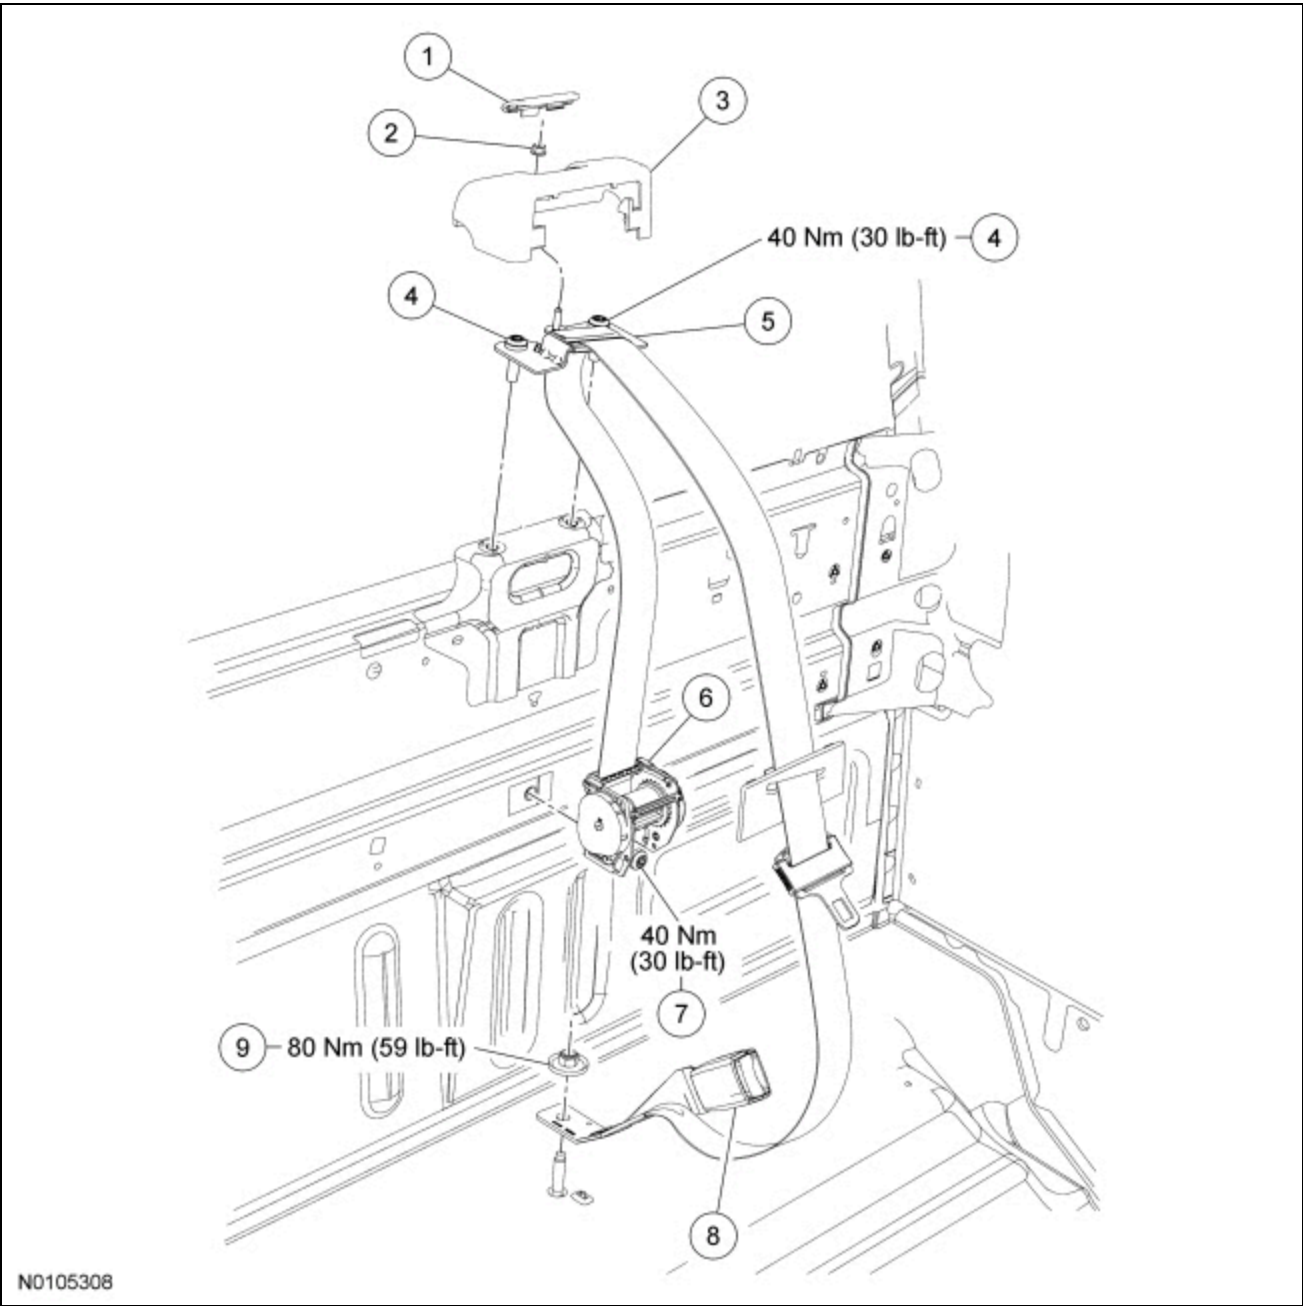


Item	Part Number	Description
1	601B32 601B32	Nut cover
2	W707142 W707142	Nut
3	60220 60220	Tower cover bezel
4	—	Turning loop bolts (part of 611B64) (2 required)
5	—	Turning loop (part of 611B64)
6	611B64 611B64	Safety belt retractor
7	—	Safety belt retractor bolt (part of 611B64)

8	—	Safety belt retractor anchor and buckle (part of 611B64)
9	W708731 W708731	Safety belt retractor anchor nut

Removal and Installation

WARNING: All seatbelt components must be inspected and corrected as part of any collision repair. Inspect all seatbelt components as prescribed by Seatbelt Procedure After a Collision found in Section 501-20A General Procedures of this manual. Failure to follow this instruction may result in incorrect operation of the seatbelt system and increase the risk of serious personal injury or death in a crash.

1. For SuperCab, remove the rear seat backrest. For additional information, refer to the appropriate steps in Seat — Rear, SuperCab in the Removal and Installation portion of Section 501-10.
2. For Crew Cab, remove the rear seat. For additional information, refer to Removal and Installation portion of Section 501-10.
3. Remove the 5 pin-type retainers and rear sound insulator.

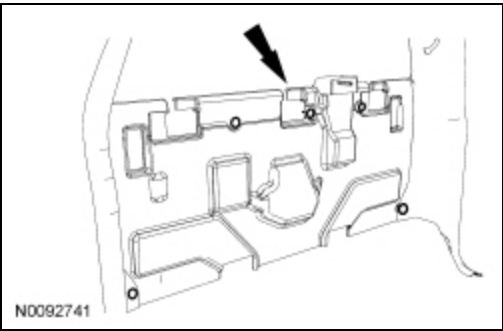

4. Remove the tower cover bezel.
 - Pry up on the front, middle portion of the nut cover and remove.
 - Remove the nut.
 - Remove the tower cover bezel.
5. Remove the bolts and turning loop.
 - To install, tighten to 40 Nm (30 lb-ft).
6. For SuperCab, remove the nut and safety belt retractor anchor.
 - To install, tighten to 80 Nm (59 lb-ft).
7. Remove the bolt and safety belt retractor.
 - To install, tighten to 40 Nm (30 lb-ft).
8. **NOTE:** Before installation, make sure the safety belt webbing is not twisted and the safety belts and buckles are accessible to the occupants.

To install, reverse the removal procedure.

9. Check the active restraint system for correct operation. For additional information, refer to the appropriate Functional Test procedure in Safety Belt System in this section.