

Airbag and Safety Belt Pretensioner Supplemental Restraint System (SRS)




The airbag SRS is designed to provide increased collision protection for front seat occupants in addition to that provided by the 3-point safety belt system. Safety belt use is necessary to obtain the best occupant protection and to receive the full advantage of the SRS .

This vehicle line contains dual-stage deployment (advanced restraint system) driver and front passenger airbags.

The serviceable airbag and safety belt pretensioner SRS components are shown in the following illustrations.


Airbag and Safety Belt Pretensioner Supplemental Restraint System (SRS) Components (Illustration 1 of 2)

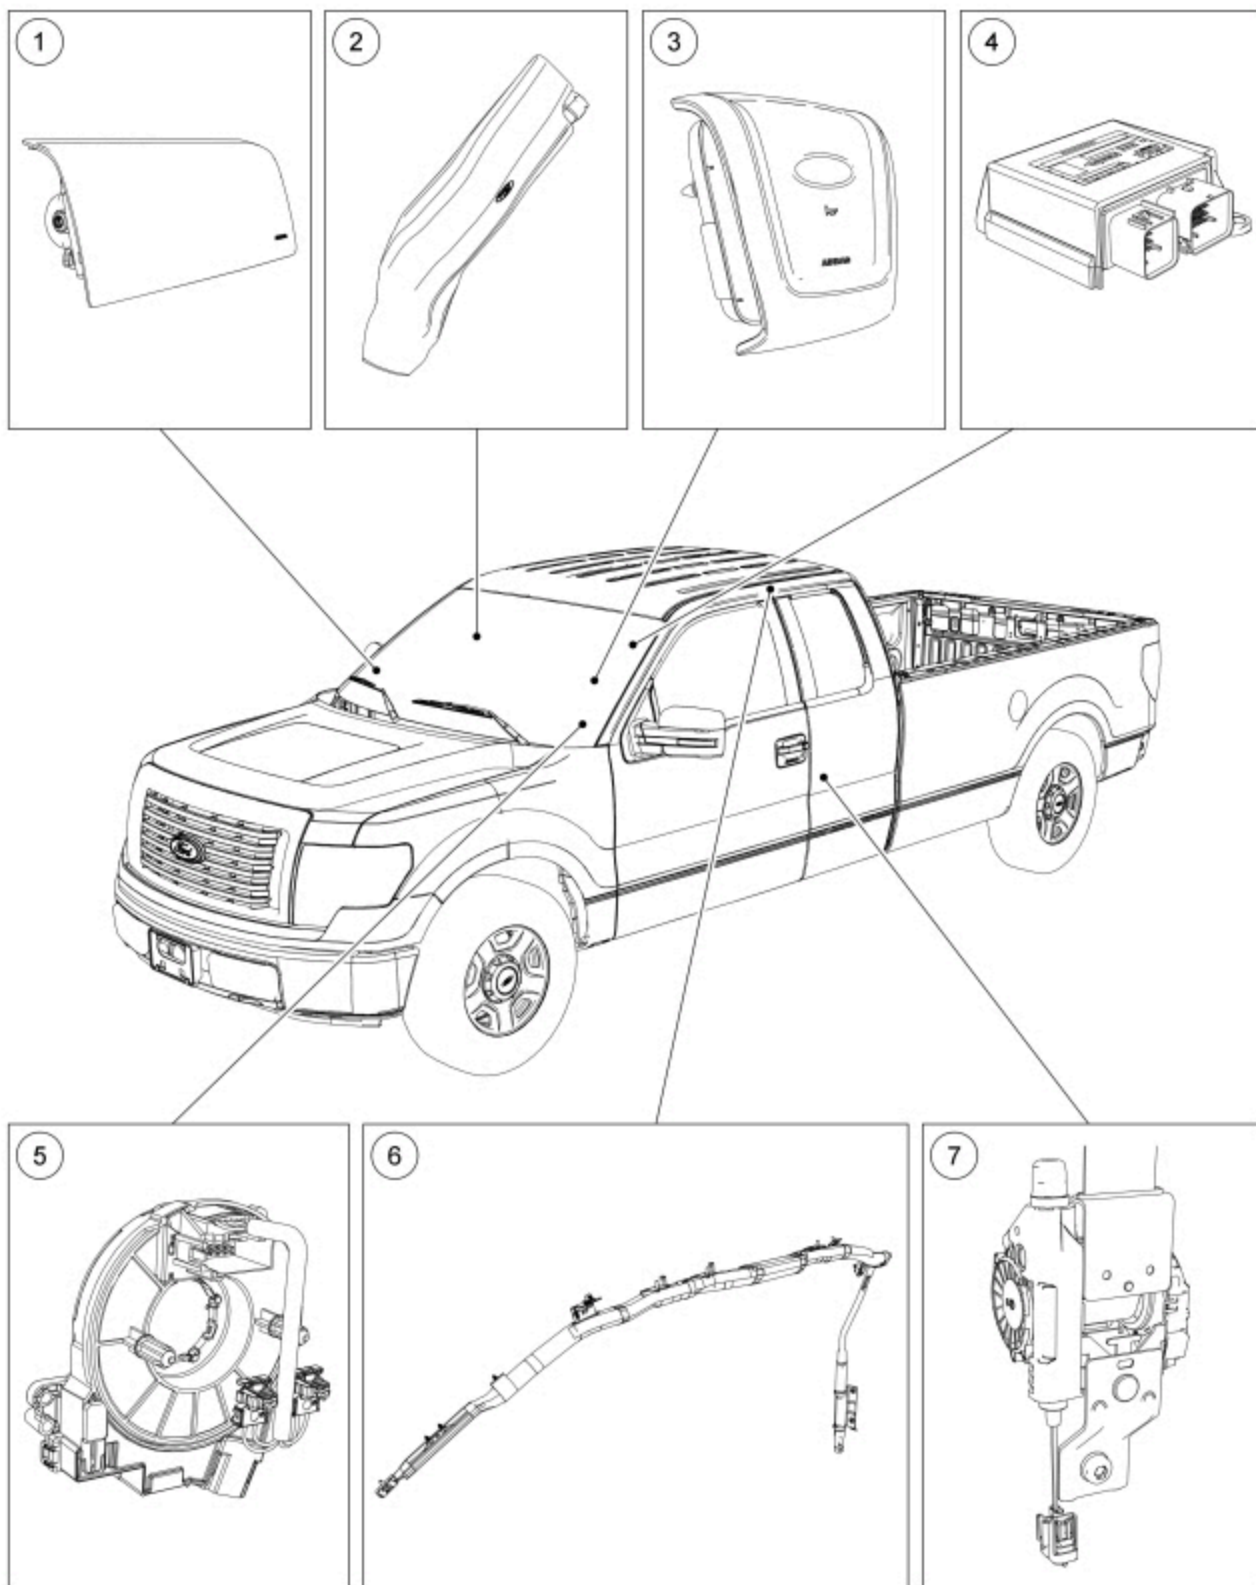

N0119850

Item	Part Number	Description
1	044A74 044A74	Passenger airbag
2	611D11 611D11 /611D10/611D10	Driver/passenger seat side airbag
3	043B13 043B13	Driver airbag
4	14B321 14B321	RCM
5	14A664 14A664	Clockspring
6	042D95 042D95 /042D94/042D94	Driver/passenger Safety Canopy®
7	611B09 611B09 /611B08/611B08	Driver/passenger safety belt retractor pretensioner assembly

Airbag and Safety Belt Pretensioner Supplemental Restraint System (SRS) Components (Illustration 2 of 2)

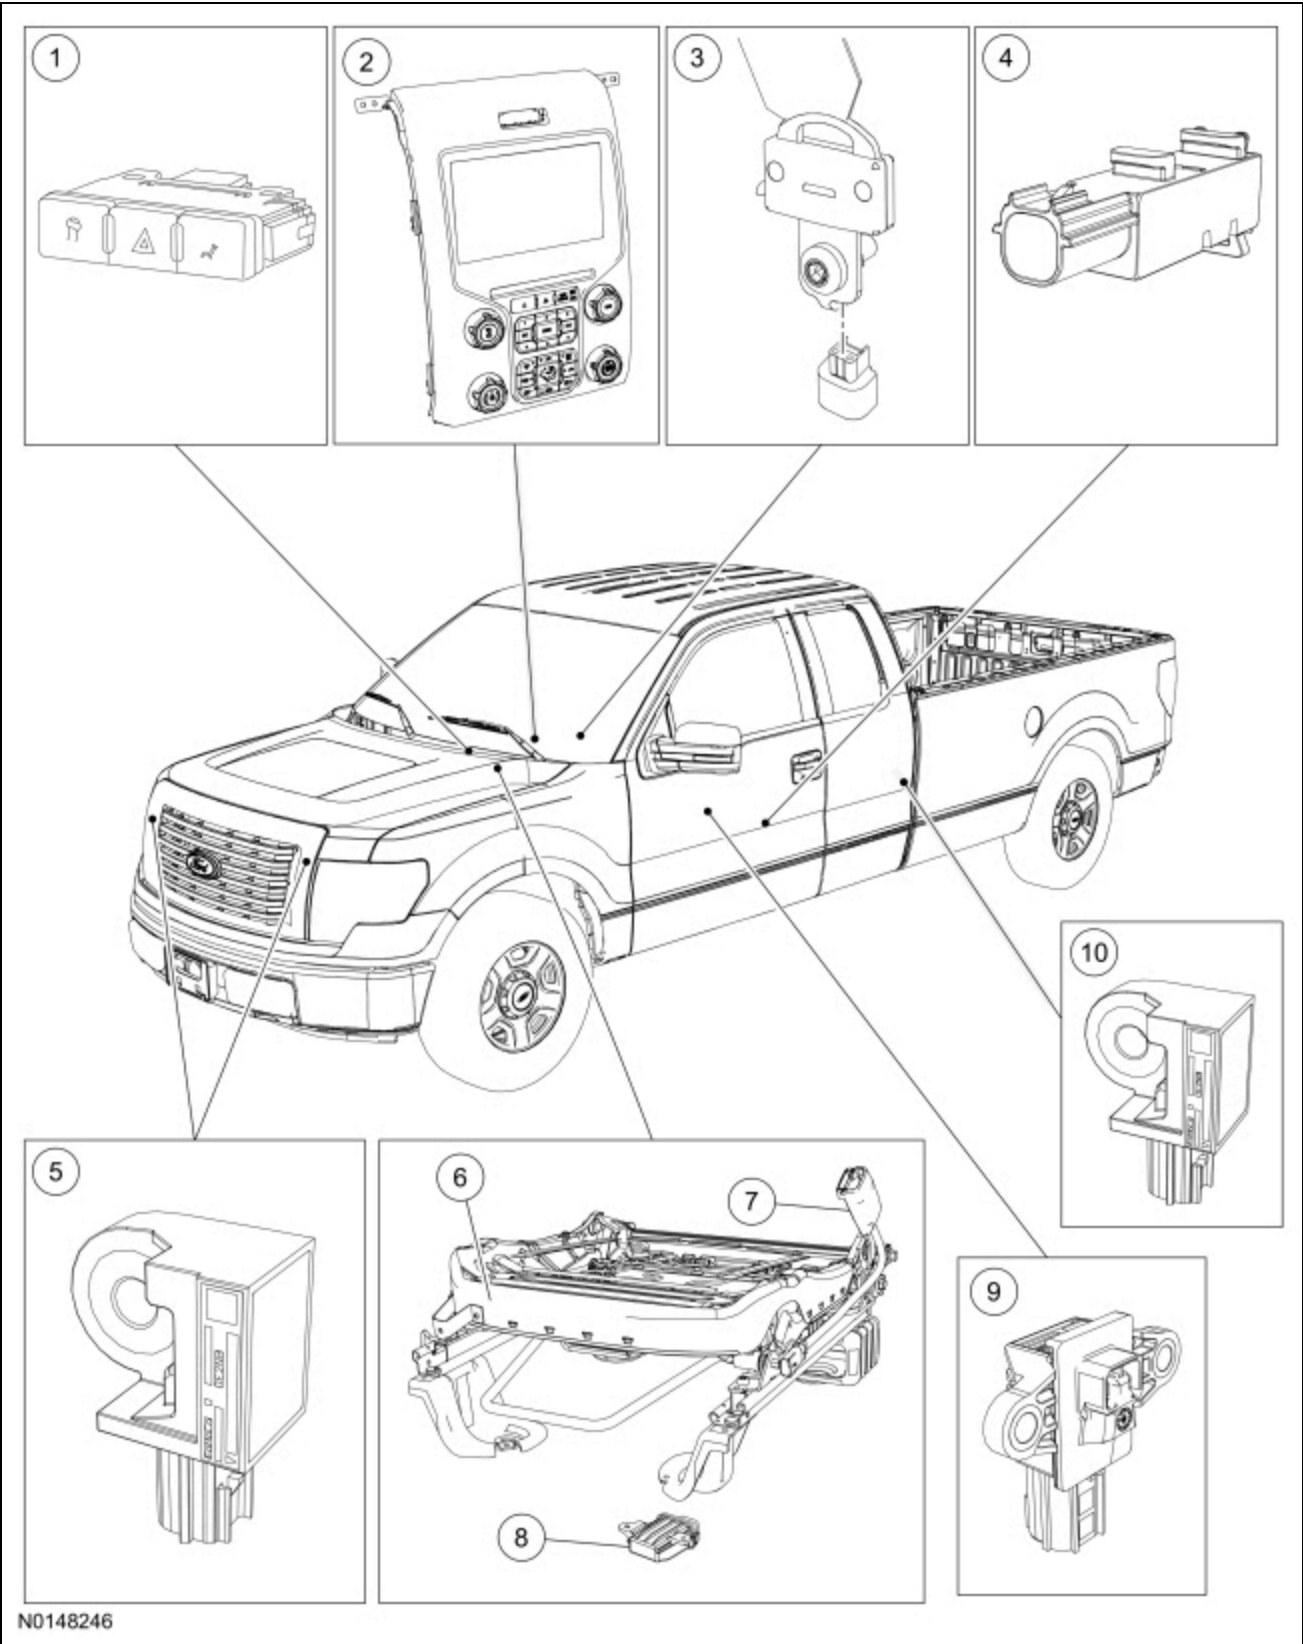

Item	Part Number	Description
1	2C4182C418	PAD indicator (part of hazard/traction control switch assembly) (vehicles without 4.2" LCD IPC display only)
2	1884218842	FCIM (includes PAD indicator) (vehicles with 4.2" LCD IPC display)

		only)
3	611B08 611B08	BTS (part of passenger safety belt retractor pretensioner assembly)
4	14B416 14B416	Driver seat track position sensor
5	14B004 14B004	LH/RH front impact severity sensor
6	61704 61704 (manual seat)/61710 (power seat) (manual seat)/61710 (power seat)	Passenger seat track assembly (includes QCS weight sensor bolts)
7	61203 61203 /61202/61202	Driver/passenger safety belt buckle (includes safety belt buckle switch)
8	14B056 14B056	QCSM
9	14B345 14B345	Driver/passenger front door side impact sensor (pressure sensor)
10	14B004 14B004	Driver/passenger second row side impact sensor