


Clockspring

 [Ford Ecat Electronic Parts Catalog](#)

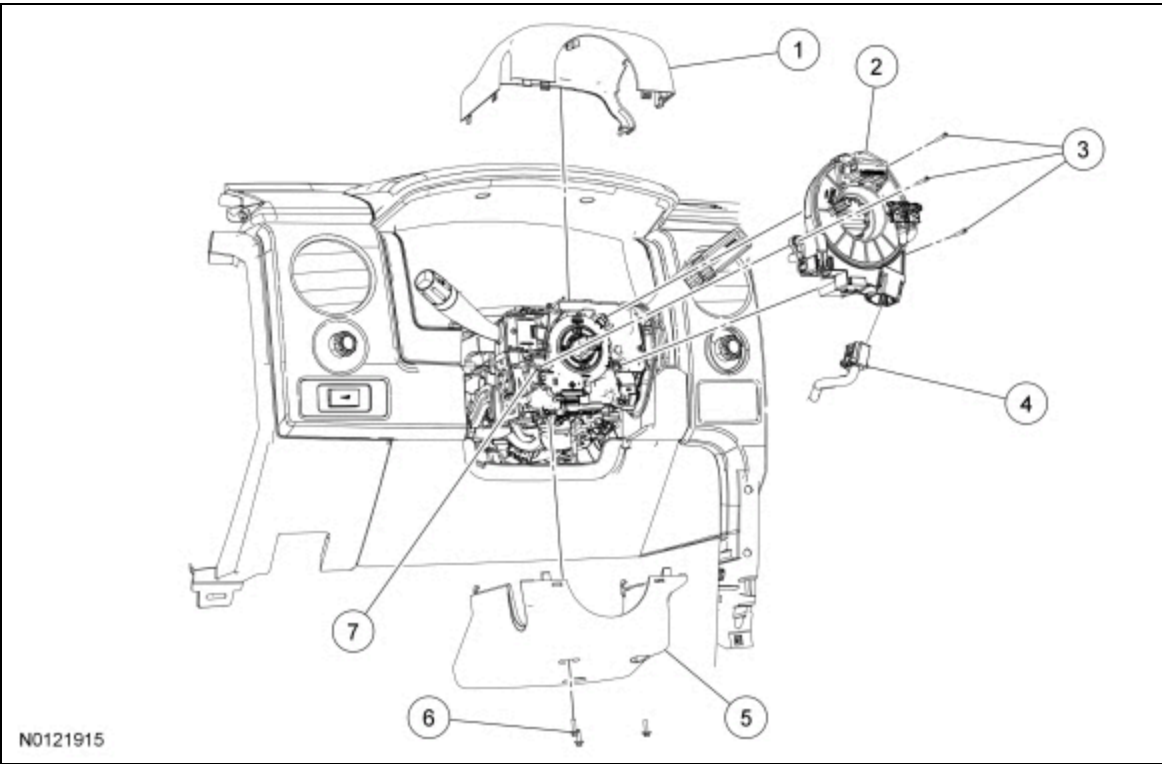

Item	Part Number	Description
1	3530 3530	Upper steering column shroud
2	14A664 14A664	Clockspring
3	W506943 W506943	Clockspring screws (3 required)
4	—	Clockspring electrical connector (part of 14401)
5	3530 3530	Lower steering column shroud
6	—	Lower steering column shroud screw (3 required)
7	3F791 3F791	Steering Column Control Module (SCCM)

Removal

NOTE: The air bag warning indicator illuminates when the correct Restraints Control Module (RCM) fuse is removed and the ignition is ON.

NOTE: The Supplemental Restraint System (SRS) must be fully operational and free of faults before releasing the vehicle to the customer.

1. Remove the driver air bag module. For additional information, refer to Driver Airbag in the Removal and Installation portion of this section.
2. Remove the steering wheel. For additional information, refer to Section 211-04.
3. Remove the upper and lower steering column shrouds.


1. Remove the 3 screws.
2. Unclip the lower steering column shroud from the upper steering column shroud and remove.
 - If equipped, position the selector lever boot aside.
4. Disconnect the clockspring electrical connector.
5. Remove the 3 screws and clockspring.

Installation


WARNING: If the clockspring is not correctly centralized, it may fail prematurely. If in doubt, repeat the centralizing procedure. Failure to follow these instructions may increase the risk of serious personal injury or death in a crash.

NOTE: Typical clockspring shown. Only the 6.2L application is equipped with the steering wheel rotation sensor located behind the clockspring. All other engine applications, the steering wheel rotation sensor is part of the Electronic Power Assist Steering (EPAS) and is not serviced separately.

1. Position the clockspring onto the steering column.
 - Align the electrical connector ends and the 2 clockspring pins on the back of the clockspring to the 2 steering wheel rotation sensor pin holes.

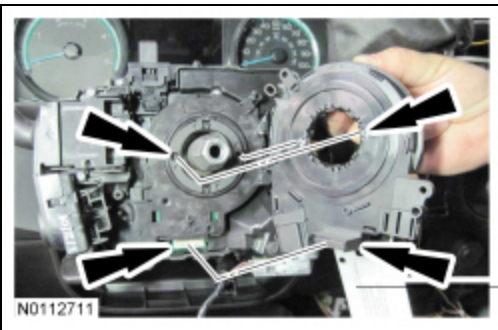

2. With the clockspring pins aligned to the steering wheel rotation sensor pin holes, push the clockspring in, seating the electrical connector.

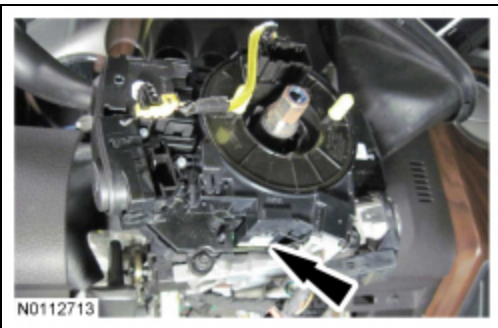

3. **NOTICE: If installing a new clockspring, do not remove the clockspring anti-rotation key until the steering wheel is installed. If the anti-rotation key has been removed before installing the steering wheel, the clockspring must be centered. Failure to follow this instruction may result in component damage and/or system failure.**

Install the 3 clockspring screws.


4. Connect the clockspring electrical connector.
5. **WARNING: If the clockspring is not correctly centralized, it may fail prematurely. If in doubt, repeat the centralizing procedure. Failure to follow these instructions may increase the risk of serious personal injury or death in a crash.**

NOTICE: Do not over-rotate the clockspring inner rotor. The internal ribbon wire is connected to the clockspring rotor. The internal ribbon wire acts as a stop and can be broken from its internal connection. Failure to follow this instruction may result in component damage and/or system failure.

If a new clockspring was installed and the anti-rotation key has not been removed **proceed to Step 7**.

If a new clockspring was installed and the anti-rotation key has been removed before the steering wheel is installed, or the same clockspring is being installed, rotate the clockspring inner rotor **counterclockwise**. Carefully feel for the ribbon wire to run out of length with slight resistance and stop rotating the clockspring inner rotor.

6. To center the clockspring, start with the clockspring rotated fully counterclockwise as indicated in Step 5. Rotate the clockspring inner rotor, wiring and connector clockwise through 3.5 full revolutions with the connector up in the 12 o'clock position. Verify that the clockspring is correctly centralized by observing that the clockspring rotor, wiring and connector are in the 12 o'clock position.

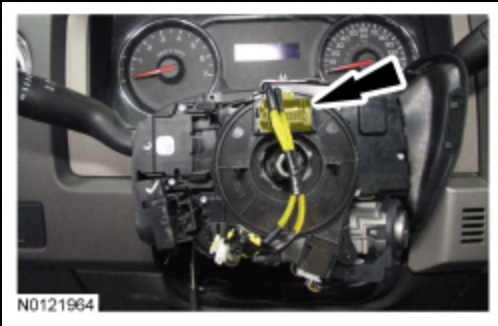

7. Install the lower steering column shroud and 3 screws.
8. Attach the upper steering column shroud to the lower steering column shroud.
 - If equipped, position back the selector lever boot.
9. Install the steering wheel. For additional information, refer to Section 211-04.
10. If a new clockspring was installed, remove the anti-rotation key.
11. Install the driver air bag module. For additional information, refer to Driver Airbag in the Removal and Installation portion of this section.