


Front Impact Severity Sensor

 [Ford Ecat Electronic Parts Catalog](#)

NOTE: LH front impact severity sensor shown, RH similar.

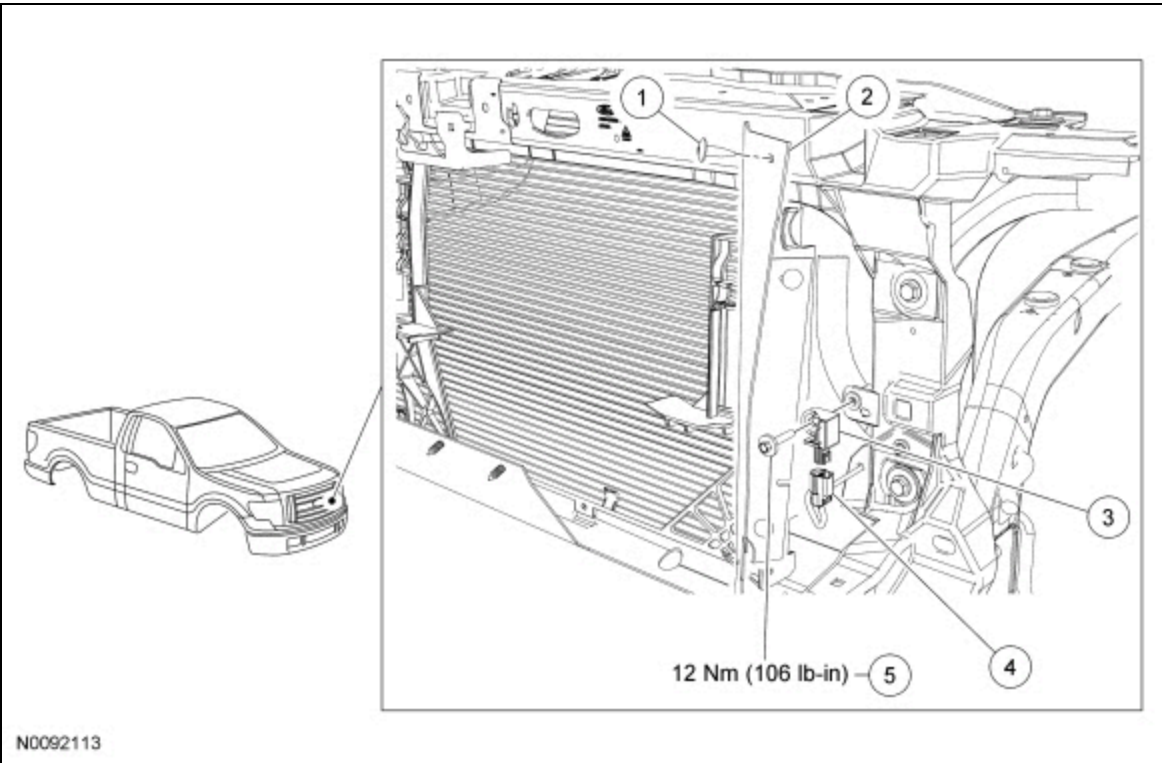

Item	Part Number	Description
1	W706350 W706350	Scrivet
2	8310 8310	LH air deflector
3	14B004 14B004	LH front impact severity sensor
4	—	Electrical connector (part of 12A581)
5	W713506 W713506	Front impact severity sensor bolt

WARNING: If a vehicle has been in a crash, inspect the restraints control module (RCM) and the impact sensor (if equipped) mounting areas for deformation. If damaged, restore the mounting areas to the original production configuration. A new RCM and sensors must be installed whether or not the airbags have deployed. Failure to follow these instructions may result in serious personal injury or death in a crash.

NOTE: The air bag warning indicator illuminates when the correct Restraints Control Module (RCM) fuse is removed and the ignition is ON.

NOTE: The Supplemental Restraint System (SRS) must be fully operational and free of faults before releasing the vehicle to the customer.

1. Depower the ~~SRS~~ . For additional information, refer to Supplemental Restraint System (SRS) Depowering and Repowering in the General Procedures portion of this section.
2. Remove the scrivet and fold the LH air deflector back.

3. Disconnect the electrical connector.

4. **WARNING: Always tighten the fasteners of the restraints control module (RCM) and impact sensor (if equipped) to the specified torque. Failure to do so may result in incorrect restraint system operation, which increases the risk of personal injury or death in a crash.**

Remove the bolt and LH front impact severity sensor.

- To install, tighten to 12 Nm (106 lb-in).

5. To install, reverse the removal procedure.

6. Repower the ~~SRS~~ . For additional information, refer to Supplemental Restraint System (SRS) Depowering and Repowering in the General Procedures portion of this section.