


Occupant Classification System Module (OCSM)


 [Ford Ecat Electronic Parts Catalog](#)

Manual Seat

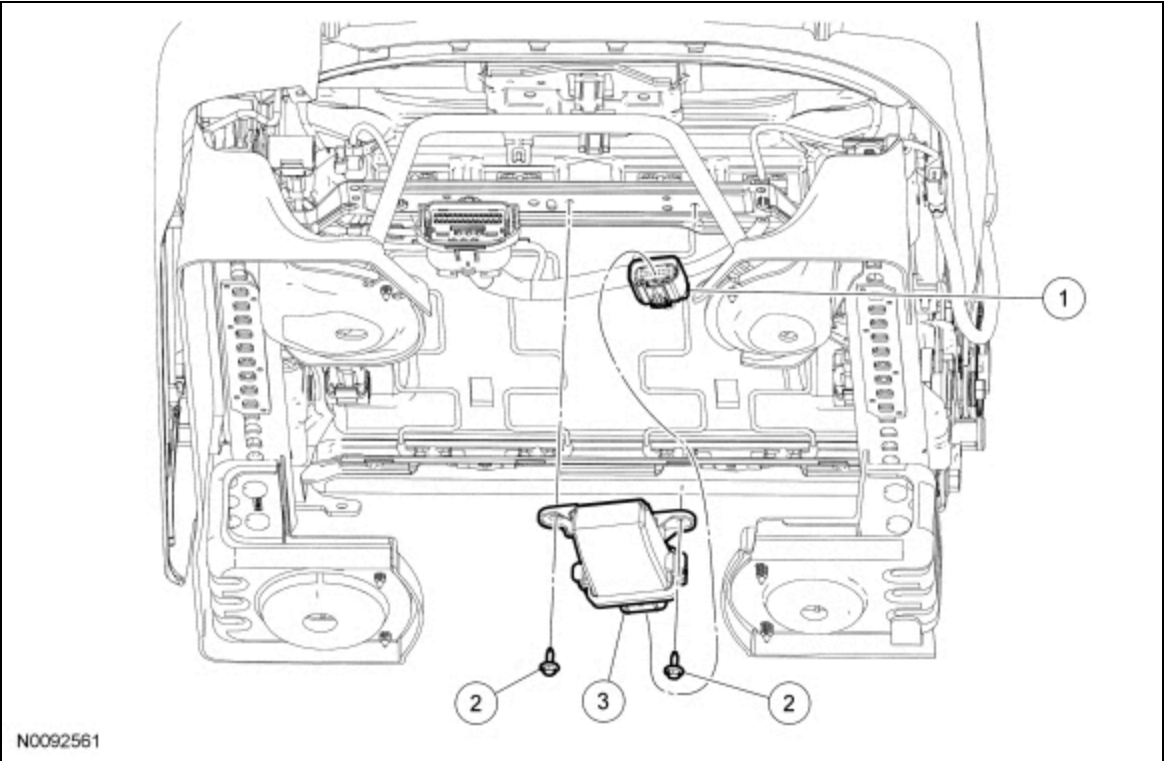

Item	Part Number	Description
1	—	Occupant Classification System Module (OCSM) electrical connector (part of 14A699)
2	W505153 W505153	OCSM screws
3	14B056 14B056	OCSM

Power Seat

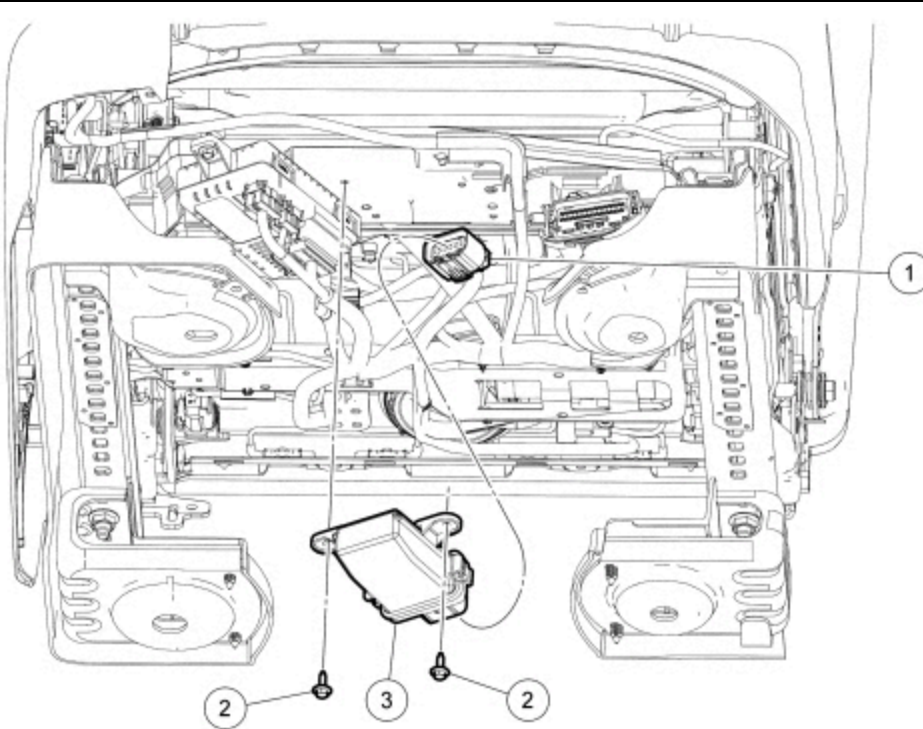

N0092560

Item	Part Number	Description
1	—	OCSM electrical connector (part of 14A699)
2	W505153 W505153	OCSM screws
3	14B056 14B056	OCSM

Removal and Installation

- NOTE:** Ignition must be OFF when disconnecting the Occupant Classification System Module (OCSM) electrical connector. Otherwise, a DTC will set in the Restraints Control Module (RCM) memory and must be cleared before releasing the vehicle.

Turn the ignition OFF and wait at least one minute.

- Disconnect the OCSM electrical connector.
- Remove the 2 screws and OCSM .
- To install, reverse the removal procedure.
- If a new OCSM has been installed, carry out the Occupant Classification System (OCS) System Reset procedure. For additional information, refer to Occupant Classification Sensor (OCS) System Reset in the General Procedures portion of this section.