


Passenger Airbag

 [Ford Ecat Electronic Parts Catalog](#)

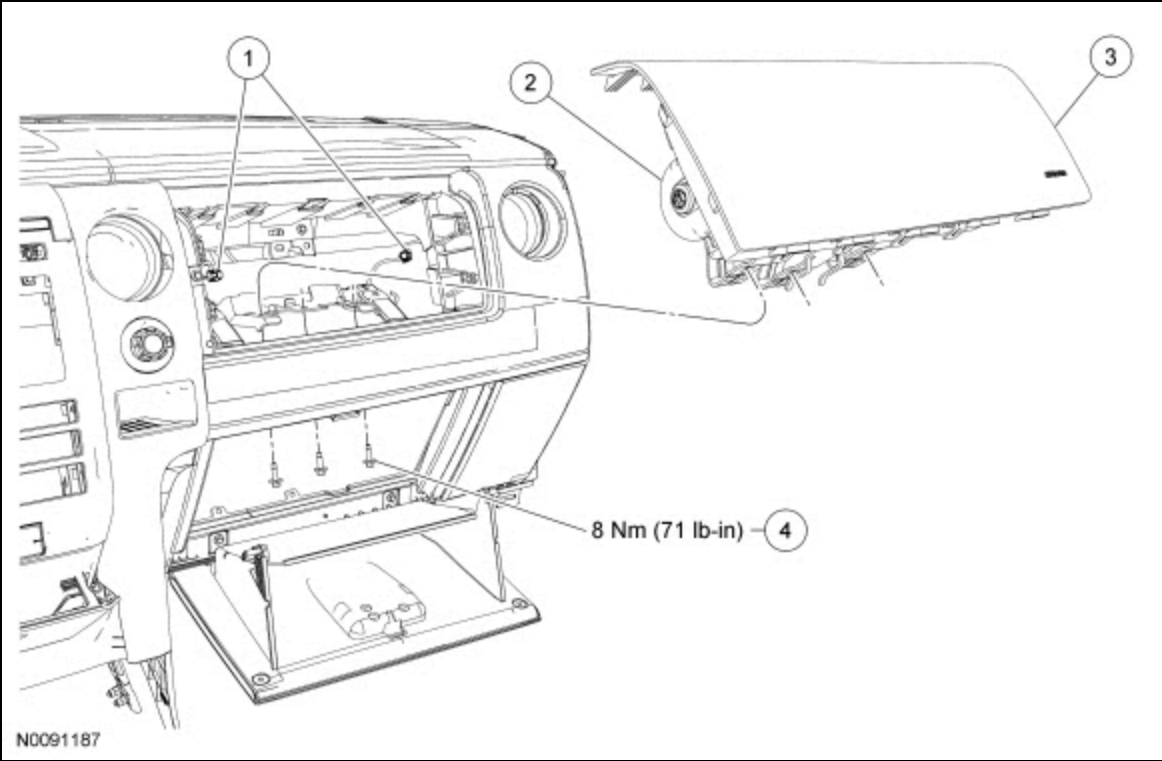

Item	Part Number	Description
1	—	Electrical connectors (part of 14401)
2	044A74 044A74	Passenger air bag module assembly
3	04338 04338	Passenger air bag cover
4	W708568 W708568	Passenger air bag module bolt (3 required)

Removal and Installation

- WARNING:** Always carry a live airbag with the deployment door, trim cover or tear seam pointed away from the body. Do not place a live airbag down with the deployment door, trim cover or tear seam facing down. Failure to follow these instructions may result in serious personal injury in the event of an accidental deployment.
- WARNING:** Never probe the electrical connectors on airbag, Safety Canopy or side air curtain assemblies. Failure to follow this instruction may result in the accidental deployment of these assemblies, which increases the risk of serious personal injury or death.
- NOTE:** The air bag warning indicator illuminates when the correct Restraints Control Module (RCM) fuse is removed and the ignition is ON.
- NOTE:** The Supplemental Restraint System (SRS) must be fully operational and free of faults before releasing the vehicle to the customer.

1. Depower the SRS . For additional information, refer to Supplemental Restraint System (SRS) Depowering and Repowering in the General Procedures portion of this section.

2. Remove the 3 passenger air bag module bolts.

3. **NOTICE: Do not handle the passenger air bag module by grabbing the edges of the passenger air bag cover. Damage to the passenger air bag module may occur.**

Partially remove the passenger air bag module from the instrument panel.

4. Disconnect the 2 electrical connectors and remove the passenger air bag module.


Installation

1. **NOTICE: Do not handle the passenger air bag module by grabbing the edges of the passenger air bag cover. Damage to the passenger air bag module may occur.**

Partially install the passenger air bag module in the instrument panel.

2. Connect the 2 electrical connectors.

3. Position the passenger air bag module so that the tabs are oriented as shown.

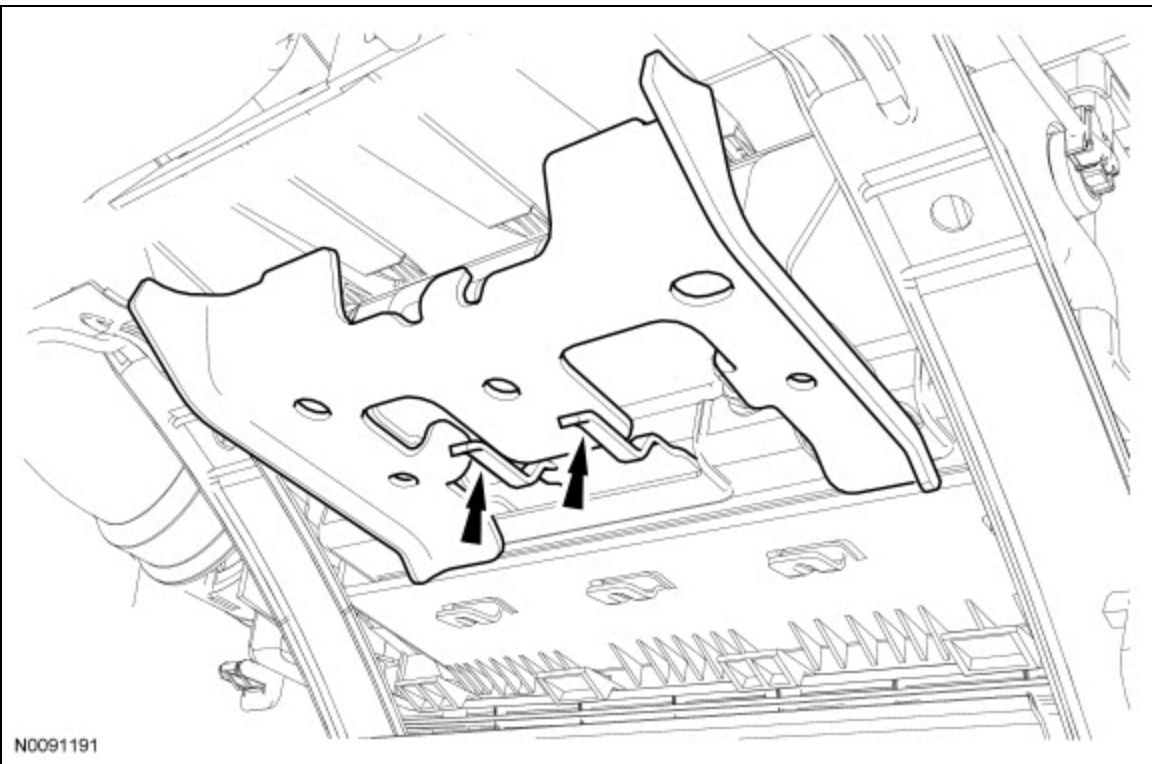

4. Install the 3 passenger air bag module bolts.

- Tighten to 8 Nm (71 lb-in).

5. Repower the ~~SRS~~ . For additional information, refer to Supplemental Restraint System (SRS) Depowering and Repowering in the General Procedures portion of this section.