

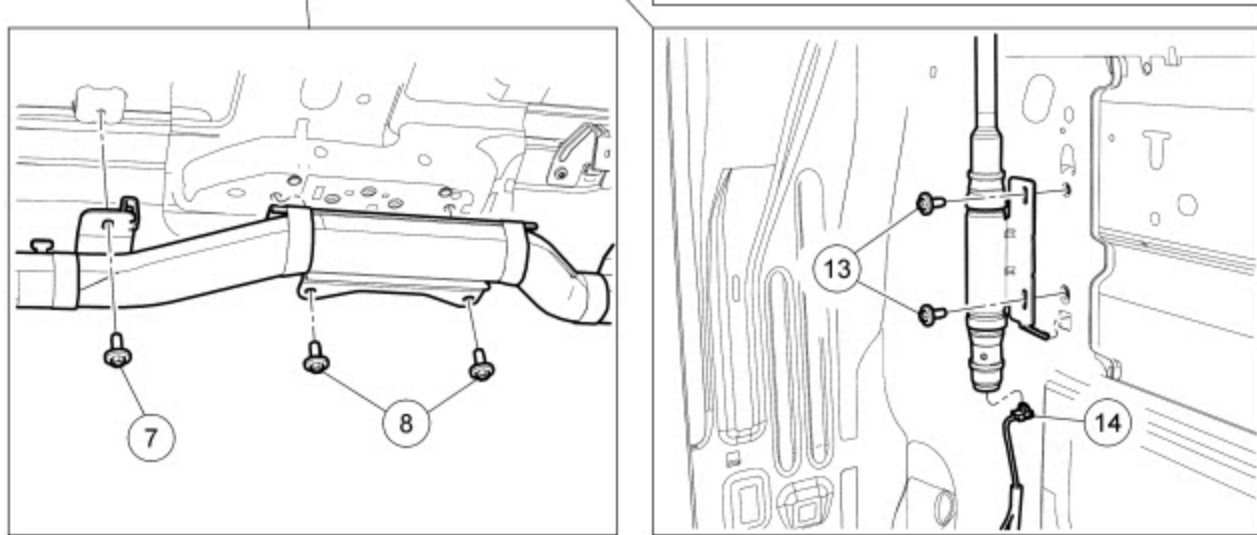


Safety Canopy Module

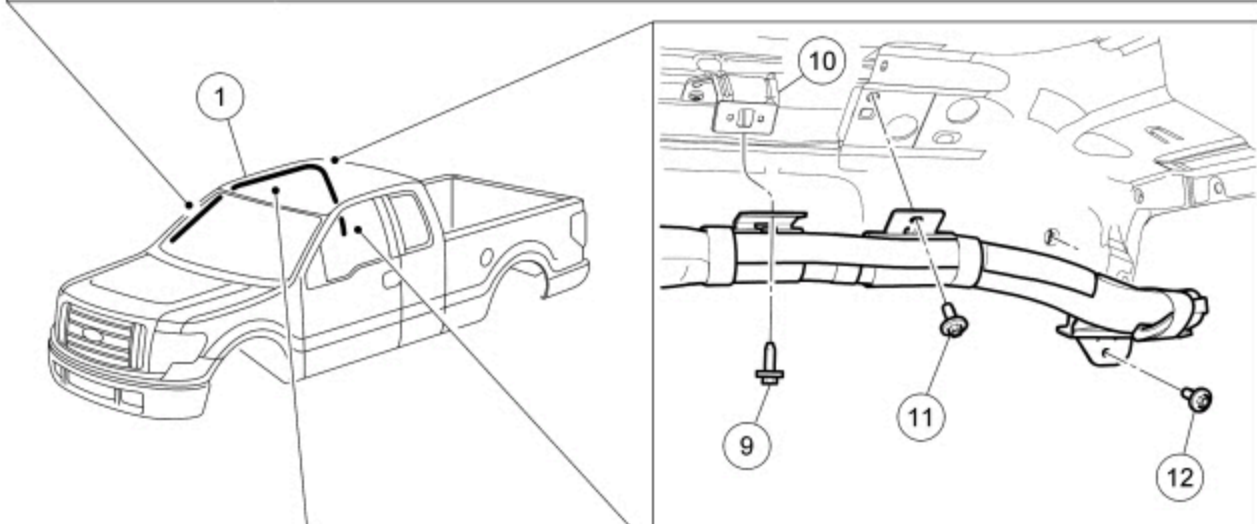

- NOTE:** *SuperCab shown, other cab styles similar.*
- NOTE:** *The Safety Canopy® module bolts must be tightened in the sequence described in this procedure.*

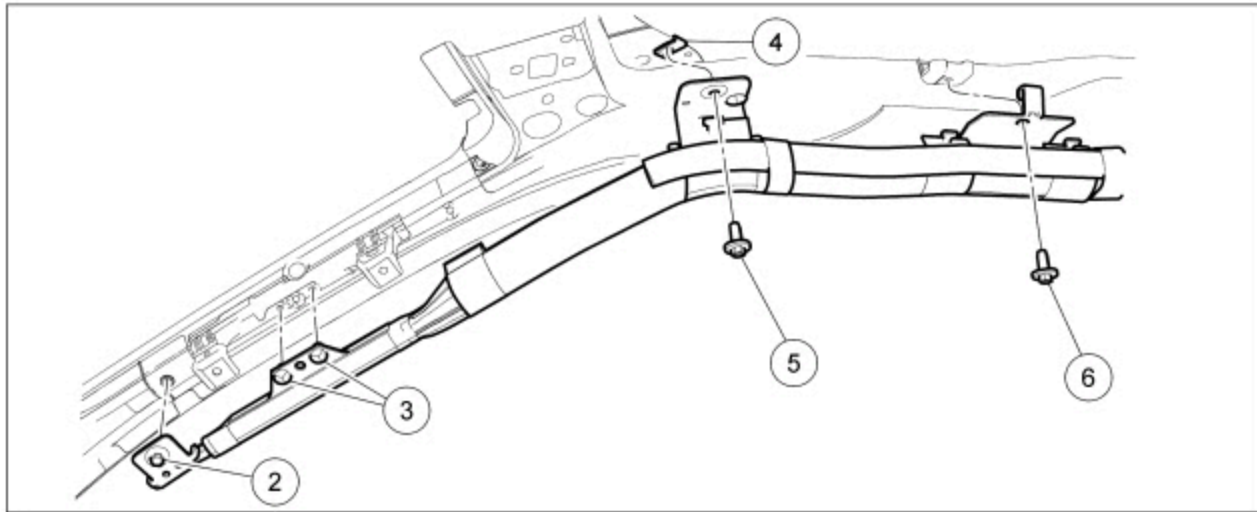

N0092982

Item	Part Number	Description
1	042D94042D94 RH/ 042D95 LH RH/ 042D95 LH	Safety Canopy® module
2	—	A-pillar tether bolt (part of 04D94 RH/ 042D95 LH)
3	—	Pin-type retainers (part of 04D94 RH/ 042D95 LH)
4	—	J-nut
5	W713976W713976	Bolt

6	W713976 W713976	Bolt
7	W713976 W713976	Bolt
8	W713976 W713976	Center locator bolts
9	W713976 W713976	Bolt
10	29019 29019	Roof opening panel bracket (if equipped)
11	W713976 W713976	Bolt
12	W713976 W713976	Bolt
13	W713976 W713976	Safety Canopy® module canister bolts
14	—	Electrical connector (part of 14A005)

Removal

WARNING: Always carry a live Safety Canopy or side air curtain assembly with the tear seam pointed away from your body. Failure to follow this instruction may result in serious personal injury or death in the event of an accidental deployment.


WARNING: Anytime the Safety Canopy® or side air curtain module has deployed, a new headliner and new A-, B- and C-pillar upper trim panels and attaching hardware must be installed. Remove any other damaged components and hardware and install new components and hardware as needed. Failure to follow these instructions may result in the Safety Canopy® or side air curtain module deploying incorrectly and increases the risk of serious personal injury or death in a crash.

WARNING: Never probe the electrical connectors on airbag, Safety Canopy or side air curtain assemblies. Failure to follow this instruction may result in the accidental deployment of these assemblies, which increases the risk of serious personal injury or death.

NOTE: The air bag warning indicator illuminates when the correct Restraints Control Module (RCM) fuse is removed and the ignition is ON.

NOTE: The Supplemental Restraint System (SRS) must be fully operational and free of faults before releasing the vehicle to the customer.

1. Depower the SRS . For additional information, refer to Supplemental Restraint System (SRS) Depowering and Repowering in the General Procedures portion of this section.
2. Remove the headliner. For additional information, refer to Section 501-05.
3. Detach the 2 Safety Canopy® module pin-type retainers from the A-pillar.
 - If equipped with a satellite radio, on the RH side detach the pin-type retainers and position the antenna lead aside.
4. Remove the A-pillar tether bolt.
5. Remove the 10 Safety Canopy® module bolts.
6. Disconnect the Safety Canopy® module electrical connector.
7. Detach the Safety Canopy® module canister hook from the sheet metal slot.

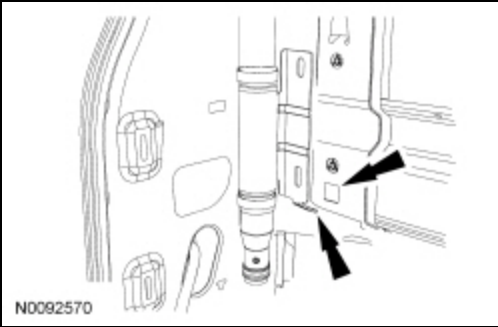

8. Remove the Safety Canopy® module.

Installation


WARNING: Before installing a Safety Canopy or side air curtain assembly, inspect the roofline for any damage. If necessary, the sheet metal must be reworked to its original condition and structural integrity. Install new fasteners if damaged and remove foreign material. Failure to follow these instructions may result in the Safety Canopy or side air curtain deploying incorrectly, which increases the risk of serious personal injury or death in a crash.

WARNING: Inspect a Safety Canopy® or side air curtain module before installation. If the module is damaged, the cover has separated or the Safety Canopy® or side air curtain material has been exposed, install a new module. Do not attempt to repair the module. Failure to follow these instructions may result in the Safety Canopy® or side air curtain deploying incorrectly, which increases the risk of serious personal injury or death in a crash.


WARNING: Never put any type of fastener or tie strap around any part of a Safety Canopy® module, side air curtain module or interior trim panel. This will prevent the Safety Canopy® or side air curtain module from deploying correctly. Failure to follow this instruction may increase the risk of serious personal injury or death in a crash.

WARNING: Do not obstruct or place objects in the deployment path of the Safety Canopy® or side air curtain module. Failure to follow this instruction may result in the Safety Canopy® or side air curtain module deploying incorrectly and increases the risk of serious personal injury or death in a crash.


1. Position the Safety Canopy® module into the vehicle.
 - Hang the Safety Canopy® module hooks on the sheet metal brackets.

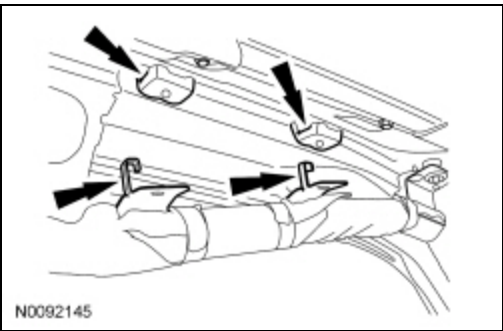

2. For SuperCab and SuperCrew, position the center locator tabs into the sheet metal slots.

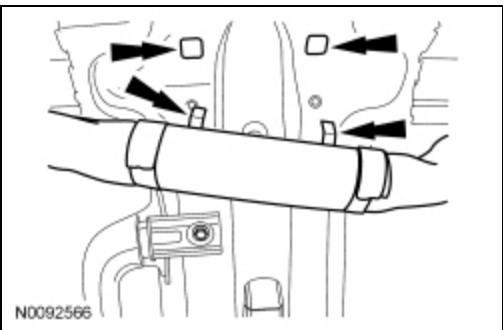

3. Insert the Safety Canopy® module canister hook into the sheet metal slot.

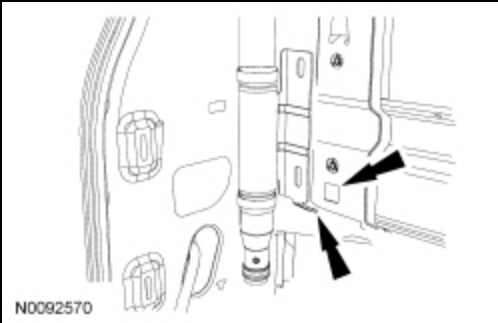


4. Connect the Safety Canopy® module electrical connector.

5. **NOTE:** *RH shown, LH similar.*

For SuperCab, install the 10 Safety Canopy® module bolts and A-pillar tether bolt.


- Tighten in the sequence shown to 6 Nm (53 lb-in).

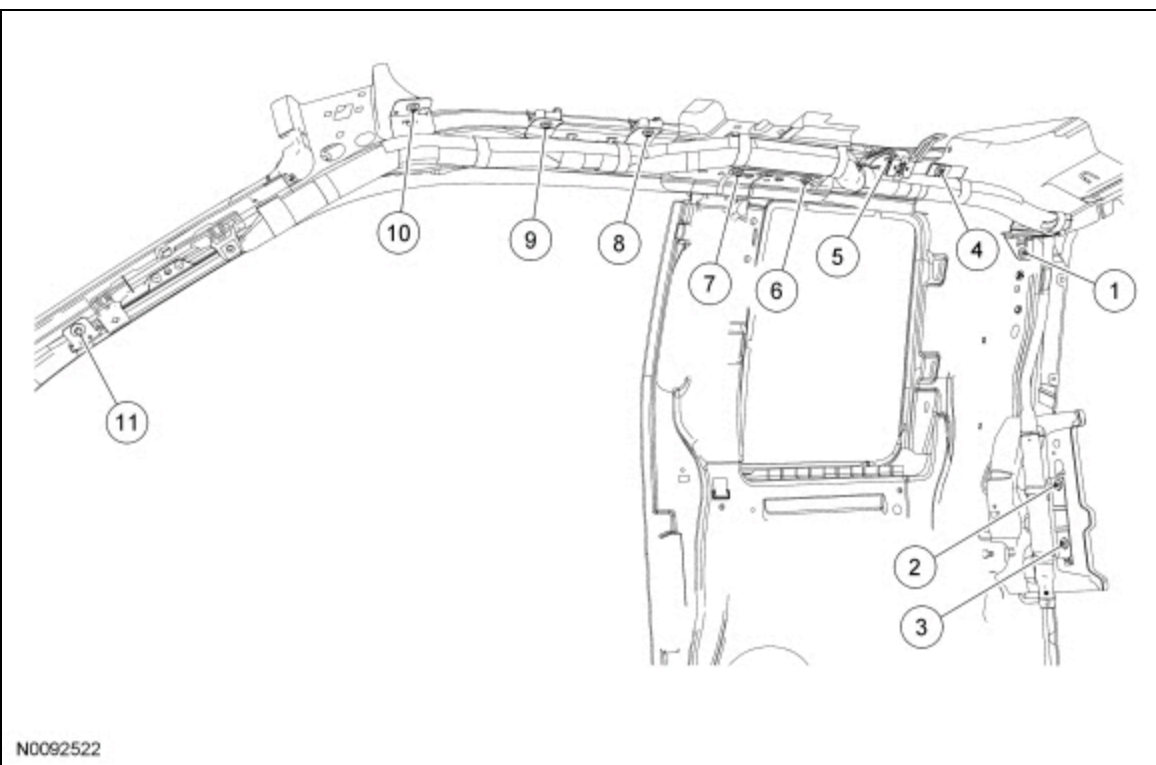

6. **NOTE:** *RH shown, LH similar.*

For SuperCrew, install the 11 Safety Canopy® module bolts and A-pillar tether bolt.

- Tighten in the sequence shown to 6 Nm (53 lb-in).

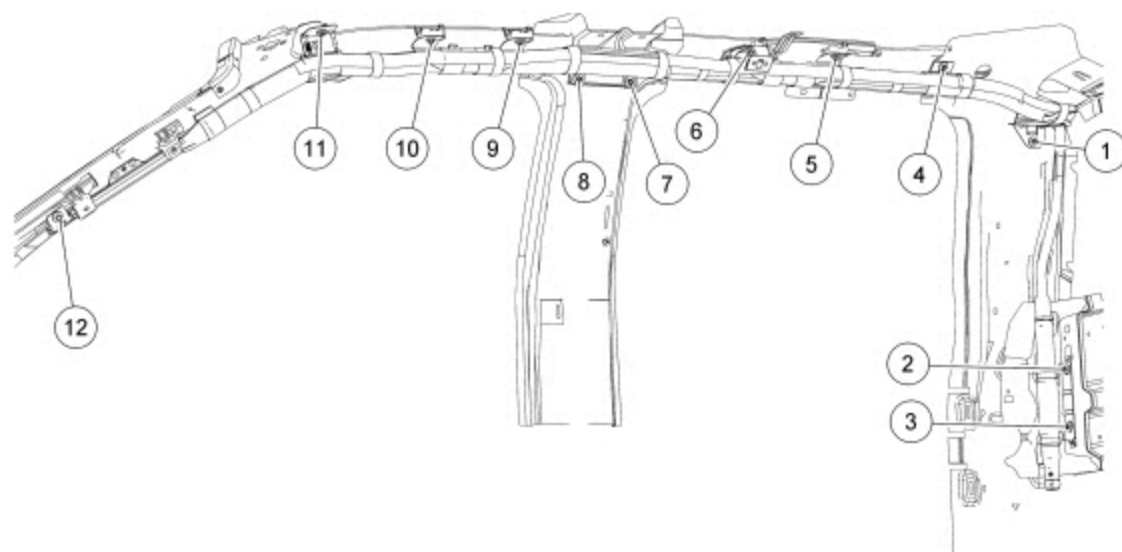


N0092523

7. **NOTE:** *RH shown, LH similar.*

For regular cab, install the 6 Safety Canopy® module bolts and A-pillar tether bolt.

- Tighten in the sequence shown to 6 Nm (53 lb-in).

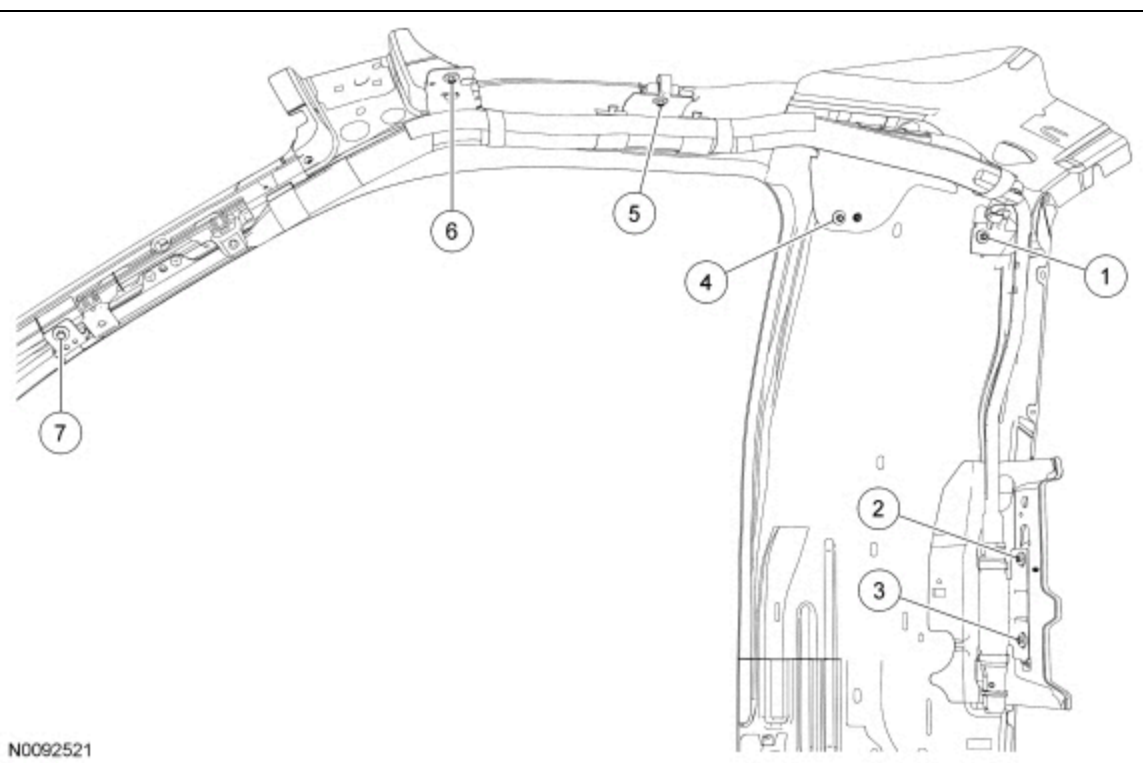

N0092521

8. Attach the 2 pin-type retainers to the A-pillar.

- If equipped, on the RH side of the vehicle position the satellite radio antenna lead aside for accessibility.
- Attach the antenna lead pin-type retainers.

9. Install the headliner. For additional information, refer to the Removal and Installation procedures in Section 501-05.

10. Repower the SRS. For additional information, refer to Supplemental Restraint System (SRS) Depowering and Repowering in the General Procedures portion of this section.