


Seat Position Sensor

 [Ford Ecat Electronic Parts Catalog](#)

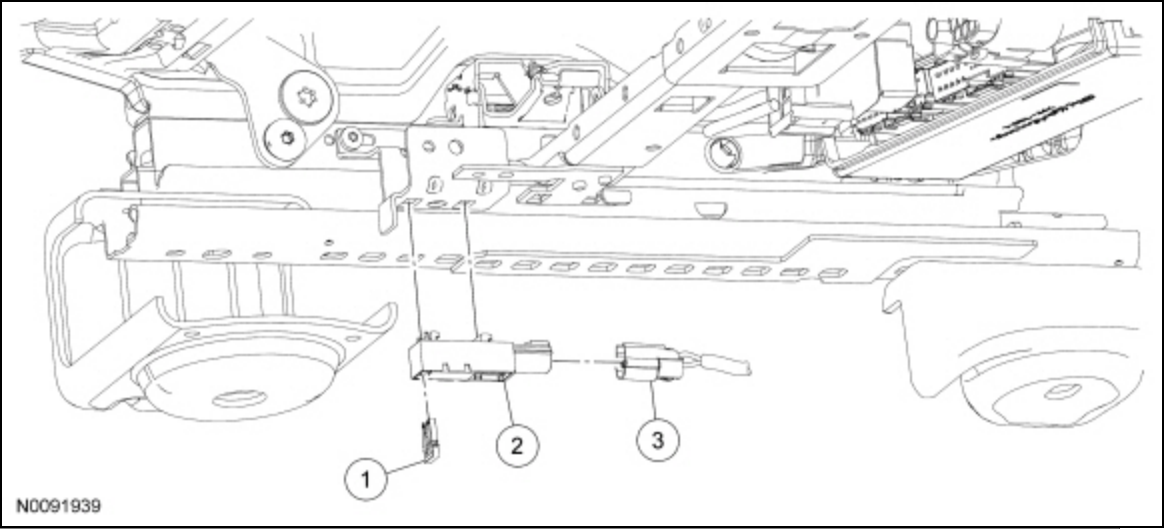

Item	Part Number	Description
1	—	Lock tab
2	14B416 14B416	Seat position sensor
3	—	Electrical connector (part of 14A699)

1. Remove the driver seat. For additional information, refer to Seat Removal and Installation in Section 501-10.
2. Disconnect the seat position sensor electrical connector.
3. Remove the lock tab.
4. Remove the seat position sensor.
5. To install, reverse the removal procedure.