


Side Airbag

 [Ford Ecat Electronic Parts Catalog](#)

NOTE: Driver seat shown, passenger similar.

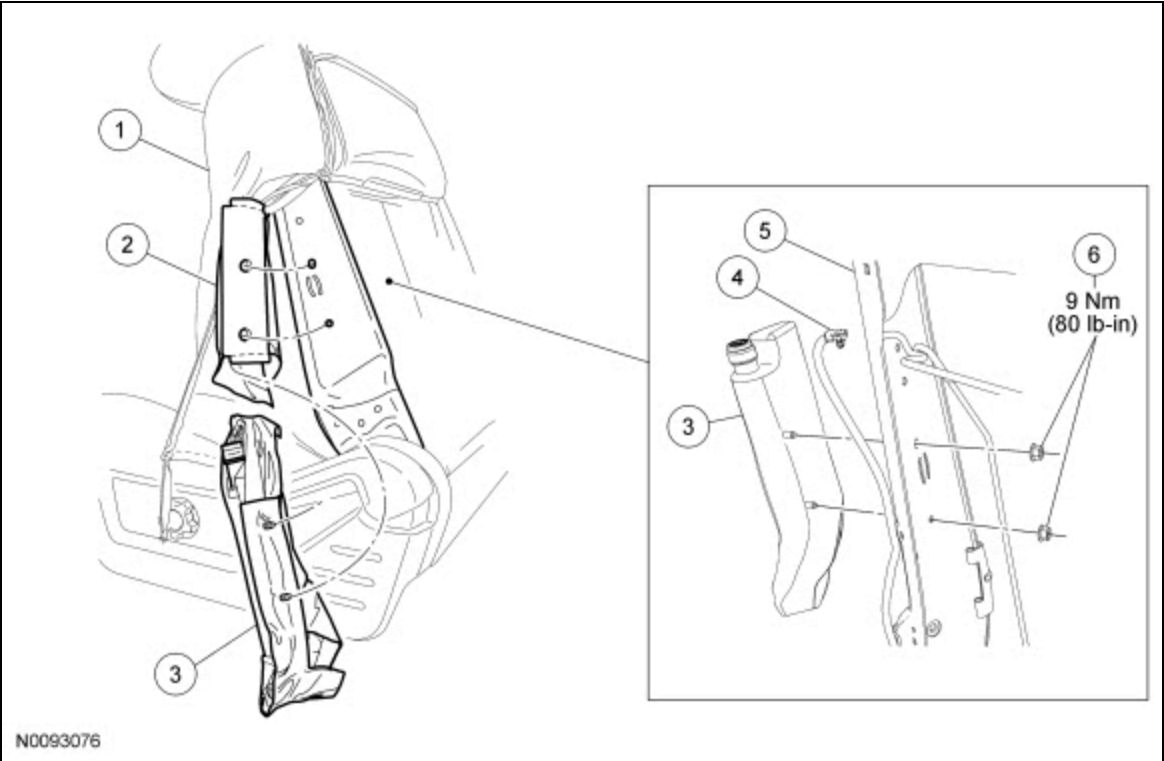

Item	Part Number	Description
1	64417 64417	Backrest cover
2	—	Deployment chute (part of 64417)
3	611D10 611D10	Side air bag module
4	—	Electrical connector (part of 14K155)
5	61018 61018	Seat backrest frame
6	W520111 W520111	Side air bag module nuts (2 required)

Removal and Installation

- WARNING:** Always carry a live airbag with the deployment door, trim cover or tear seam pointed away from the body. Do not place a live airbag down with the deployment door, trim cover or tear seam facing down. Failure to follow these instructions may result in serious personal injury in the event of an accidental deployment.
- WARNING:** Never probe the electrical connectors on airbag, Safety Canopy or side air curtain assemblies. Failure to follow this instruction may result in the accidental deployment of these assemblies, which increases the risk of serious personal injury or death.

WARNING: If the seat side airbag cover has been damaged or separated from its mounting, or if the airbag material has been exposed, install a new seat side airbag assembly. Never try to repair the seat side airbag assembly. Failure to follow these instructions may result in the seat side airbag deploying incorrectly, which increases the risk of serious personal injury or death in a crash.

WARNING: Front seat backrest trim covers installed on seats equipped with seat side airbags cannot be repaired. A new trim cover must be installed. Cleaning is permissible. Failure to follow these instructions may result in the seat side airbag deploying incorrectly and increase the risk of serious personal injury or death in a crash.

NOTE: *If a side air bag deployment took place, a new seat back pad, trim cover and side air bag module must be installed. The seat backrest frame should be installed new if necessary.*

NOTE: *When installing a new side air bag module after a deployment, refer to Section 501-10 for additional information concerning new side air bag module installation.*

NOTE: *The air bag warning indicator illuminates when the correct Restraints Control Module (RCM) fuse is removed and the ignition is ON.*

NOTE: *The Supplemental Restraint System (SRS) must be fully operational and free of faults before releasing the vehicle to the customer.*

1. Depower the SRS. For additional information, refer to Supplemental Restraint System (SRS) Depowering and Repowering in the General Procedures of this section.
2. Release the seat backrest cover J-clip and unzip the zippers.
3. Remove the 2 side air bag module nuts.
 - To install, tighten to 9 Nm (80 lb-in).
4. Position the side air bag module away from the seat backrest frame.
5. Disconnect the side air bag module electrical connector.
6. Remove the side air bag module.
 - Pull the side air bag module mounting studs back through the deployment chute openings and remove the side air bag module from the deployment chute.
7. **WARNING: Before installing the seat side air bag module/deployment chute assembly:**
 - **Inspect the side air bag module and mounting surfaces for any damage or foreign material.**
 - **Remove any foreign material from the mounting surfaces of the deployment chute, the seat backrest frame mounting bracket and the air bag module cavity in the seat backrest foam pad.**
 - **Install new parts if damaged.**

Failure to follow these instructions may result in the seat side air bag deploying incorrectly, which increases the risk of serious personal injury or death in a crash.

To install, reverse the removal procedure.

- The deployment chute should not have any wrinkles or folds where it contacts the seat backrest frame mounting bracket.