


Side Impact Sensor — Front Door



NOTE: LH door shown, RH door similar.

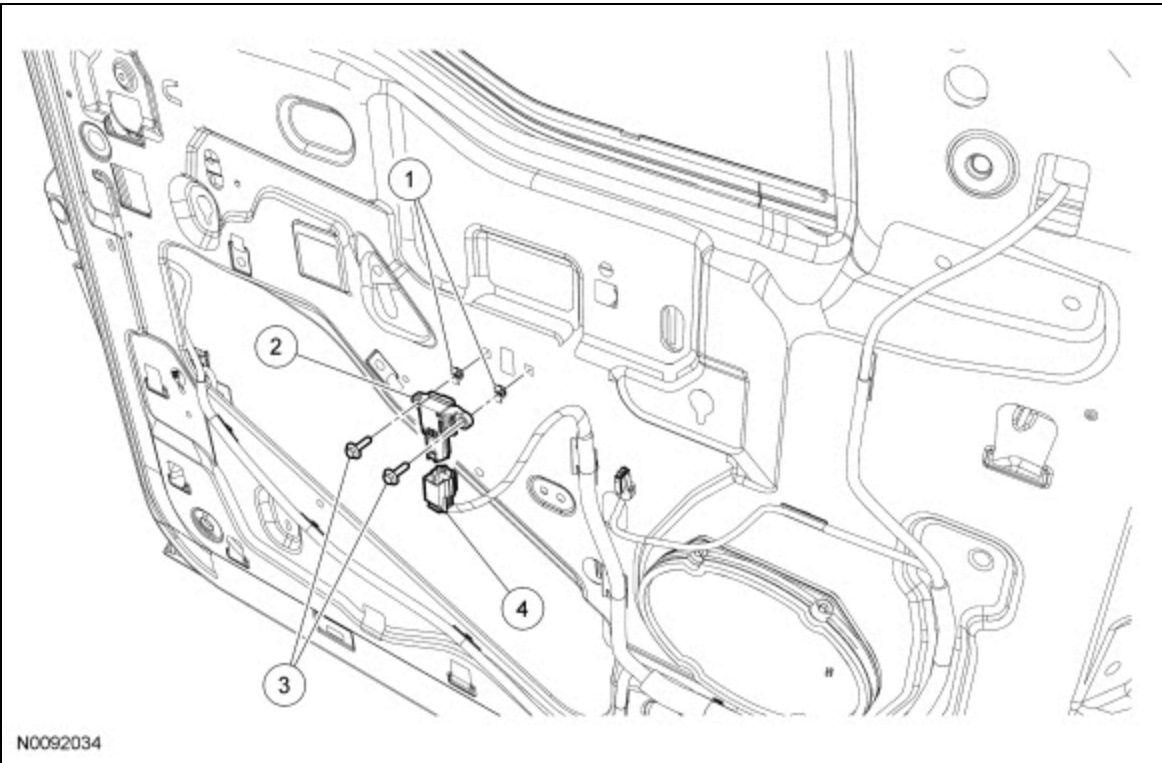

Item	Part Number	Description
1	W710564 W710564	Insert nuts (2 required)
2	14B345 14B345	Side impact sensor (pressure sensor)
3	W705314 W705314	Side impact sensor bolts (2 required)
4	—	Side impact sensor electrical connector (part of 14631)

WARNING: If a vehicle has been in a crash, inspect the restraints control module (RCM) and the impact sensor (if equipped) mounting areas for deformation. If damaged, restore the mounting areas to the original production configuration. A new RCM and sensors must be installed whether or not the airbags have deployed. Failure to follow these instructions may result in serious personal injury or death in a crash.

NOTE: The air bag warning indicator illuminates when the correct Restraints Control Module (RCM) fuse is removed and the ignition is ON.

NOTE: The Supplemental Restraint System (SRS) must be fully operational and free of faults before releasing the vehicle to the customer.

1. Depower the SRS . For additional information, refer to Supplemental Restraint System (SRS) Depowering and Repowering in this section.
2. Remove the front door trim panel. For additional information, refer to Section 501-05.
3. Disconnect the electrical connector.

4. **NOTICE:** To prevent stripping the insert nuts, tighten the side impact sensor bolts only enough to secure the side impact sensor.

Remove the bolts and side impact sensor.

5. To install, reverse the removal procedure.

6. Repower the ~~SRS~~ . For additional information, refer to Supplemental Restraint System (SRS) Depowering and Repowering in this section.