


Side Impact Sensor — Second Row



NOTE: RH side shown, LH similar.

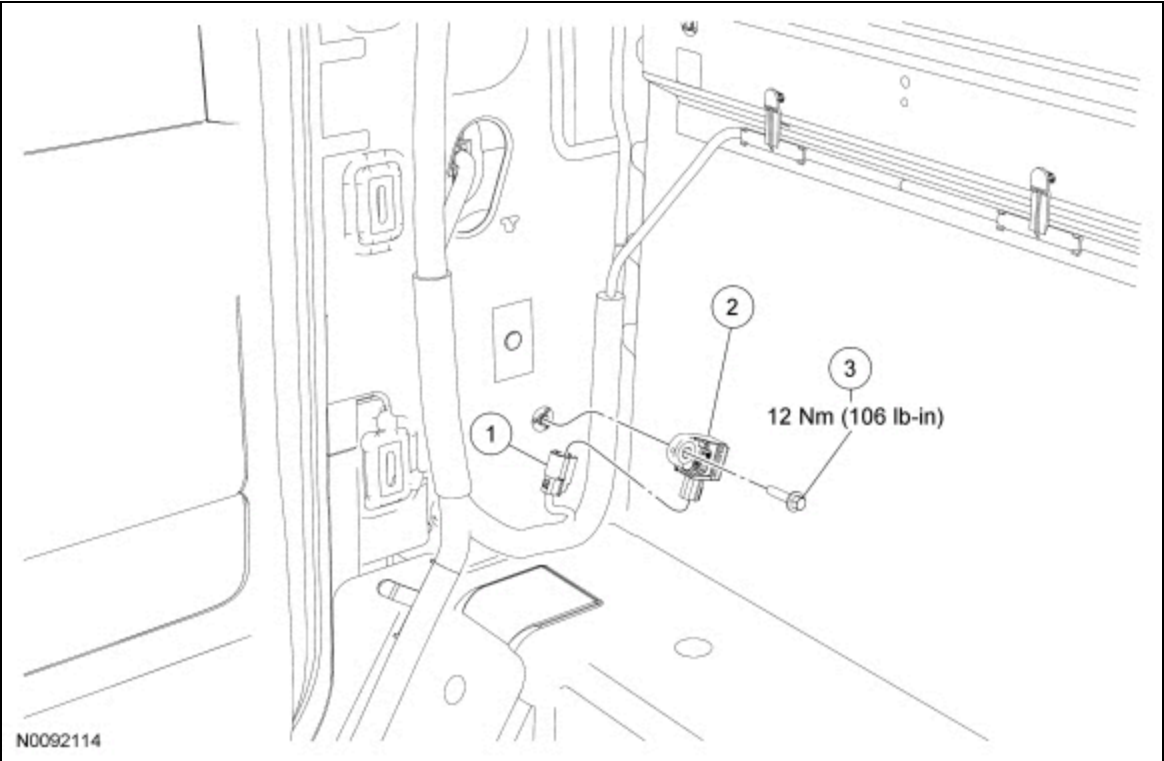

Item	Part Number	Description
1	—	Electrical connector (part of 14A005)
2	14B345 14B345	Side impact sensor
3	W505256 W505256	Side impact sensor bolt

WARNING: If a vehicle has been in a crash, inspect the restraints control module (RCM) and the impact sensor (if equipped) mounting areas for deformation. If damaged, restore the mounting areas to the original production configuration. A new RCM and sensors must be installed whether or not the airbags have deployed. Failure to follow these instructions may result in serious personal injury or death in a crash.

NOTE: The air bag warning indicator illuminates when the correct Restraints Control Module (RCM) fuse is removed and the ignition is ON.

NOTE: The Supplemental Restraint System (SRS) must be fully operational and free of faults before releasing the vehicle to the customer.

1. Depower the SRS . For additional information, refer to Supplemental Restraint System (SRS) Depowering and Repowering in this section.
2. **SuperCab:** remove the B-pillar trim panel.
SuperCrew: remove the C-pillar trim panel.
For additional information, refer to the Removal and Installation procedures in Section 501-05.

3. Disconnect the side impact sensor electrical connector.

4. **WARNING: Always tighten the fasteners of the restraints control module (RCM) and impact sensor (if equipped) to the specified torque. Failure to do so may result in incorrect restraint system operation, which increases the risk of personal injury or death in a crash.**

NOTE: *Make sure the B- or C-pillar and side impact sensor mating surface is clean and free of foreign material.*

Remove the bolt and side impact sensor.

- To install, tighten to 12 Nm (106 lb-in).

5. To install, reverse the removal procedure.

6. Repower the ~~SRS~~ . For additional information, refer to Supplemental Restraint System (SRS) Depowering and Repowering in this section.