

# Door Outer Panel

 [Ford Ecat Electronic Parts Catalog](#)

### Special Tool(s)


|                                                                                              |                                                              |
|----------------------------------------------------------------------------------------------|--------------------------------------------------------------|
| <br>ST1073-A | Heat Gun<br>107-R0300                                        |
| <br>ST2738-A | Heat Treatment Induction Resistance Spot Welder<br>254-00001 |

### Material

| Item                                                | Specification |
|-----------------------------------------------------|---------------|
| Flexible Foam Repair<br>Fusor® 121                  | —             |
| Motorcraft® Metal Bonding Adhesive<br>TA-1          | —             |
| Rust Inhibitor<br>ValuGard™ VG104, VG104A (aerosol) | —             |
| Motorcraft® Seam Sealer<br>TA-2                     | —             |

### Door Assembly

**NOTE:** Door intrusion beam is constructed of Boron steel and is non-serviceable.

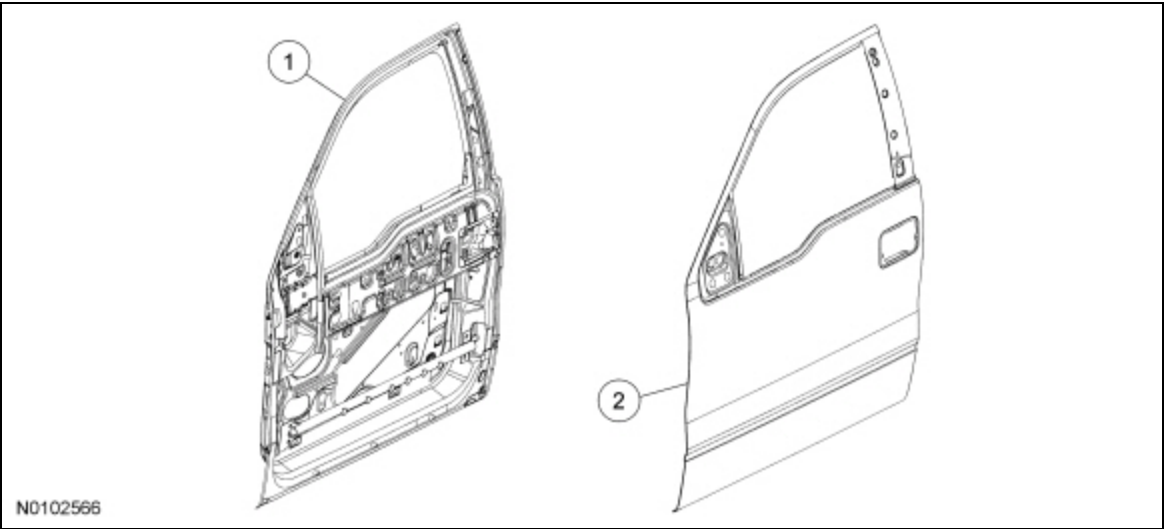

| Item | Part Number                                           | Description                          |
|------|-------------------------------------------------------|--------------------------------------|
| 1    | 20125 <a href="#">20125</a> LH/ 20124 RH LH/ 20124 RH | Door assembly — mild and boron steel |
| 2    | 20201 <a href="#">20201</a> LH/ 20200 RH LH/ 20200 RH | Door outer panel — mild steel        |

**WARNING:** Collision damage repair must conform to the instructions contained in this workshop manual. Replacement components must be new, genuine Ford Motor Company parts. Recycled, salvaged, aftermarket or reconditioned parts (including body parts, wheels or safety restraint components) are not authorized by Ford.


Departure from the instructions provided in this manual, including alternate repair methods or the use of substitute components, risks compromising crash safety. Failure to follow these instructions may adversely affect structural integrity and crash safety performance, which could result in serious personal injury to vehicle occupants in a crash.

**WARNING:** Invisible ultraviolet and infrared rays emitted in welding can injure unprotected eyes and skin. Always use protection such as a welder's helmet with dark-colored filter lenses of the correct density. Electric welding will produce intense radiation, therefore, filter plate lenses of the deepest shade providing adequate visibility are recommended. It is strongly recommended that persons working in the weld area wear flash safety goggles. Also wear protective clothing. Failure to follow these instructions may result in serious personal injury.

**WARNING:** Always wear protective equipment including eye protection with side shields, and a dust mask when sanding or grinding. Failure to follow these instructions may result in serious personal injury.


1. Remove the outside door handle and mirror assembly. For additional information, refer to Section 501-09.
2. Remove the outer door trim, including mouldings and weatherstrips.
3. Remove the door assembly and secure on a workstand.
4. **NOTICE:** Use care when drilling out spot welds to avoid drilling through door shell assembly and damaging the door shell.

Using a spot weld cutter or equivalent, locate and drill out the spot welds on the door panel.

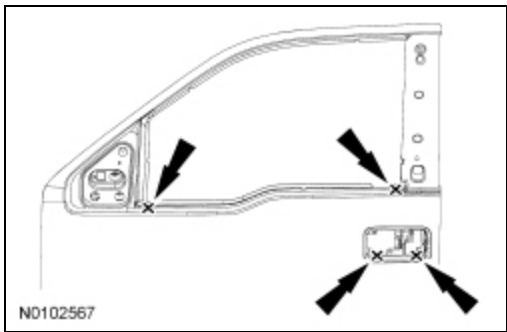

5. **NOTICE:** Use extreme care to avoid cutting the door shell or inner belt reinforcement and damaging the door shell assembly.

Using a disc grinder, grind along the perimeter of the outer door panel hem to separate the hem edges as indicated in the illustration.

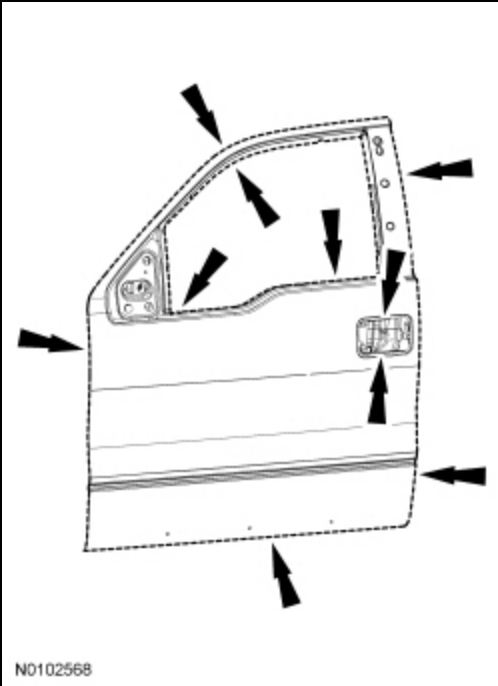

6. **NOTE:** *The use of a Heat Gun may aid in softening the door panel adhesive.*

Prior to removing the outer panel, use a sharp knife to cut the adhesive between the door outer panel, beltline reinforcement and intrusion beam.

- Using a flat-blade chisel or equivalent, remove the original panel.
- Using a sharp knife or broad edge scraper, remove the remaining portion of the hem flange from the door shell.
- Remove any remaining adhesive from the door shell flange.

7. Trial fit the service replacement panel to the door shell assembly.

8. Prepare the service replacement panel joint areas by sanding clean all mating surfaces.

9. Prepare the door shell assembly by grinding all the mating surfaces including the inner hem and outer belt reinforcement and the intrusion beam.

10. Apply metal bonding adhesive to the following areas: service replacement hem flange and outer belt reinforcement-to-outer panel.

11. Position and align the new door outer panel to the door shell assembly, carefully turn the assembly over and begin the hemming process.

- Using a door panel installation tool or the hammer and dolly method, close the perimeter door hem and smooth any residual adhesive in the joints.

12. Temporarily install the door assembly on the vehicle to verify correct alignment and fit.

13. Apply 2 to 3 spot welds to hold the door panel in position on the door assembly.

14. Place the door assembly back on a workstand and weld the door, replacing the original spot welds, using a Squeeze-Type Resistance Spot Welding (STRW) machine. Finish grind as necessary and trial fit the upper beltline moulding and mirror.

15. Prime and apply seam sealer in the lower hem flange area.

16. Prime and paint the door using Ford-approved paint system.

17. Apply flexible foam repair to the intrusion beam and upper belt reinforcement areas of the door assembly to maintain original equipment performance.

18. Apply rust inhibitor inside the door to all hem areas and upper beltline area. For additional information, refer to Restoring Corrosion Protection Following Repair in this section.

19. Reassemble and install door and align. For additional information regarding door fitment specifications, refer to Body in this section.