

Inner Body Reinforcing Panels



General Equipment

3 Phase Inverter Spot Welder 254-00002
Compuspot 700F Welder 190-50080
I4 Inverter Spot Welder 254-00014
Inverter Welder with MIG Welder 254-00015

Material


Item	Specification
Motorcraft® Metal Surface Prep ZC-31-B	—
Premium Undercoating ValuGard™ VG101, VG101A (aerosol)	—
Rust Inhibitor ValuGard™ VG104, VG104A (aerosol)	—
Motorcraft® Seam Sealer TA-2	—

Exploded View — Regular Cab

NOTICE: Sectioning procedures can only be carried out on the outer body side panel. No sectioning repairs can be carried out on inner reinforcement panels. Failure to follow these instructions may compromise structural integrity of the cab structure.

NOTE: Refer to the steel repairability matrix chart in the Specifications portion of this section for specific information regarding steel descriptions.

NOTE: Left side shown, right side similar.

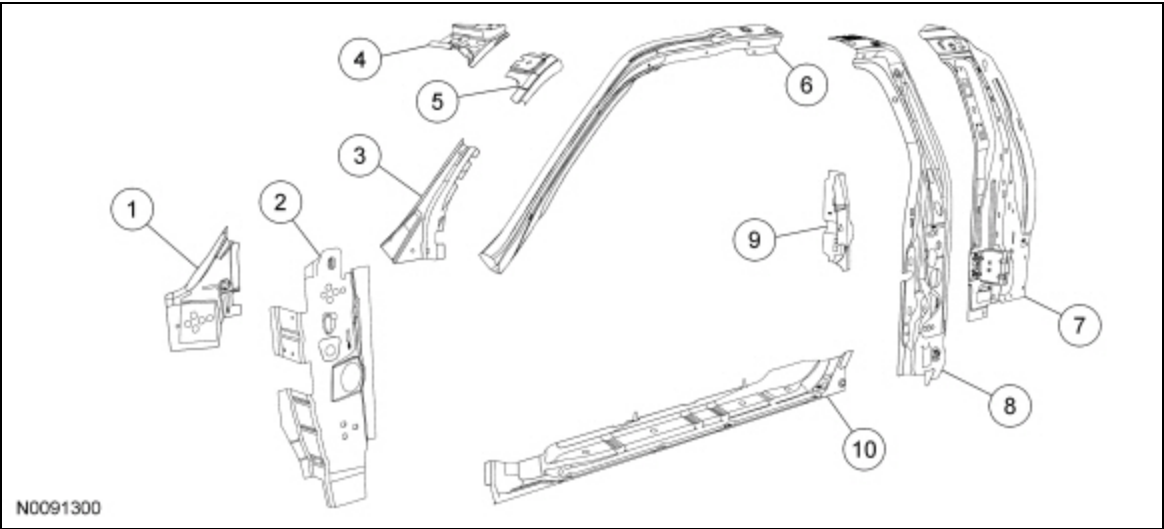


Item	Part Number	Description
1	02525 02525 LH/ 02524 RH LH/ 02524 RH	A-pillar reinforcement — Dual Phase Steel (DP) 780 steel
2	02527 02527 LH/ 02526 RH LH/ 02526 RH	Front body pillar reinforcement — High-Strength Low Alloy (HSLA) 350 steel
3	02527 02527 LH/ 02526 RH LH/ 02526 RH	Front body pillar reinforcement — HSLA 350 steel
4	30B03 30B03 LH/ 30B02 LH/ 30B02	Windshield header lower reinforcement — DP 780 steel
5	30A63 30A63 LH/ 30A62 RH LH/ 30A62 RH	Windshield header upper bracket — mild steel
6	203A05 203A05 LH/ 203A04 RH LH/ 203A04 RH	Door opening panel reinforcement — DP 780 steel
7	—	Cab corner inner panel — HSLA 350 steel
8	28137 28137 LH/ 208136 RH LH/ 208136 RH	Body lock pillar — HSLA 350 steel
9	278B11 278B11 LH/ 278B10 RH LH/ 278B10 RH	Back panel reinforcement — HSLA 350
10	10143 10143 LH/ 10142 RH LH/ 10142 RH	Rocker panel reinforcement — HSLA 350 steel

Exploded View — SuperCab

NOTE: Left side shown, right side similar.

NOTE: Refer to the steel repairability matrix chart in the Specifications portion of this section for specific information regarding steel descriptions.

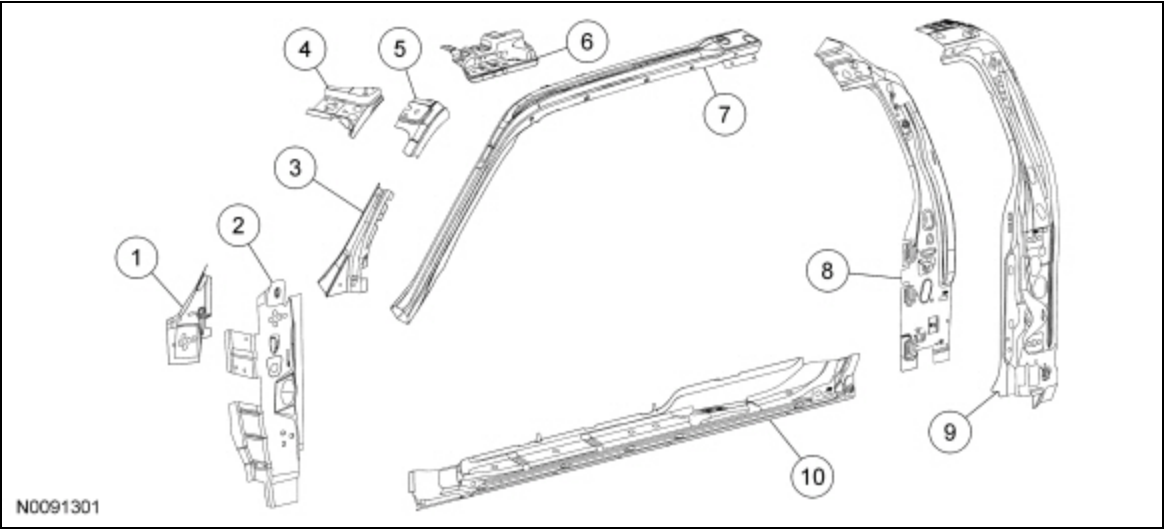


Item	Part Number	Description
1	02525 02525 LH/ 02524 RH LH/ 02524 RH	A-pillar reinforcement — Dual Phase Steel (DP) 780 steel
2	02527 02527 LH/ 02526 RH LH/ 02526 RH	Front body pillar reinforcement — High-Strength Low Alloy (HSLA) 350 steel

3	02533 02533 LH/ 02532 RH LH/ 02532 RH	A-pillar lower reinforcement — HSLA 350 steel
4	30B03 30B03 LH/ 30B02 LH/ 30B02	Windshield header lower reinforcement — DP 780 steel
5	30A63 30A63 LH/ 30A62 RH LH/ 30A62 RH	Windshield header upper bracket — mild steel
6	502W45 502W45 LH/ 502W44 RH LH/ 502W44 RH	Roof bow reinforcement — HSLA 350 steel
7	203A05 203A05 LH/ 203A04 RH LH/ 203A04 RH	Door opening panel reinforcement — DP 780 steel
8	40477 40477 LH/ 40476 RH LH/ 40476 RH	Cab corner inner panel — DP 600 steel
9	28137 28137 LH/ 208136 RH LH/ 208136 RH	Body lock pillar — HSLA 350 steel
10	10143 10143 LH/ 10142 RH LH/ 10142 RH	Rocker panel reinforcement — HSLA 350 steel

Exploded View — SuperCrew Cab

NOTE: Left side shown, right side similar.

NOTE: Refer to the steel repairability matrix chart in the Specifications portion of this section for specific information regarding steel descriptions.

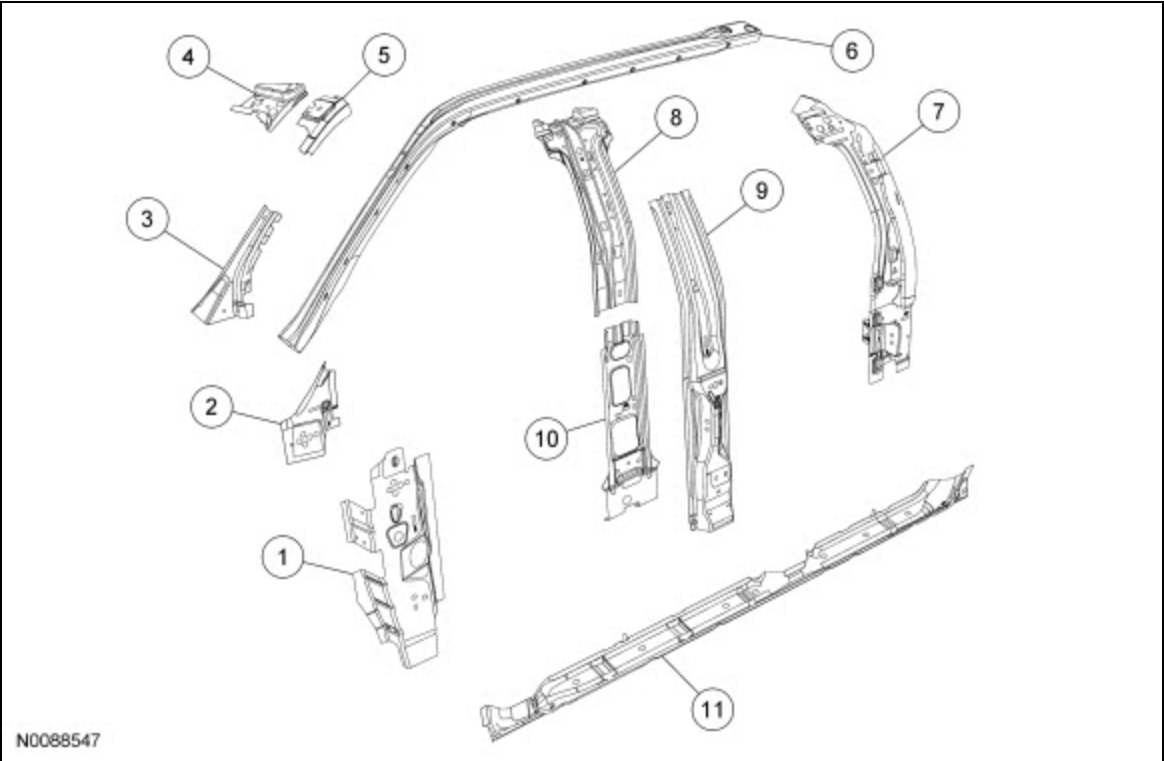


Item	Part Number	Description
1	02527 02527 LH/ 02526 RH LH/ 02526 RH	Front body pillar reinforcement — High-Strength Low Alloy (HSLA) 350 steel
2	02525 02525 LH/ 02524 RH LH/ 02524 RH	A-pillar reinforcement — Dual Phase Steel (DP) 780 steel

3	02533 02533 LH/ 02532 RH LH/ 02532 RH	A-pillar lower reinforcement — HSLA 350 steel
4	30B03 30B03 LH/ 30B02 RH LH/ 30B02 RH	Windshield header lower reinforcement — DP 780 steel
5	30A63 30A63 LH/ 30A62 RH LH/ 30A62 RH	Windshield header upper bracket — mild steel
6	203A05 203A05 LH/ 203A04 RH LH/ 203A04 RH	Door opening panel reinforcement — DP 780 steel
7	40477 40477 LH/ 40476 RH LH/ 40476 RH	Cab corner inner panel — DP 600 steel
8	204A13 204A13 LH/ 204A12 RH LH/ 204A12 RH	Center body pillar inner reinforcement — DP 600 steel
9	24509 24509 LH/ 24508 RH LH/ 24508 RH	Center body pillar assembly — Boron steel
10	24327 24327 LH/ 24326 RH LH/ 24326 RH	Center body pillar inner lower — HSLA 350 steel
11	10143 10143 LH/ 10142 RH LH/ 10142 RH	Rocker panel reinforcement — HSLA 350 steel

Exploded View — Back Panel


NOTE: Back panel is common for all cab styles.

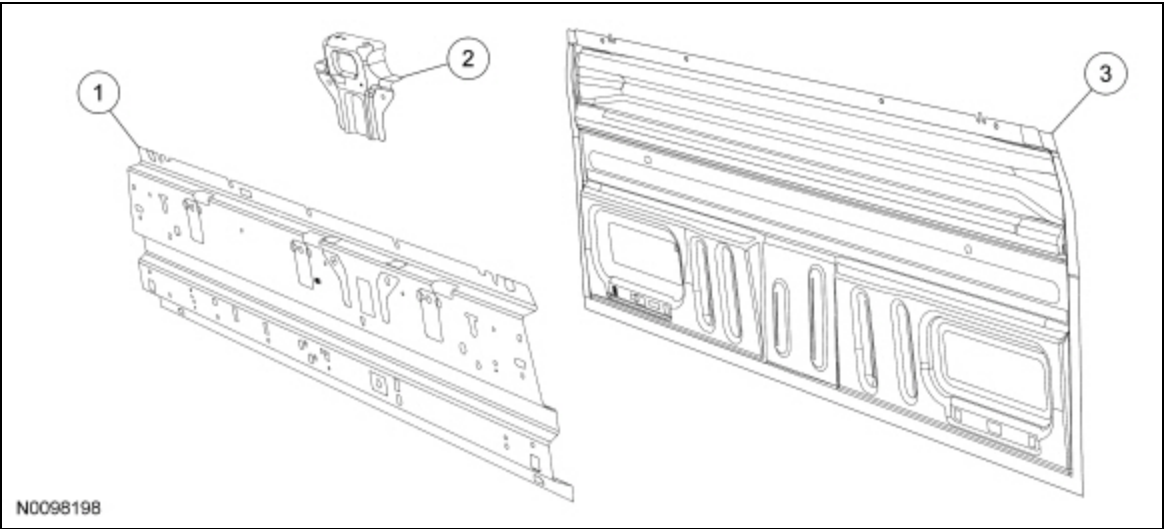

Item	Part Number	Description
1	403E32 403E32	Back panel reinforcement — High-Strength Low Alloy (HSLA) 350 steel
2	—	Reinforcement (part of 403E32) — HSLA 350 steel
3	40300 40300	Back panel — High-Strength Steel (HSS)

Exploded View — Front Structure

NOTE: Refer to the steel repairability matrix chart in the Specifications portion of this section for specific information regarding steel descriptions.

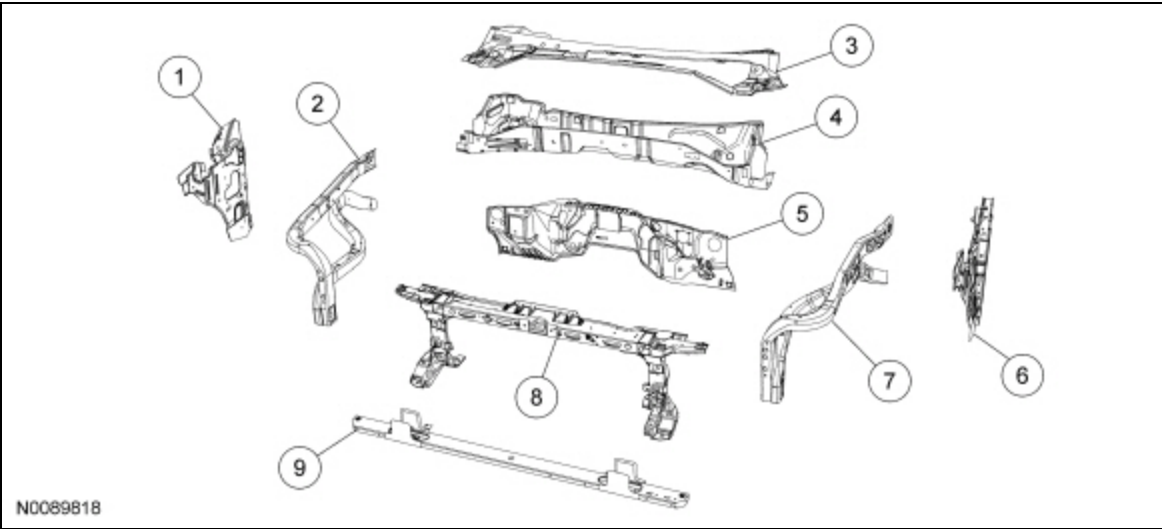


Item	Part Number	Description
1	0203802038	Cowl side panel — High-Strength Low Alloy (HSLA) 350 steel
2	16C27416C274	Inner fender reinforcement — HSLA 350 steel
3	0201502015	Cowl panel upper — HSLA 350 steel
4	0203002030	Cowl top inner panel — mild steel
5	0161001610	Dash panel — laminated steel
6	0203902039	Cowl side panel — HSLA 350 steel
7	16C27516C275	Inner fender reinforcement — HSLA 350 steel
8	16138A16138A	Radiator support — magnesium alloy
9	16138B16138B	Lower radiator support — HSLA 350 steel

Underbody — Regular Cab

NOTE: Underbody reinforcements and crossmembers are serviced as an assembly, excluding the floor side member reinforcements.

NOTE: Refer to the steel repairability matrix chart in the Specifications portion of this section for specific information regarding steel descriptions.

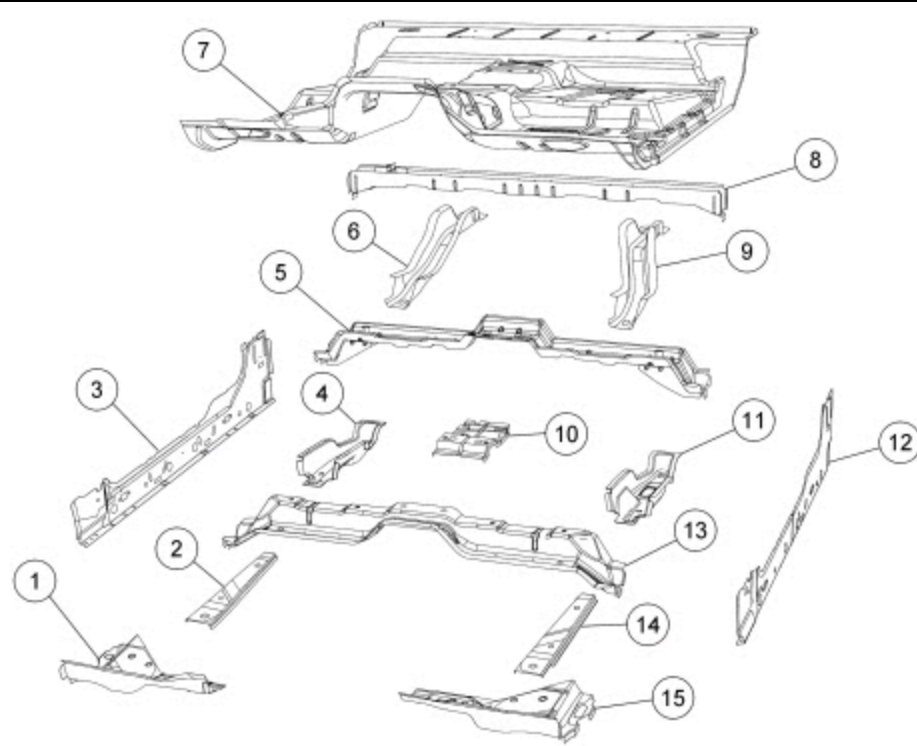


N0095847

Item	Part Number	Description
1	10414 10414	Reinforcement — High-Strength Low Alloy (HSLA) 350 steel
2	15000K62 15000K62	Reinforcement — HSLA 350 steel
3	10116 10116	Floor side member — HSLA 550 steel
4	10370 10370	Reinforcement — HSLA 350 steel
5	10624 10624	Crossmember — HSLA 350 steel
6	10118 10118	Front side member reinforcement — HSLA 350 steel
7	11140 11140	Floor pan assembly — mild steel
8	624C06 624C06	Reinforcement — HSLA 350 steel
9	10119 10119	Front side member reinforcement — HSLA 350 steel
10	101C94 101C94	Reinforcement — HSLA 350 steel
11	10370 10370	Reinforcement — HSLA 350 steel
12	10117 10117	Floor side member — HSLA 550 steel
13	10684 10684	Crossmember — HSLA 350 steel
14	15000K62 15000K62	Reinforcement — HSLA 350 steel
15	10415 10415	Reinforcement — HSLA 350 steel

Underbody — SuperCab

NOTE: Underbody reinforcements and crossmembers are serviced as an assembly, excluding the floor side member reinforcements.

NOTE: Refer to the steel repairability matrix chart in the Specifications portion of this section for specific information regarding steel descriptions.

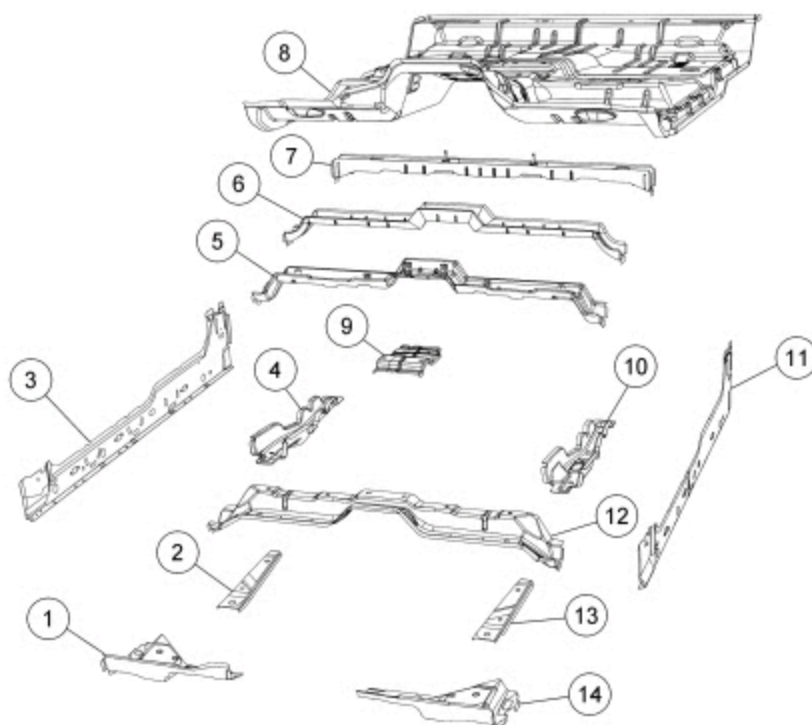


N0093518

Item	Part Number	Description
1	10414 10414	Front crossmember — High-Strength Low Alloy (HSLA) 350 steel
2	15000K62 15000K62	Reinforcement — HSLA 350 steel
3	10116 10116	Floor side member — HSLA 550 steel
4	10370 10370	Floor side inner reinforcement — HSLA 350 steel
5	10624 10624	Front floor center crossmember — HSLA 350 steel
6	102A24 102A24	Rear floor center crossmember — HSLA 350 steel
7	109A68 109A68	Crossmember — HSLA 350 steel
8	11135 11135	Floor pan assembly — mild steel
9	101C94 101C94	Floor pan bracket — HSLA 350 steel
10	10371 10371	Floor side inner reinforcement — HSLA 350 steel
11	10117 10117	Floor side member — HSLA 550 steel
12	10684 10684	Front floor crossmember — HSLA 350 steel
13	15000K62 15000K62	Reinforcement — HSLA 350 steel
14	10415 10415	Front crossmember — HSLA 350 steel

Underbody — SuperCrew Cab

NOTE: Underbody reinforcements and crossmembers are serviced as an assembly, excluding the floor side member reinforcements.

NOTE: Refer to the steel repairability matrix chart in the Specifications portion of this section for specific information regarding steel descriptions.

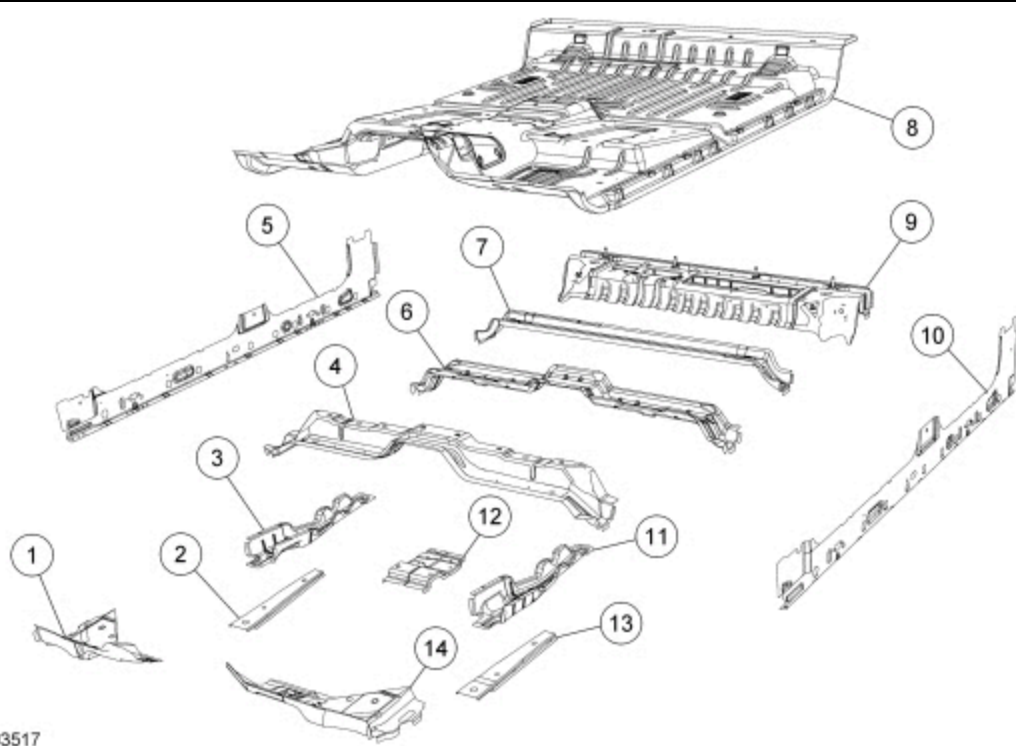

N0093517

Item	Part Number	Description
1	10414 10414	Front crossmember — High-Strength Low Alloy (HSLA) 350 steel
2	15000K61 15000K61	Reinforcement — HSLA 350 steel
3	10370 10370	Floor side inner reinforcement — HSLA 350 steel
4	10684 10684	Front floor crossmember — HSLA 350 steel
5	10116 10116	Floor side member — HSLA 350 steel
6	10624 10624	Front floor center crossmember — HSLA 350 steel
7	102A24 102A24	Rear floor center crossmember — HSLA 350 steel
8	11140 11140	Floor pan assembly — mild steel
9	108A36 108A36	Rear floor crossmember and reinforcement assembly — HSLA 350 steel
10	10117 10117	Floor side member — HSLA 550
11	10371 10371	Reinforcement — HSLA 350 steel
12	101C94 101C94	Floor pan bracket — HSLA 350 steel
13	15000K62 15000K62	Reinforcement — HSLA 350 steel
14	10415 10415	Front crossmember — HSLA 350 steel

WARNING: Collision damage repair must conform to the instructions contained in this workshop manual. Replacement components must be new, genuine Ford Motor Company parts. Recycled, salvaged, aftermarket or reconditioned parts (including body parts, wheels or safety restraint components) are not authorized by Ford.

Departure from the instructions provided in this manual, including alternate repair methods or the use of substitute components, risks compromising crash safety. Failure to follow these instructions may adversely affect structural integrity and crash safety performance, which could result in serious personal injury to vehicle occupants in a crash.

WARNING: Invisible ultraviolet and infrared rays emitted in welding can injure unprotected eyes and skin. Always use protection such as a welder's helmet with dark-colored filter lenses of the correct density. Electric welding will produce intense radiation, therefore, filter plate lenses of the deepest shade providing adequate visibility are

recommended. It is strongly recommended that persons working in the weld area wear flash safety goggles. Also wear protective clothing. Failure to follow these instructions may result in serious personal injury.

WARNING: Do not cut or grind body side components within 50 mm (1.96 in) of restraint anchoring points. Welding within 50 mm (1.96 in) of restraint anchoring points may result in incorrect operation of restraint devices. For additional restraints anchoring location information, refer to Section 501-20A and Section 501-20B. Failure to follow these instructions may result in serious injury to vehicle occupant(s).

WARNING: Do not carry out body side sectioning repairs in areas of laser welds. Factory laser welds cannot be duplicated with conventional welding equipment and structural integrity may be compromised. Failure to follow this instruction may result in serious injury to vehicle occupant(s).

NOTE: *Whenever it is necessary to carry out weld-bonding procedures, refer to Weld-Bonding in this section.*

NOTE: *Factory spot welds may be substituted with either Squeeze-Type Resistance Spot Welding (STRW) or Metal Inert Gas (MIG) plug welds. Spot/plug welds should equal factory welds in both location and quantity. Do not place a new spot weld directly over an original weld location. Plug weld hole should equal 8 mm (0.31 in) diameter.*

1. **NOTICE:** Electronic modules and related wiring may be damaged when exposed to heat from welding procedures. Carefully disconnect and remove, or position away from heat affected areas. For additional information, refer to Welding Precautions — Steel in this section.

Remove the outer body sheet metal from the affected area prior to carrying out any reinforcing panel replacement. For additional information, refer to Sectioning Guidelines in this section.

2. When welding overlapping surfaces or substrates, apply a weld-through primer between the surfaces prior to welding. When the surfaces have been welded, apply corrosion protection material to the surfaces or substrates. For additional information, refer to Restoring Corrosion Protection Following Repair in this section.
3. Where possible, create a backer piece using a portion of the old panel. This will create a stronger joint.
4. Appropriate seam sealer needs to be applied to exposed joints and seams in addition to corrosion protection, particularly horizontal surfaces where moisture collects and migrates. Exposed seams and joints can corrode or rust prematurely if seam sealer is not applied correctly. Clean surfaces with metal surface prep or equivalent prior to applying seam sealer. For additional information, refer to Sealers in this section.
5. Proceed with refinish procedures following Ford-approved paint guidelines.