


Transmission Support Crossmember

 [Ford Ecat Electronic Parts Catalog](#)

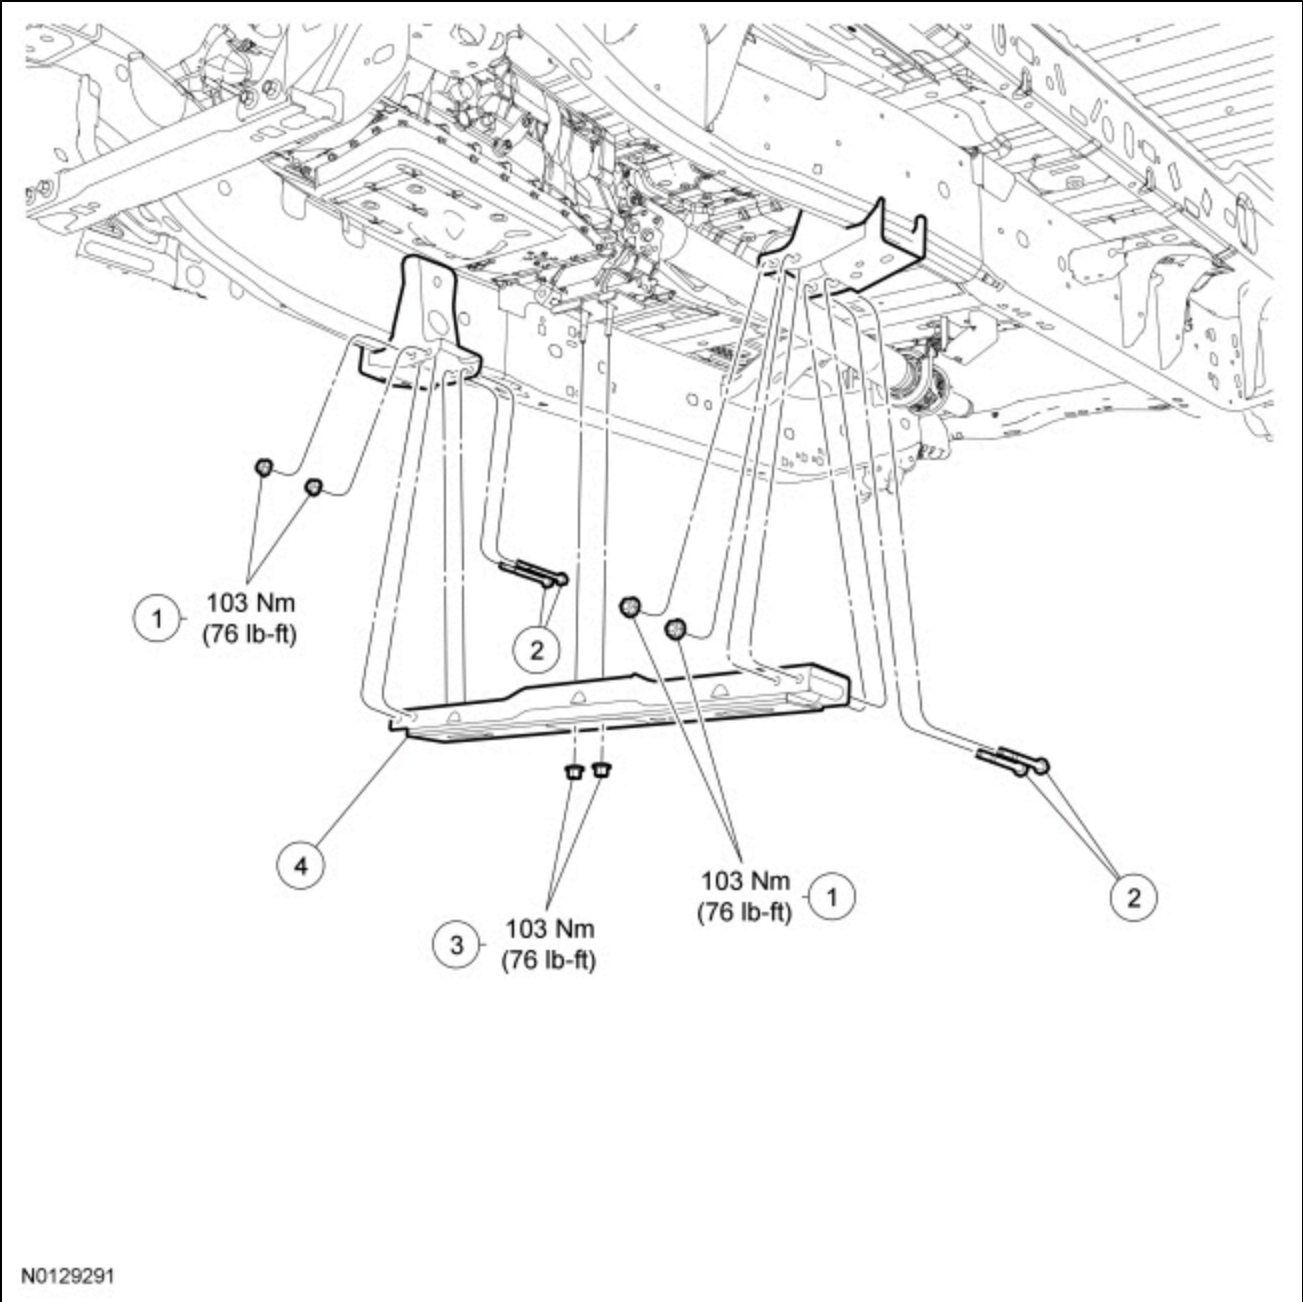

Item	Part Number	Description
1	W520114 W520114	Transmission support crossmember nuts (4 required)
2	W714418 W714418	Transmission support crossmember bolts (4 required)
3	W520114 W520114	Transmission mount nuts (2 required)
4	7H474 7H474	Transmission support crossmember

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.

2. Remove the 2 heat shield screws.
3. Support the transmission with a suitable jack.
4. Remove the 2 transmission support nuts.
5. Remove the 4 transmission support crossmember nuts.
6. Remove the 4 transmission support crossmember support bolts.
7. Remove the transmission support crossmember.

Installation

1. Position the transmission support crossmember and install the transmission support crossmember support nuts and bolts.
 - Tighten the nuts to 103 Nm (76 lb-ft).
2. Remove the transmission jack.
3. Install the 2 transmission support nuts.
 - Tighten to 103 Nm (76 lb-ft).
4. Install the 2 heat shield screws.
 - Tighten to 20 Nm (177 lb-in).