


Cylinder Head — RH


 [Ford Ecat Electronic Parts Catalog](#)

Material

Item	Specification
Motorcraft® SAE 5W-20 Premium Synthetic Blend Motor Oil (US); Motorcraft® SAE 5W-20 Super Premium Motor Oil (Canada) XO-5W20-QSP (US); CXO-5W20-LSP12 (Canada)	WSS-M2C945-A

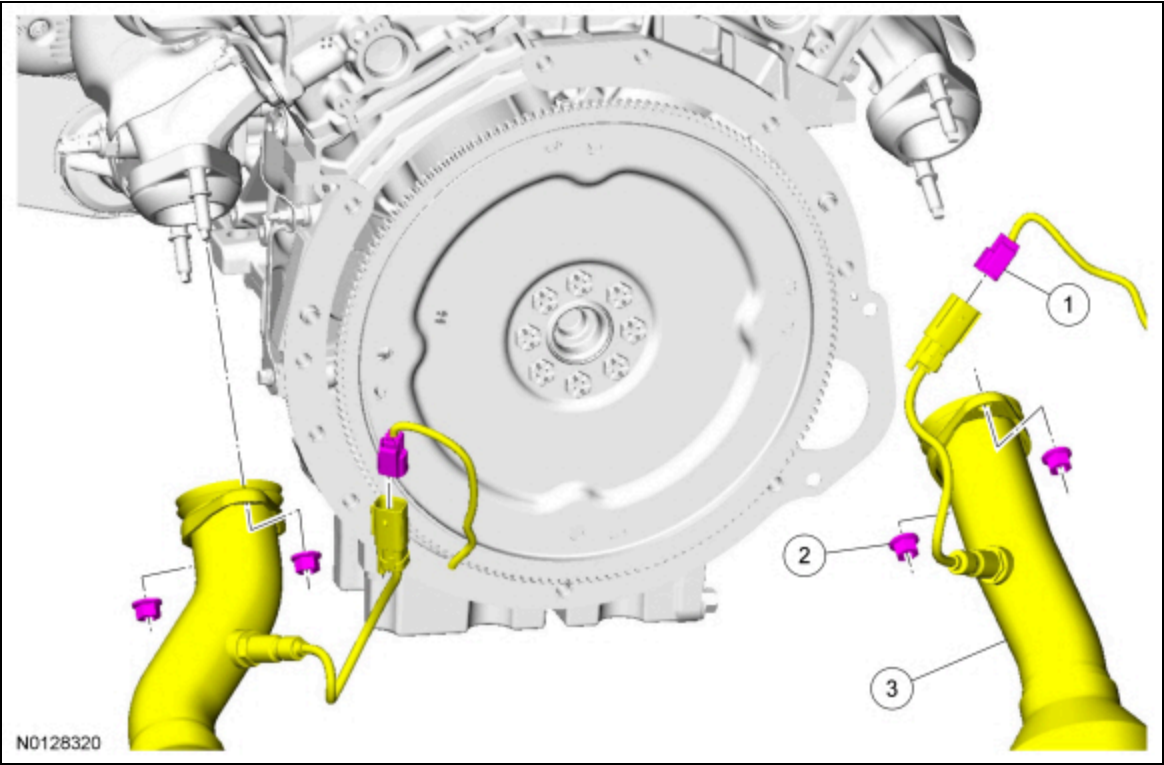

Item	Part Number	Description
1	—	Heated Oxygen Sensor (HO2S) electrical connector (part of 14A411) (2 required)
2	W714265 W714265	Catalytic converter-to-exhaust manifold nuts (4 required) - 45 Nm (35 lb-ft)
3	5F250 5F250	Catalytic converter assembly (Y-pipe)

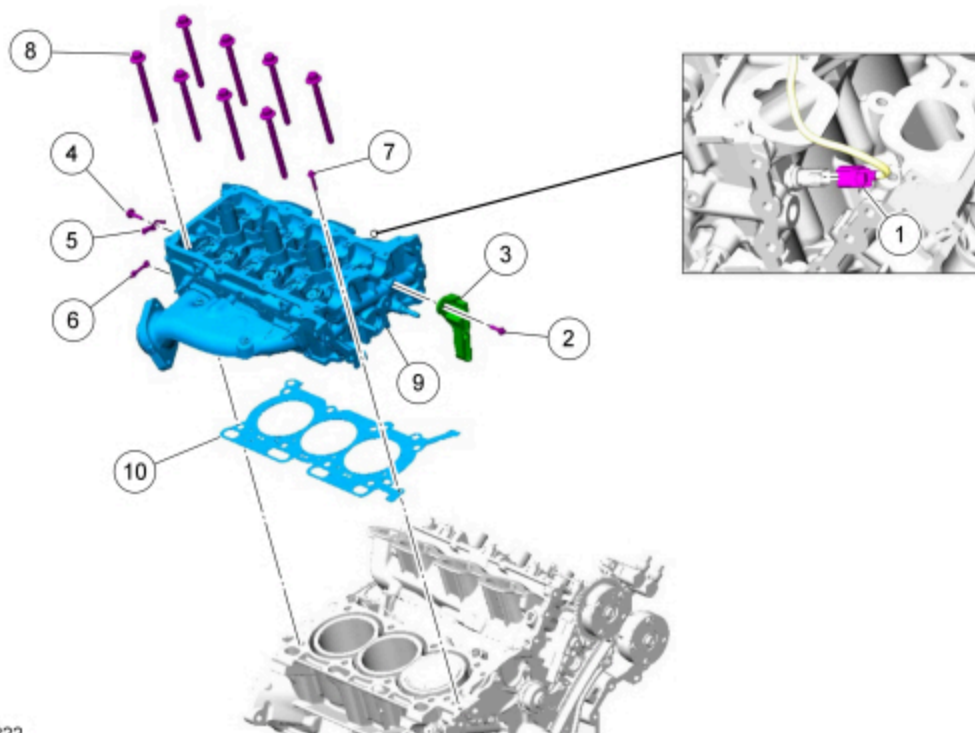

N0128322

Item	Part Number	Description
1	—	Cylinder Head Temperature (CHT) sensor electrical connector (part of 14A411)
2	W715118 W715118	RH primary timing chain guide bolt - 10 Nm (89 lb-in)
3	6K2976 K297	RH upper primary timing chain guide
4	W705661 W705661	Ground wire bolt - 10 Nm (89 lb-in)
5	19A095 19A095	Ground wire
6	—	Wiring harness retainer (part of 15525)
7	W710702 W710702	Cylinder head M6 bolt
8	6065 6065	Cylinder head bolt (8 required)
9	6049 6049	Cylinder head
10	6051 6051	Cylinder head gasket

Removal

WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Before working on or disconnecting any of the fuel tubes or fuel system components, relieve the fuel system pressure to prevent accidental spraying of fuel. Fuel in the fuel system remains under high pressure, even when the engine is not running. Failure to follow this instruction may result in serious personal injury.

WARNING: Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.


WARNING: Always disconnect the battery ground cable at the battery when working on an evaporative emission (EVAP) system or fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Clean all fuel residue from the engine compartment. If not removed, fuel residue may ignite when the engine is returned to operation. Failure to follow this instruction may result in serious personal injury.

NOTICE: During engine repair procedures, cleanliness is extremely important. Any foreign material, including any material created while cleaning gasket surfaces that enters the oil passages, coolant passages or the oil pan, may cause engine failure.

NOTE: If the cylinder head is replaced, a new secondary timing chain tensioner will need to be installed.


1. Release the fuel system pressure. For additional information, refer to Section 310-00.
2. Disconnect the battery ground cable. For additional information, refer to Section 414-01.
3. Detach and disconnect the RH and LH Heated Oxygen Sensor (HO2S) electrical connectors.
4. Remove the 2 exhaust Y-pipe dual catalytic converter-to-exhaust intermediate pipe bolts and separate.
 - Discard the 2 bolts.

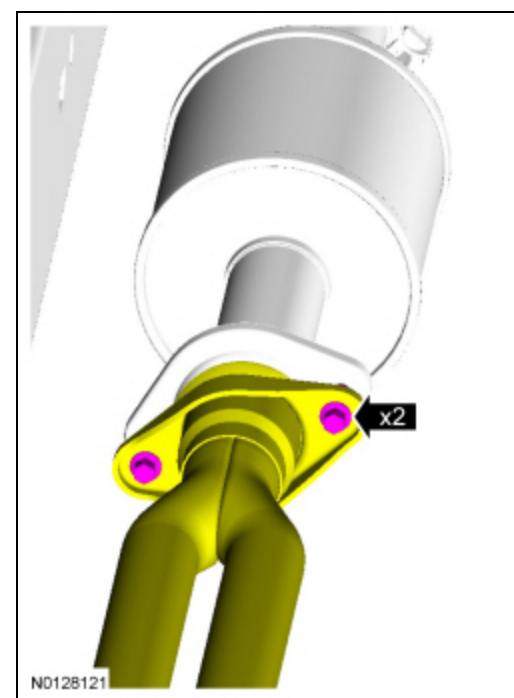


5. Remove and discard the LH and RH catalytic converter-to-exhaust manifold nuts and lower the catalytic converter assembly.
6. Remove the RH camshafts. For additional information, refer to Camshaft — RH in this section.
7. Remove the lower intake manifold. For additional information, refer to Lower Intake Manifold in this section.
8. Disconnect the Cylinder Head Temperature (CHT) sensor electrical connector.
9. **NOTICE:** Do not use power tools to remove the bolt or damage to the RH primary timing chain guide may occur.

Remove the bolt and the RH upper primary timing chain guide.

10. Disconnect the 2 RH Camshaft Position (CMP) sensors electrical connectors.

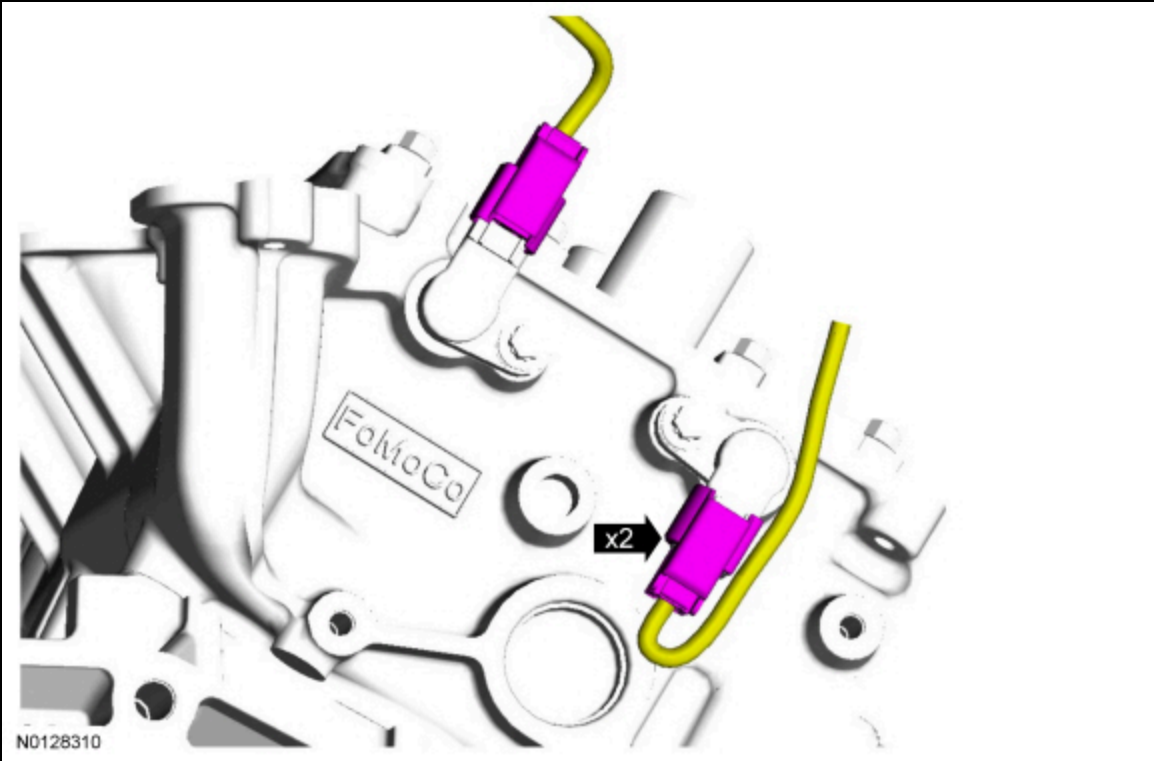


11. Remove the 2 bolts and the 2 RH CMP sensors.

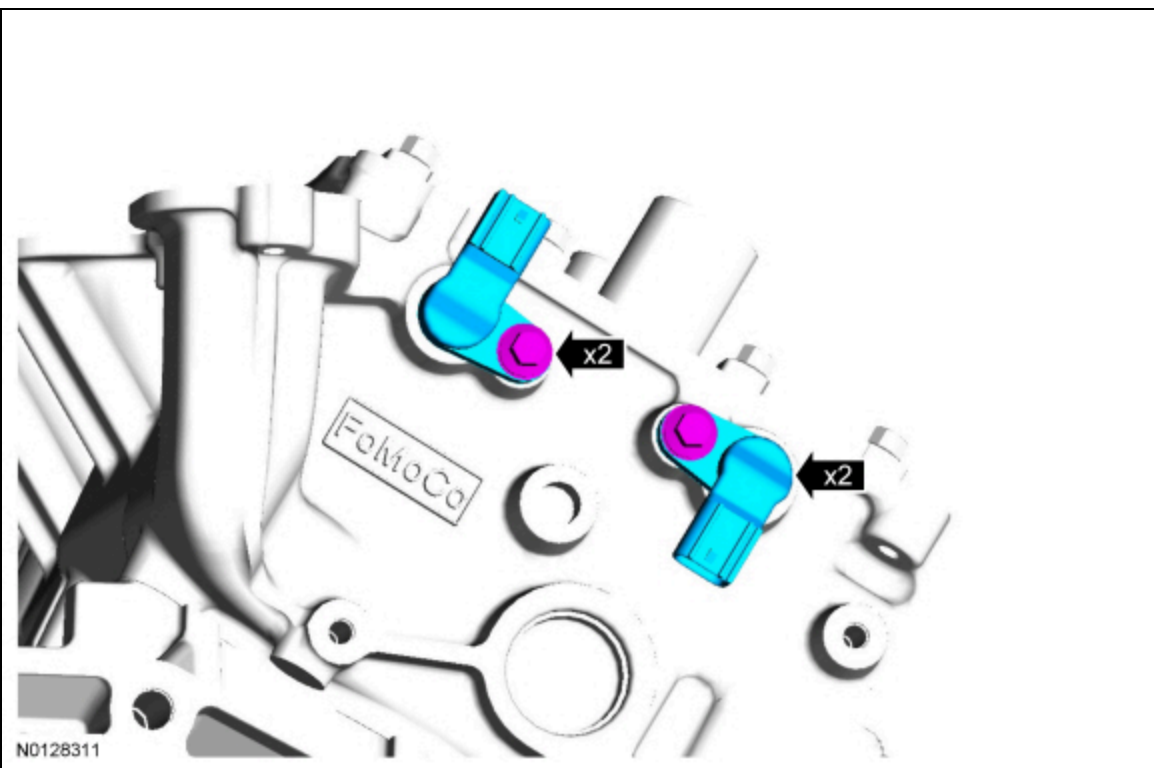

12. Remove the bolt and ground wire from the rear of the RH cylinder head.

13. Inspect the valve tappets. For additional information, refer to Section 303-00.

14. Remove and discard the M6 bolt.

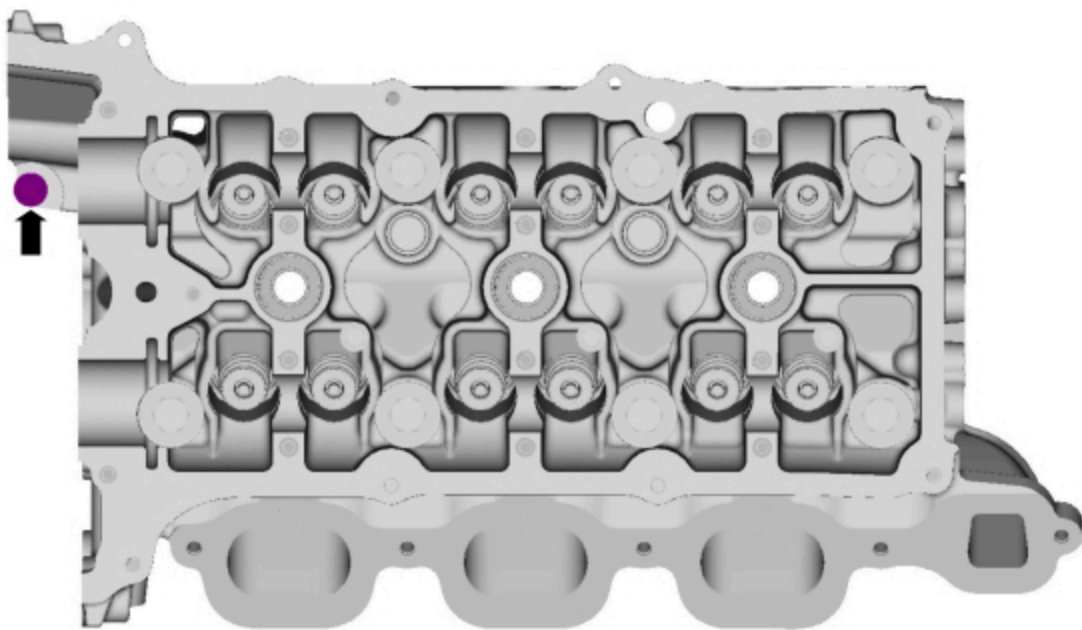

N0127030


15. **NOTICE:** Place clean, lint-free shop towels over exposed engine cavities. Carefully remove the towels so foreign material is not dropped into the engine. Any foreign material (including any material created while cleaning gasket surfaces) that enters the oil passages or the oil pan, may cause engine failure

NOTICE: Aluminum surfaces are soft and may be scratched easily. Never place the cylinder head gasket surface, unprotected, on a bench surface.

NOTE: The cylinder head bolts must be discarded and new bolts must be installed. They are a tighten-to-yield design and cannot be reused.

Remove and discard the 8 bolts from the cylinder head.

- Remove the cylinder head.
- Discard the cylinder head gasket.

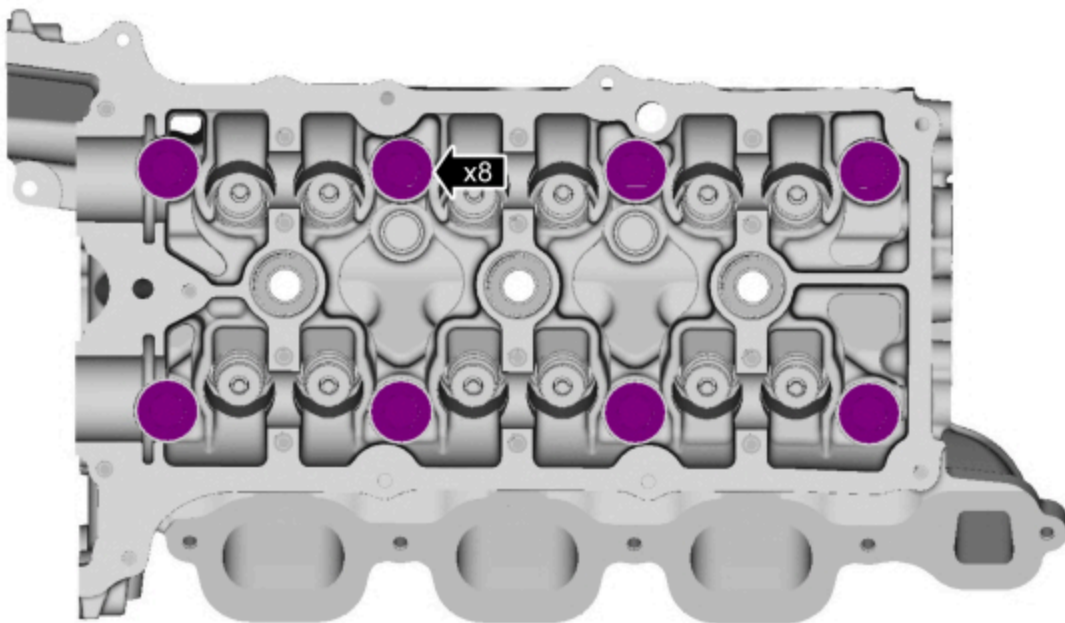

N0127031

16. **NOTICE:** Do not use metal scrapers, wire brushes, power abrasive discs or other abrasive means to clean the sealing surfaces. These tools cause scratches and gouges that make leak paths. Use a plastic scraping tool to remove all traces of the head gasket.

NOTE: Observe all warnings or cautions and follow all application directions contained on the packaging of the silicone gasket remover and the metal surface prep.

NOTE: If there is no residual gasket material present, metal surface prep can be used to clean and prepare the surfaces.

Clean the cylinder head-to-cylinder block mating surfaces of both the cylinder heads and the cylinder block in the following sequence.

1. Remove any large deposits of silicone or gasket material with a plastic scraper.
2. Apply silicone gasket remover, following package directions, and allow to set for several minutes.
3. Remove the silicone gasket remover with a plastic scraper. A second application of silicone gasket remover may be required if residual traces of silicone or gasket material remain.
4. Apply metal surface prep, following package directions, to remove any remaining traces of oil or coolant and to prepare the surfaces to bond with the new gasket. Do not attempt to make the metal shiny. Some staining of the metal surfaces is normal.


17. Support the cylinder head on a bench with the head gasket side up. Check the cylinder head distortion and the cylinder block distortion. For additional information, refer to Section 303-00.

Installation

1. **NOTE:** If the cylinder head is replaced, a new secondary timing chain tensioner will need to be installed.


Install a new gasket, the RH cylinder head and 8 new bolts. Tighten in the sequence shown in 5 stages:

- Stage 1: Tighten to 20 Nm (177 lb-in).
- Stage 2: Tighten to 35 Nm (26 lb-ft).
- Stage 3: Tighten 90 degrees.
- Stage 4: Tighten 90 degrees
- Stage 5: Tighten 45 degrees.

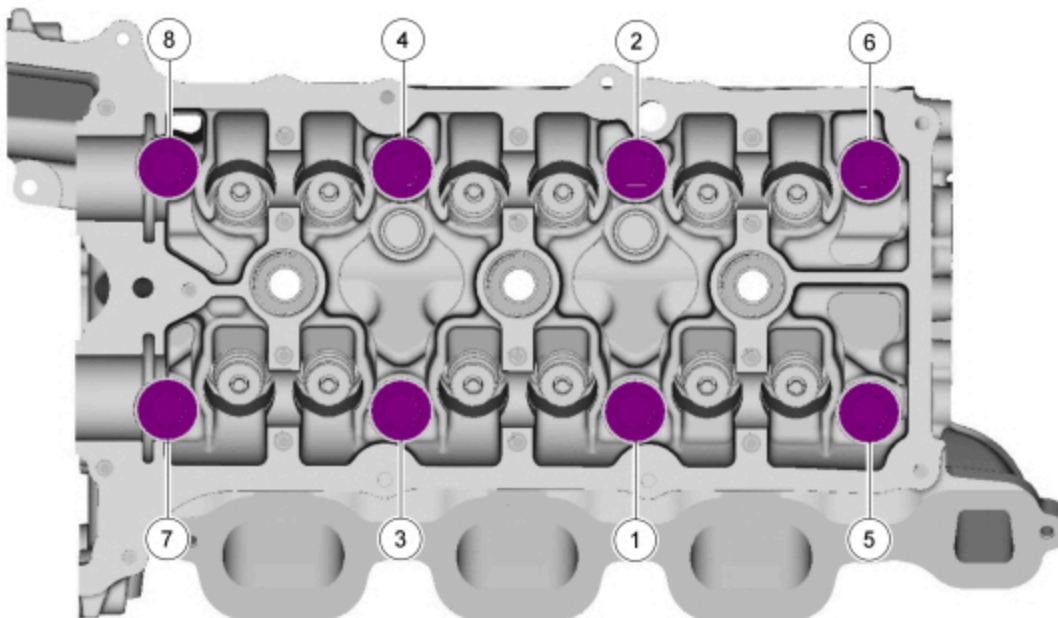

N0127032

2. Install the M6 bolt.
- Tighten to 10 Nm (89 lb-in).

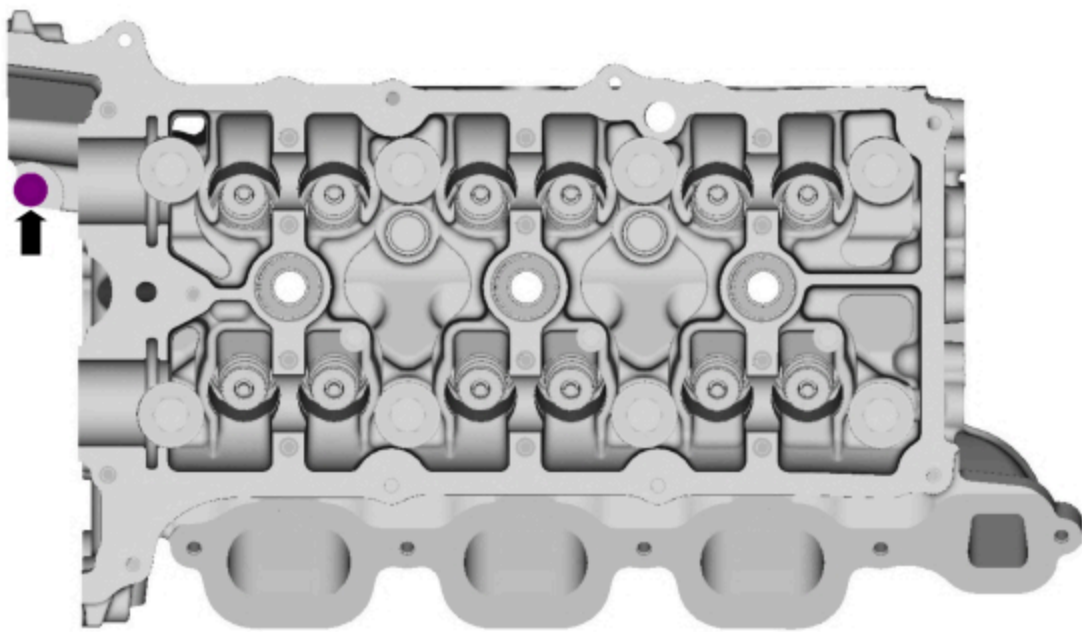


N0127030

3. **NOTE:** *The valve tappets must be installed in their original positions.*

NOTE: *Coat the valve tappets with clean engine oil prior to installation.*

Install the RH valve tappets.

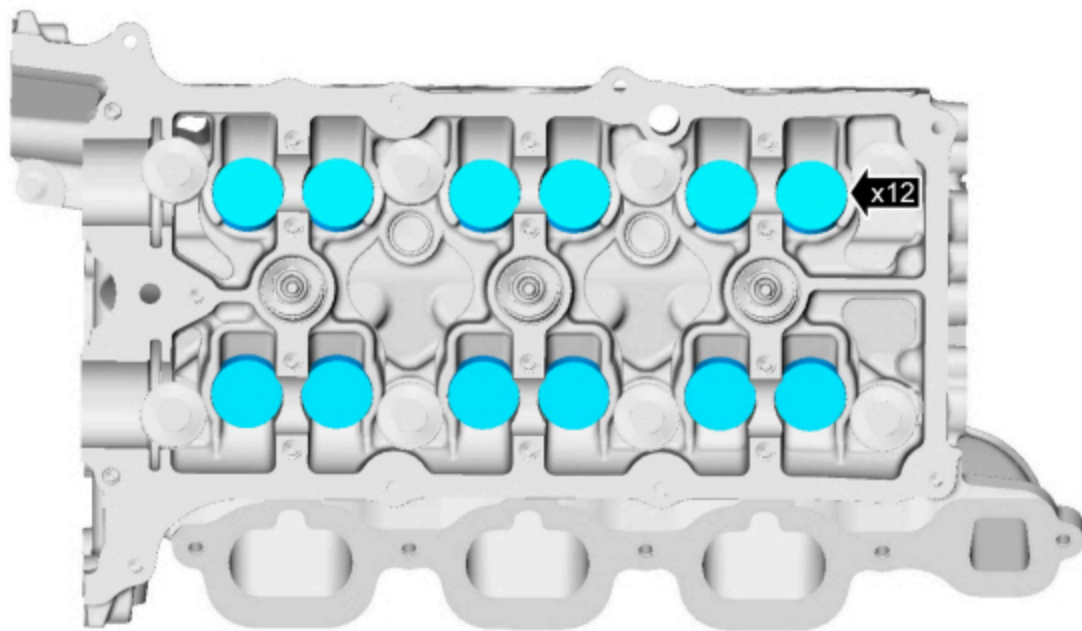

N0128319


4. Install the ground wire and bolt to the rear of the RH cylinder head.

- Tighten to 10 Nm (89 lb-in).


5. **NOTE:** *Lubricate the 2 CMP sensor O-ring seals with clean engine oil.*

Install the 2 RH CMP sensors and the 2 bolts.

- Tighten to 10 Nm (89 lb-in).

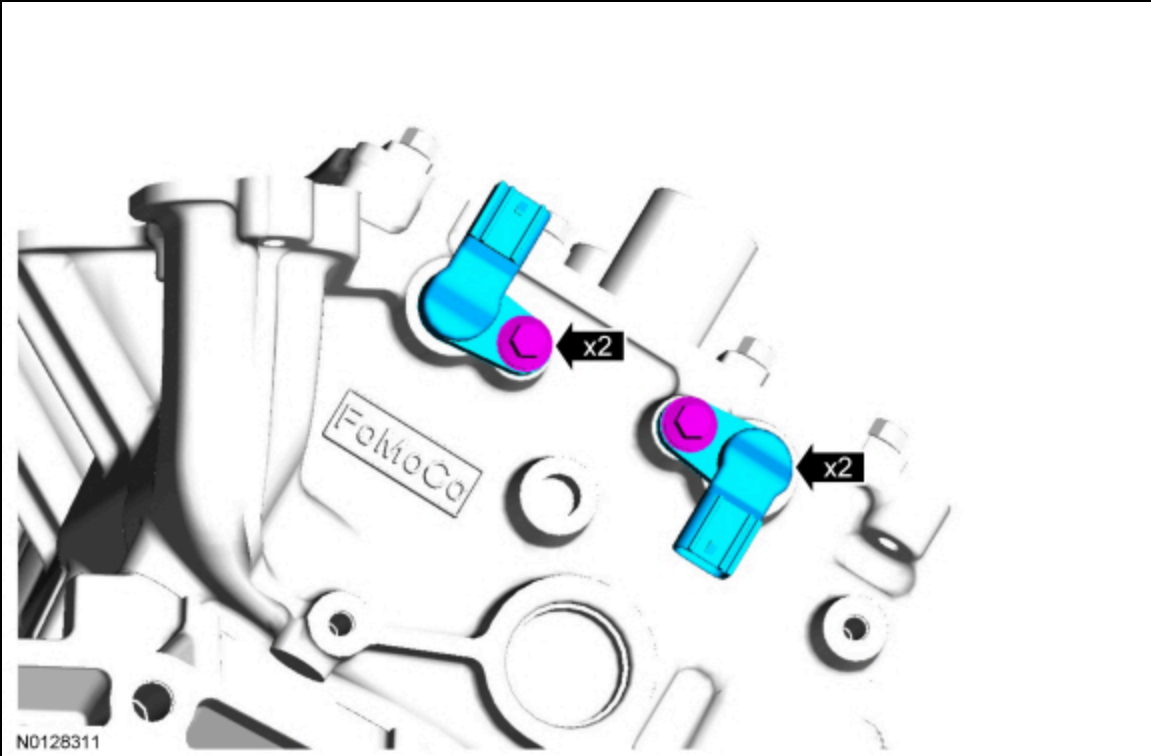

6. Connect the 2 RH CMP sensors electrical connectors.

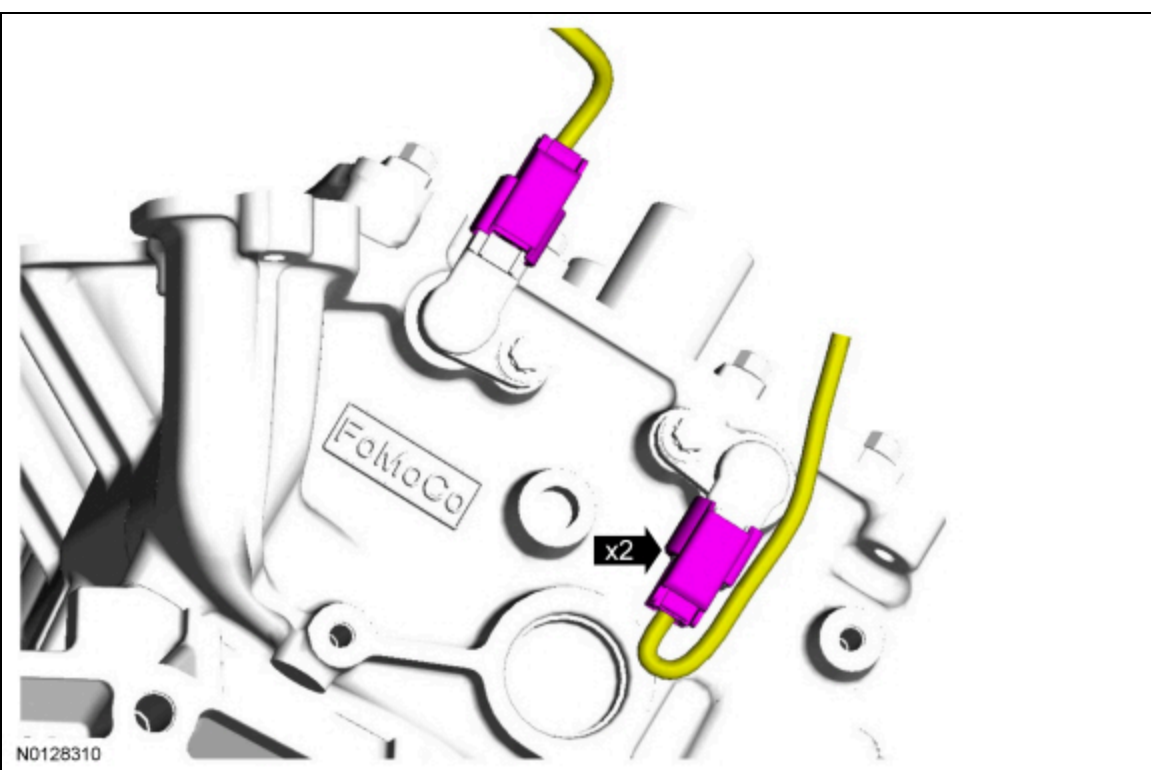

7. Install the RH upper primary timing chain guide and the bolt.

- Tighten to 10 Nm (89 lb-in).

8. Connect the CHT sensor electrical connector.

9. Install the lower intake manifold. For additional information, refer to Lower Intake Manifold in this section.


10. Install the RH camshafts. For additional information, refer to Camshaft — RH in this section.

11. Raise the catalytic converter and install the new LH and RH catalytic converter-to-exhaust manifold nuts.

- Tighten to 45 Nm (35 lb-ft).

12. Position the exhaust Y-pipe dual catalytic converter-to-exhaust intermediate pipe and install the 2 new bolts.

- Tighten the inner exhaust Y-pipe dual catalytic converter-to-exhaust intermediate pipe bolt to 63 Nm (46 lb-ft).
- Tighten the outer exhaust Y-pipe dual catalytic converter-to-exhaust intermediate pipe bolt to 63 Nm (46 lb-ft).

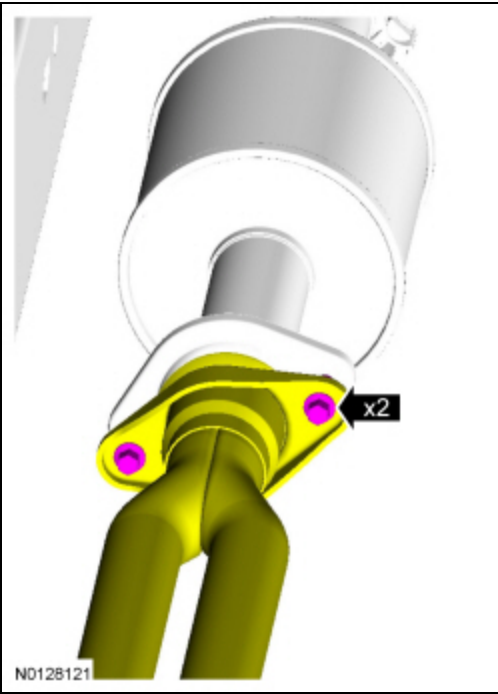

13. Connect and attach the RH and LH HQ2S electrical connectors.

14. Connect the battery ground cable. For additional information, refer to Section 414-01.