


Exhaust Manifold — LH


 [Ford Ecat Electronic Parts Catalog](#)

Material

Item	Specification
Motorcraft® Metal Surface Prep ZC-31-B	—

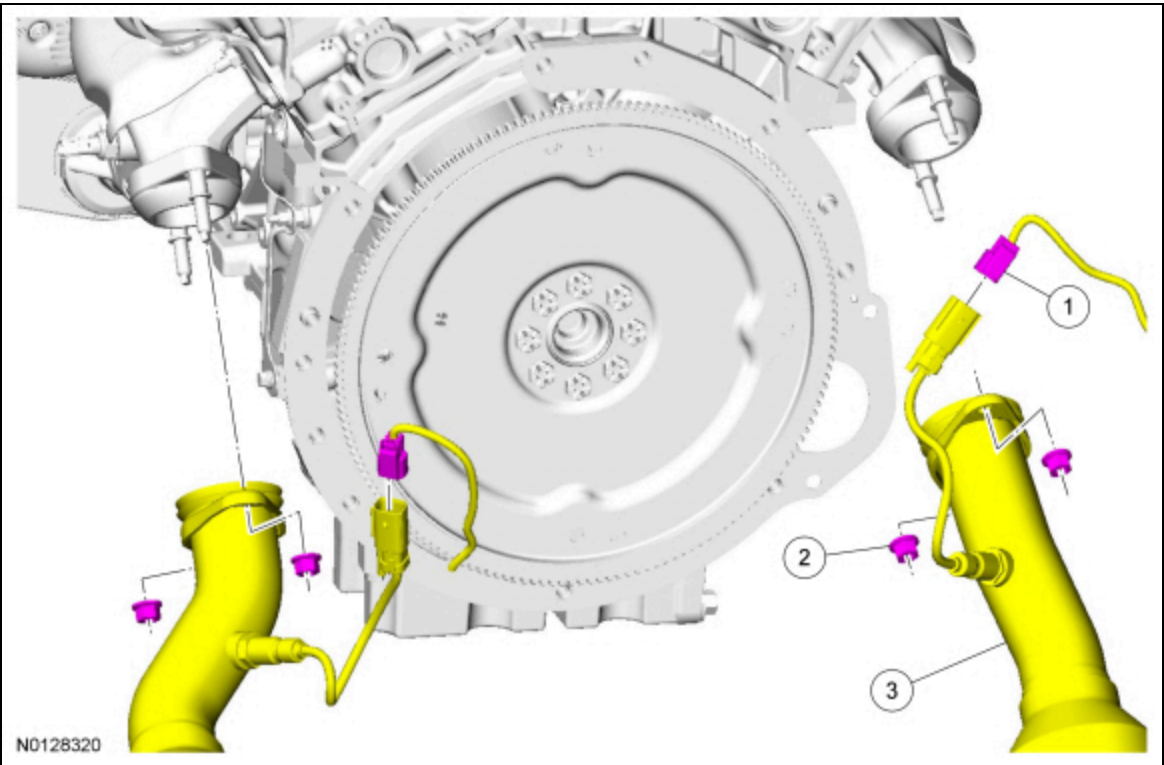


Item	Part Number	Description
1	—	Heated Oxygen Sensor (HO2S) electrical connector (part of 14A411) (2 required)
2	W714265 W714265	Catalytic converter-to-exhaust manifold nuts (4 required) - 45 Nm (35 lb-ft)
3	5F250 5F250	Catalytic converter assembly (Y-pipe)

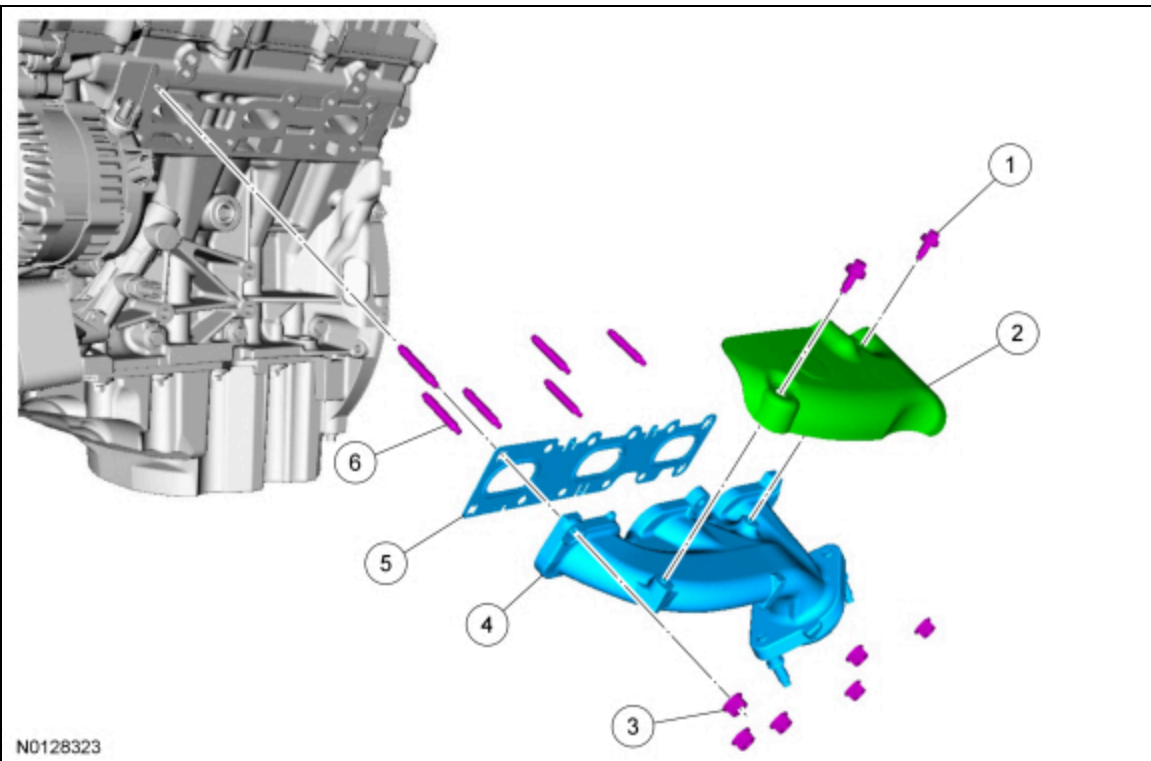

Item	Part Number	Description
1	W714133 W714133	LH exhaust manifold heat shield bolt (2 required) - 12 Nm (106 lb-in)
2	9Y4279 Y427	LH exhaust manifold heat shield
3	W701706 W701706	LH exhaust manifold nut (6 required)
4	9431 9431	LH exhaust manifold
5	9448 9448	LH exhaust manifold gasket
6	W712244 W712244	LH exhaust manifold stud (6 required) - 12 Nm (106 lb-in)

Removal

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.
2. Detach and disconnect the RH and LH Heated Oxygen Sensor (HO2S) electrical connectors.
3. Remove the 2 exhaust Y-pipe dual catalytic converter-to-exhaust intermediate pipe bolts and separate.
 - Discard the 2 bolts.

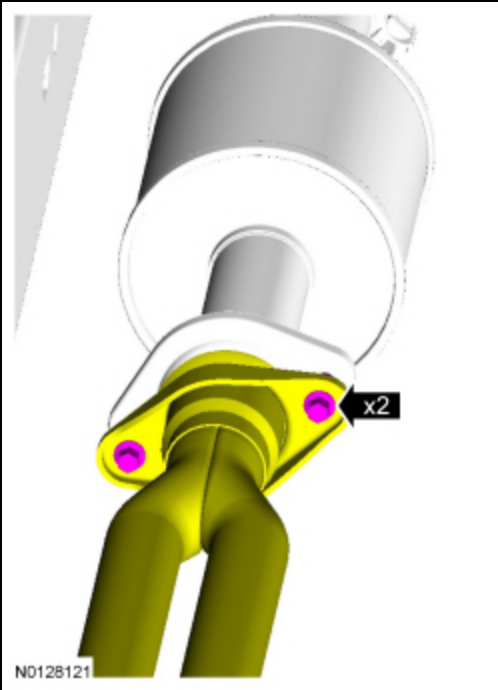

4. Remove and discard the LH and RH catalytic converter-to-exhaust manifold nuts and lower the catalytic converter assembly.
5. Remove the LH front wheel and tire. For additional information, refer to Section 204-04.
6. Remove the 2 bolts and the LH exhaust manifold heat shield.
7. Remove the 6 nuts and the LH exhaust manifold.
 - Discard the nuts and gasket.
8. Clean and inspect the LH exhaust manifold. For additional information, refer to Section 303-00.
9. Remove and discard the 6 LH exhaust manifold studs.
10. **NOTICE: Do not use metal scrapers, wire brushes, power abrasive discs or other abrasive means to clean the sealing surfaces. These may cause scratches and gouges resulting in leak paths. Use a plastic scraper to clean the sealing surfaces.**


Clean the exhaust manifold mating surface of the cylinder head with metal surface prep. Follow the directions on the packaging.

Installation


1. Install 6 new LH exhaust manifold studs.
 - Tighten to 12 Nm (106 lb-in).
2. **NOTICE: Failure to tighten the exhaust manifold nuts to specification a second time will cause the exhaust manifold to develop an exhaust leak.**

Using a new gasket, install the LH exhaust manifold and 6 new nuts. Tighten in 2 stages in the sequence shown:

- Stage 1: Tighten to 19 Nm (168 lb-in).
- Stage 2: Tighten to 25 Nm (18 lb-ft).

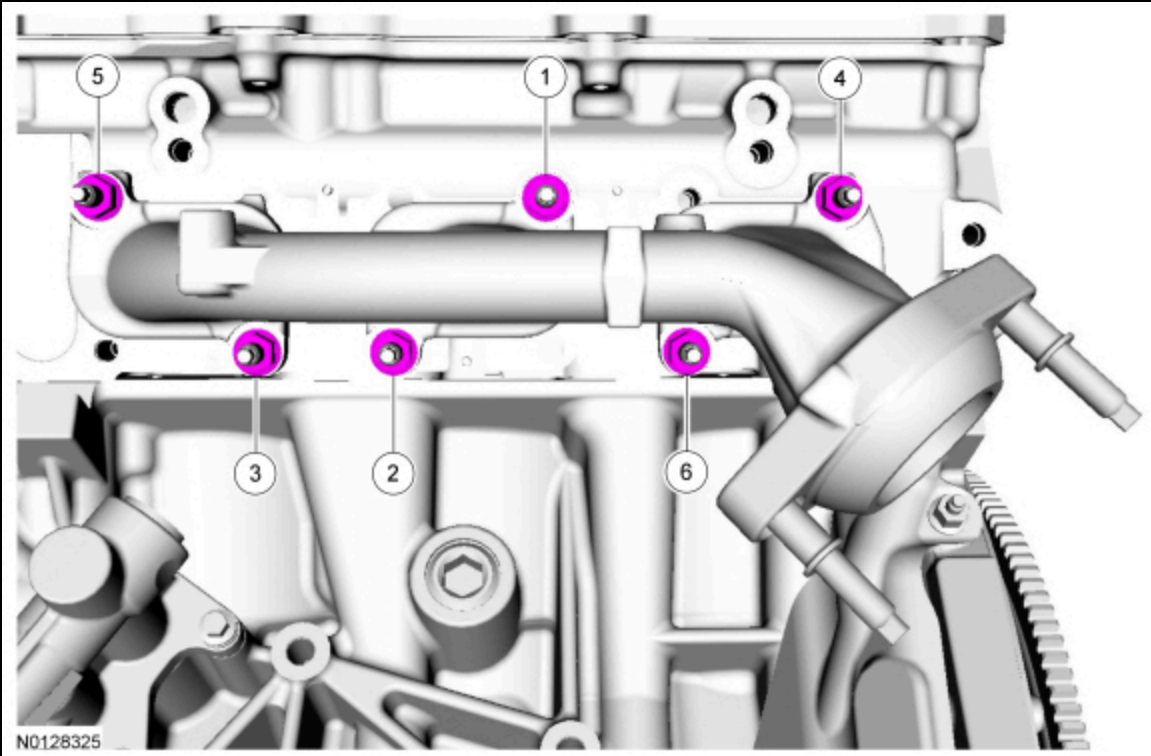

3. Install the LH exhaust manifold heat shield and the 2 bolts.
 - Tighten to 12 Nm (106 lb-in).
4. Install the LH front wheel and tire. For additional information, refer to Section 204-04.
5. Raise the catalytic converter and install the new LH and RH catalytic converter-to-exhaust manifold nuts.
 - Tighten to 45 Nm (35 lb-ft).
6. Position the exhaust Y-pipe dual catalytic converter-to-exhaust intermediate pipe and install the 2 new bolts.
 - Tighten the inner exhaust Y-pipe dual catalytic converter-to-exhaust intermediate pipe bolt to 63 Nm (46 lb-ft).
 - Tighten the outer exhaust Y-pipe dual catalytic converter-to-exhaust intermediate pipe bolt to 63 Nm (46 lb-ft).

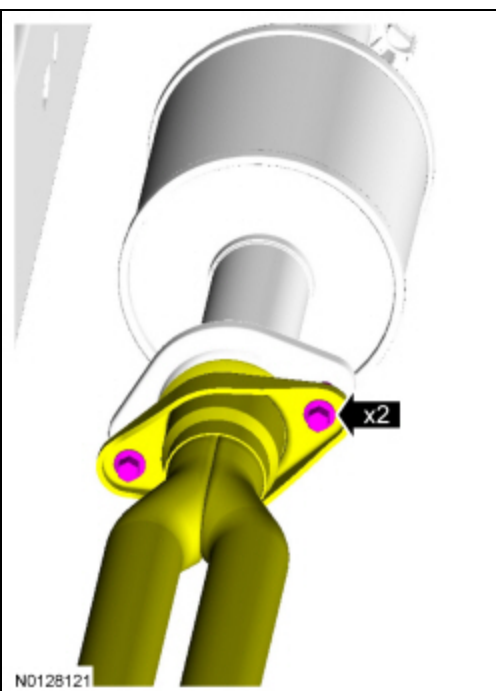

7. Connect and attach the RH and LH ~~HQ2S~~ ~~HQ2S~~ electrical connectors.